




TREND NETWORKS

SignalTEK



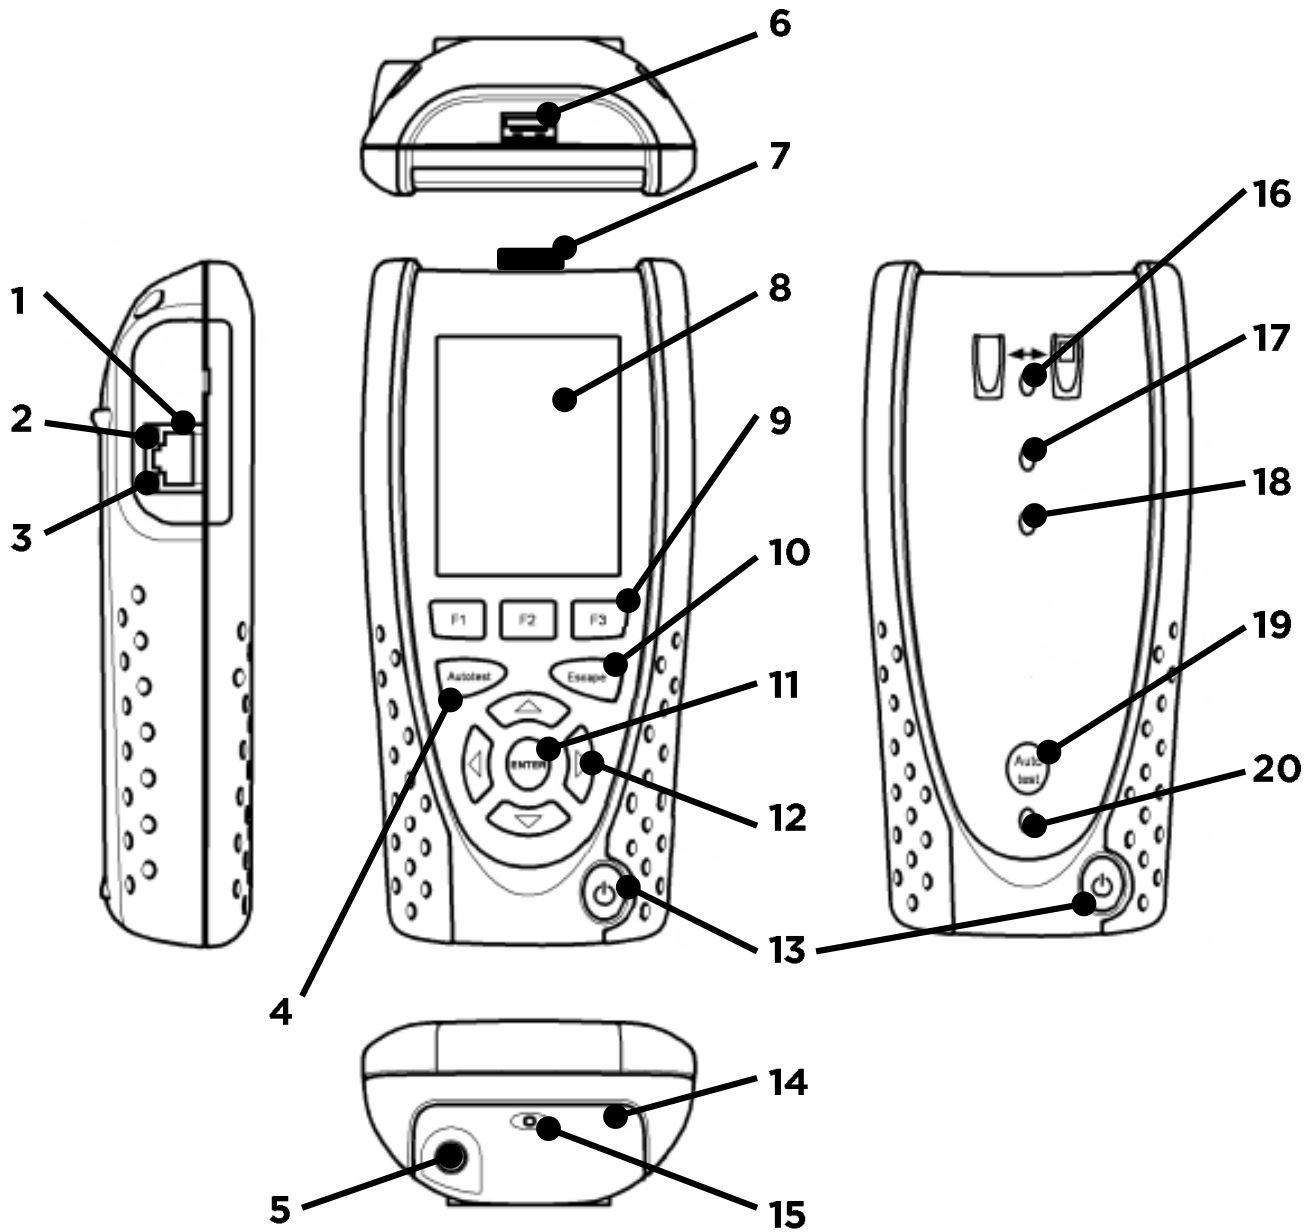

1	Cable socket	11	ENTER button
2	Ethernet LED	12	Cursor buttons
3	Activity LED	13	Power button
4	Autotest button	14	Battery module
5	DC in connector	15	Charging indicator LED
6	USB socket	16	Link LED
7	Wi-Fi adapter	17	Pass/Fail LED
8	Touchscreen display	18	Saved LED
9	Function buttons	19	Remote autotest button
10	Escape button	20	Battery status LED

Charging Indicator LED (15)	Status
Green	Charging
Off	Charging complete
Flashing	Not charging

Pass/Fail LED (17)	Status
Green	Test passed
Red	Test failed


Battery Status LED (20)	Status
Green (Power ON)	Battery level is sufficient for use
Red (Power ON)	Battery level is low but still operational
Off	Power OFF

Four Ways to Navigate


A



B

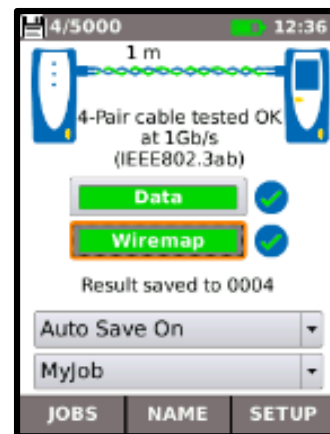


C

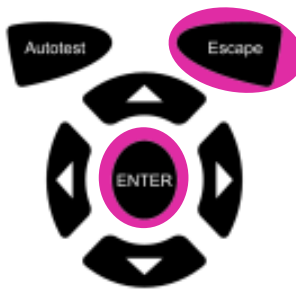

Escape – returns to previous screen
ENTER – accepts selection

D

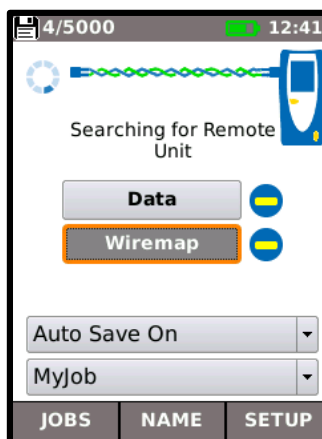

Job Setup

4/5000 12:41

Searching for Remote Unit

Data ☐

Wiremap ☒

Auto Save On

MyJob

JOB NAME SETUP

Jobs 13:01

	Job	Tests	Pass %
1	MyJob	4	100

EDIT **OPTION** TO USB



New Job 13:00

Job NewJob

Info 1 Site

Info 2 Building

Info 3 Floor

Info 4 Room

Info 5 Cabinet

Info 6 **Shelf**

Info 7

Info 8

APPLY



4/5000 13:40

Searching for Remote Unit

Data ☐

Wiremap ☒

Auto Save On

NewJob

JOB NAME SETUP

Test Setup

4/5000 14:01

Searching for Remote Unit

Data

Wiremap

Auto Save On

Newjob

JOBS **NAME** **SETUP**



Cat 3
Cat 5e
Cat 6
Cat 6A
Cat 7 and 7A
Cat 8
USOC8 1 pair
USOC8 2 pair
USOC8 3 pair
USOC8 4 pair
ETH 1236
ETH 1278
PROFINET 4W
COAX RGxx
ISDN BRI
DB
Custom

UTP
STP
UTP/STP

NONE
568A
568B
USOC
TERA

Custom 01:22

Cable Type **Custom**

Shield Type UTP/STP

Display Preference 568B

Cable Name Cable1

	1	☐
	2	☐
	3	☐
	4	☐
	5	☐
	6	☐
	7	☐
	8	☐
	9	☐

MORE

Custom 01:33

Use Custom NVP ☒



Custom NVP (%) 69

Split Pair ☒





Xover Allowed ☒

MORE **APPLY**

Cable Testing

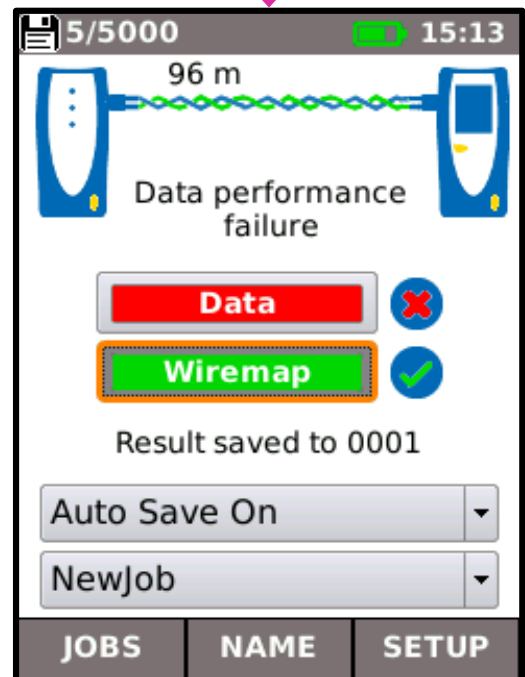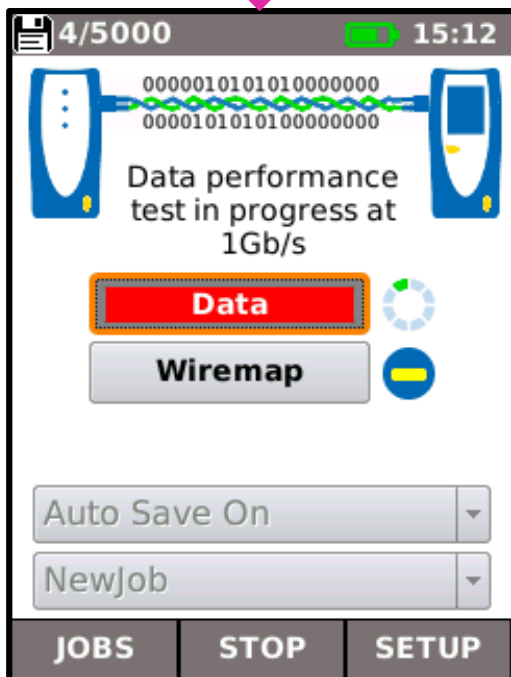


Viewing Test Results

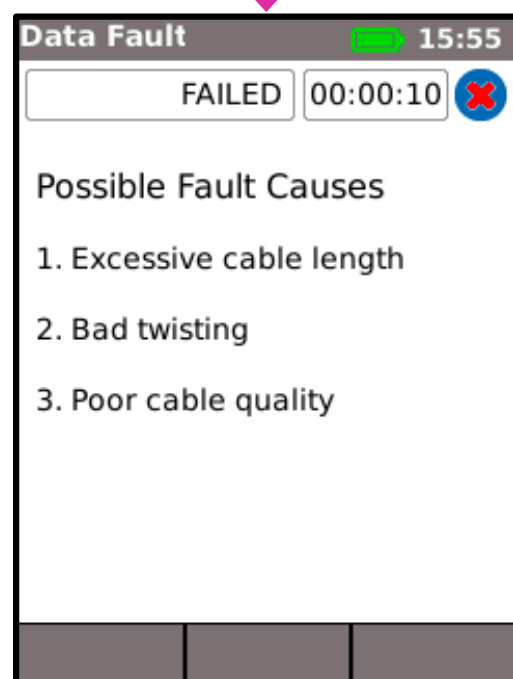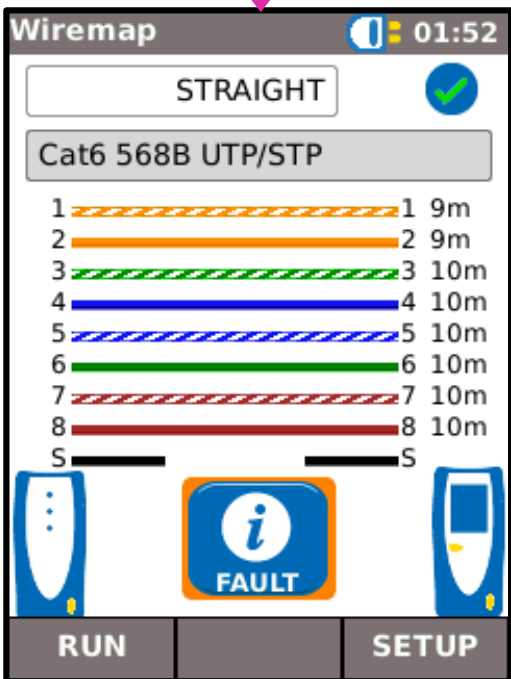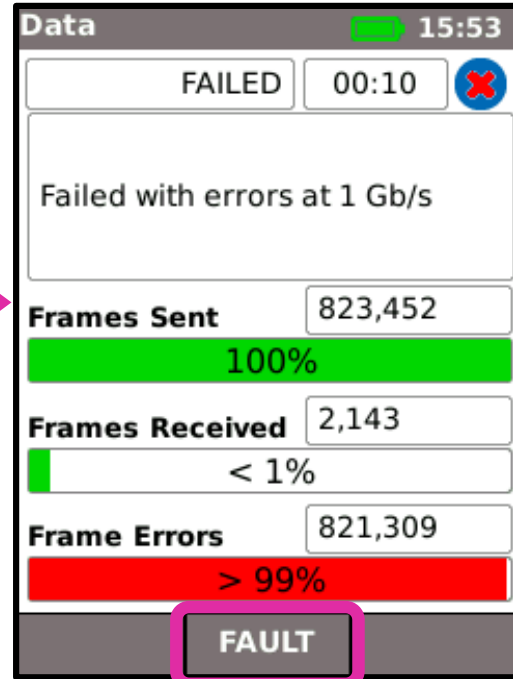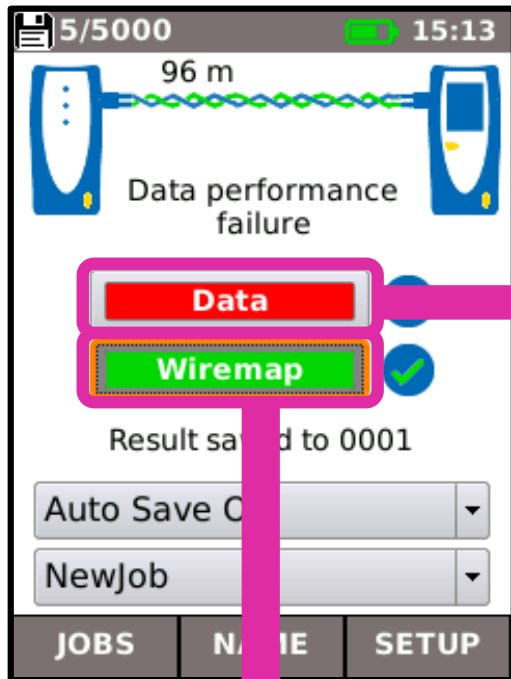

Test Reports

5 tests are saved /
memory capacity
is 5000 tests

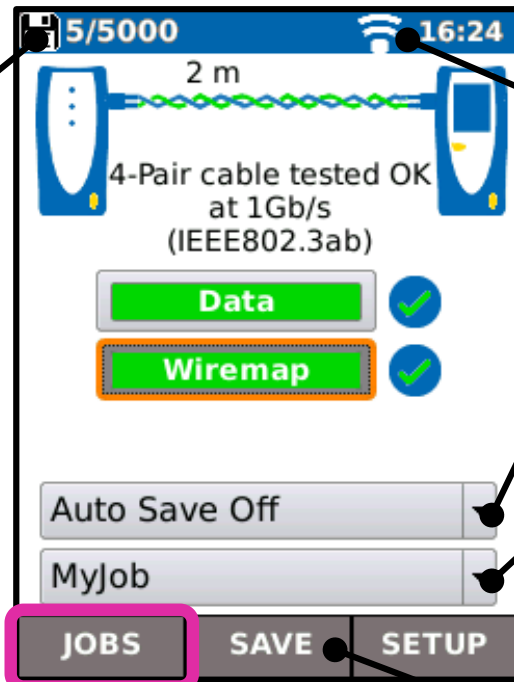


Indicates Wi-Fi
is enabled

Select result
saving mode

Select current
Job

Save the result
manually when
Auto Save is Off

View
result

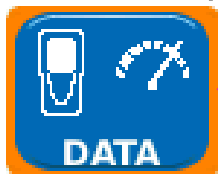


Select job

Select result

OR Save
report to
USB

TO USB

OR Smartphone
downloads reports using
TREND AnyWARE
app. for Android™ /
Apple

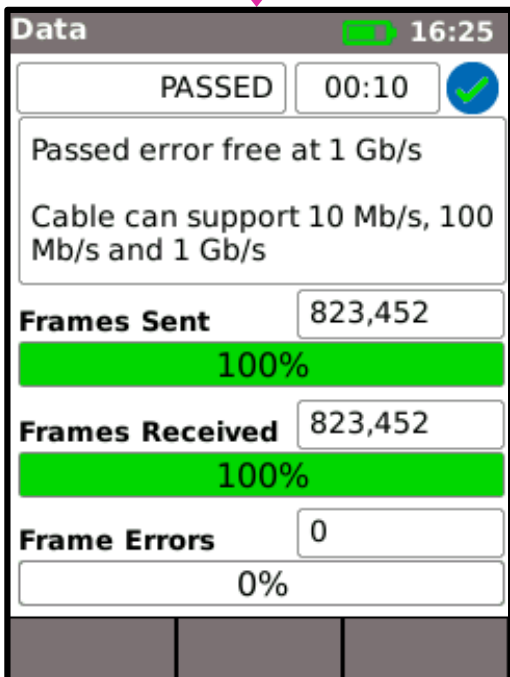

Menu Map

