

Cat. #3330

PELICAN™

PM6 3330 LED

INSTRUCTION MANUAL



EN

INTRODUCTION

This compact flashlight produces an ultra bright light beam by using a 1W LED powered by (2) two 3 volt CR-123A lithium batteries. The PM6 3330 flashlight is designed for easy use with one hand operation and has a dual-switch mode for constant-on and momentary-on. The PM6 3330 flashlight body is made from Xenoy® the most durable construction. The PM6 flashlight is water resistant.

TO INSERT BATTERIES

1. Remove the lens cap by turning counter-clockwise.
2. Install (2) two CR-123A lithium batteries with + terminal facing to the head assembly.
3. Replace the lens cap onto the flashlight by turning clockwise until sealed.

OPERATION

1. CONSTANT-ON -- Press the tail button to turn ON.
2. LIGHT-OFF -- Press the tail button to turn OFF.
3. MOMENTARY -- Gently depress the tail button for momentary operation.

TO CHANGE BATTERIES

1. Remove the lens cap by turning counter-clockwise until it comes the PM6 flashlight.
2. Remove the (2) two used batteries from the PM6 3330 flashlight.
3. Install the (2) two new CR123A or DL-123A with + terminal facing to the head assembly.
4. Replace the lens cap by turning clockwise until sealed.

GENERAL CARE AND MAINTENANCE

1. Clean o-rings with a soft clean cloth to insure that sealing area is free of dirt that could destroy the o-ring seal.
2. Apply a light coat of clear silicone grease on the o-ring occasionally if turning action becomes too difficult.

WARNING

Lithium batteries can explode or cause burns if shorted, disassembled, recharged or exposed to fire or high temperatures. Please handle with care.

CAUTION

To prevent the PM6 3330 flashlight coming on accidentally when the flashlight is stored, remove the batteries. If the PM6 3330 flashlight is turned on while it is in a container, the flashlight can overheat and damage the flashlight or the material of the surrounding area.

SPECIFICATIONS

BULB: LED

BATTERY: (2) Two 3 volt CR-123A, DL-123A or other equivalent lithium batteries

O-RING MAINTENANCE

Check closely for cuts, scratches, or otherwise damaged o-ring or mating lens lip surface. Remove any dirt or foreign matter from o-ring sealing surfaces. Keep threads, o-ring groove and inside lip of lens lubricated with silicone grease. See Warranty information for replacement of o-ring.

Battery Safety Information

WARNING: HANDLE AND STORE BATTERIES PROPERLY TO AVOID INJURY OR DAMAGE. BATTERIES CAN BE DANGEROUS!

Most battery issues arise from improper handling of batteries, and particularly from the use of damaged or counterfeit batteries. Please review the information below to avoid serious injury and/or damage to your property.

Lithium Batteries

Lithium batteries can explode, leak or cause burns if not handled properly. Please observe the following as a guide:

1. Use only Panasonic™, Energizer™, Duracell™, or Sanyo™ batteries.
2. Do not mix new with old or with other battery types/brands.
3. Replace all batteries at the same time.
4. Do not open batteries.
5. Do not dispose of in fire.
6. Do not heat above 75°C.
7. Do not expose batteries to water.
8. Do not recharge.
9. Insert batteries correctly with regard to polarity (+ and -) marked on the battery and equipment.