

Model KS-D1

owner's manual



DELMHORST[®]
INSTRUMENT CO.

WHEN ACCURACY IS THE POINT.™

TABLE OF CONTENTS

2	Introduction
3	Figure 1
4	Figure 1A, Figure 2
5	Operating Procedure
5	Interpretation of the Meter Readings Meter Reading Guidelines
7	Figure 3
8	How To Use Irrigation Charts
9	Installation of the Blocks
10	Where To Place Blocks
11	Depth Of Installation
11	Care of Your Meter
12	Service of Your Meter
12	Warranty

INTRODUCTION

The Delmhorst soil moisture measuring system consists of two parts: the gypsum soil blocks (sensors) and the measuring instrument, Model KS-D1 moisture tester. The blocks (GB-1) are made of gypsum cast around two concentric electrodes. The gypsum acts as a buffer against the effect that salts or other chemicals might have on the electrical conductivity. The concentric electrodes confine the flow of current to the interior of the block, eliminating the effects of soil conductivity.

When a block is buried in the soil it absorbs moisture from the soil or releases moisture into the soil, until its moisture content approaches equilibrium with the moisture content of the soil. When the block is connected to the meter, current flows between the electrodes and the electrical resistance of the gypsum is measured. Such readings are an indication of the moisture available to the plants.

For irrigation purposes, the water of importance is that amount which can be extracted from the soil by the roots of the plants, and not the percent moisture content (which is related to the weight of the soil). We refer to this reservoir of moisture as "available moisture" and it is expressed within a given range of soil moisture tension.

Each soil has a different capacity to hold water, depending on its structure and texture. The maximum amount of water available to the plants (called Field Capacity) is the amount held by the soil against drainage by gravity. When virtually all available water has been used (that is when no further moisture can be extracted by the plant) soil moisture has reached the level known as the "Permanent Wilting Point." With soil moisture at this level, plants permanently wilt and die.

Gypsum block systems work best in finely textured soils such as fine sandy loams and clay loams. These soils hold a greater amount of water at field capacity than coarsely textured soils such as coarse sandy loams. Blocks are not recommended for use in sandy soils because the coarse texture of the sand does not interface well with the fine gypsum texture. As a guideline, blocks work best in soils with a water-holding capacity greater than 1.2in/ft.





OPERATING PROCEDURE

- ① To check the meter calibration:
Press the **CAL CHK** button. The meter should read 80.0 ± 1.0 .
Note: Instrument serial numbers from 0100-0584 require pressing both **READ** and **CAL CHK** buttons simultaneously.
- ② To "read" the blocks:
 - ▶ Push the tinned ends of the lead wires of the block into two springloaded binding posts on the meter.
 - ▶ Press the **READ** button and record the reading on the Soil Moisture Observation Chart.
 - ▶ NOTE: Only readings between 5.0 and 100.0 are valid. Readings outside of this range should be disregarded.

INTERPRETATION OF METER READINGS

- ▶ Meter readings are interpreted in terms of "Soil Moisture Tension," or "Blocks Resistance" by referring to figure 1 and 1A; in terms of "available soil moisture" by referring to figure 2.
- ▶ The data in the chart below provides guidelines of "Available Moisture" and "Irrigation Requirements" for three groups of soil in terms of their texture make-up.
- ▶ Since soils are not strictly divided into three groups only, but changes from "fine" to "coarse" soil are gradual, the information below should be used as a guideline. Consideration should be given to other factors such as:
 - Type of crop;
 - Stage of crop growth and root system;
 - Climactic conditions;
 - Structure of sub-soil.

METER READING GUIDELINES

Soil Type	No Irrigation Required	Irrigation to be Applied	Danger Zone Insufficient Soil Moisture
Fine	80-100	60-80	Below 60
Medium	88-100	70-88	Below 70
Coarse	90-100	80-90	Below 80

The above guidelines are determined by the fact that different soils have a different capacity to hold and release moisture to the plants.

Fine textured soils (clay type) store a larger amount of water, but they also hold a larger amount of residual water than do coarse textured soils (sandy type). Clay soils hold more available moisture than sandy soils. Loam and sandy loam-type soils fall in between.

For these reasons, irrigation in sandy loam is normally applied at higher meter readings than in clay loam soils, since available moisture can be used up more rapidly by the plants and dry climatic conditions in sandy loam.

There is an optimum range of moisture for optimum plant growth. Over-irrigation, which tends to prevent adequate root aeration and possibly lead to root rot, can be prevented with proper irrigation scheduling. This requires recording and observing soil moisture meter readings, recording of rainfall, knowledge of the soil and of the crops involved.

A grower with a good understanding of soil moisture meter readings and of all the other factors playing a role in plant growth will, in a short time, be able to establish his own guidelines for optimum irrigation scheduling in relation to his soil(s), crop and climate.



HOW TO USE IRRIGATION CHARTS

Irrigation charts are provided with each instrument. Additional charts are available on order. Regular use of the charts helps in planning irrigation.

All readings should be recorded using a line of different identity to indicate the readings of each particular block.

As readings are made and recorded, a curve of soil moisture changes will result. By extending the slope of the lines, it will be possible to see well in advance when the soil moisture will reach the level at which irrigation is required. In addition, the chart will also indicate how much water is needed to restore the moisture to field capacity.

For example, assume that irrigation should be applied when a block planted at 18" and yielding a reading of 63, indicates roughly 1.5 in terms of bars tension. Soon after irrigation, this block may read 96; a few days later (without irrigation or rainfall) it may read 88; the next day 80. If these three readings are plotted on the irrigation chart, and a line extended through them, it is possible to project the time at which the 1.5 bars tension level (or irrigation point) will be reached; in this case it would be less than three days.

NOTE: The gypsum blocks must be soaked in water for 1 hour and allowed to dry as soon as received. This wetting-drying cycle will improve their uniformity. Before planting the blocks, they should be soaked again for 2 to 3 minutes to improve contact with the soil.

INSTALLATION OF THE BLOCKS

- ① Dig a hole in the ground with 1" soil auger or better, a 7/8" soil probe.
- ② Make a soil and water slurry of creamy consistency and place 1 or 2 tablespoons of the slurry in the hole.
- ③ Push the block to the bottom of the hole, forcing the slurry to envelop the block. The block can be pushed by using a tube (plastic or aluminum will suffice) or a slotted rod.
- ④ Back fill the hole and tamp in small increments.
- ⑤ Install only one block in each hole and fasten the leads to a stake so that they can be kept clean and are easily located for reading. Identify the lead wire according to the depth of the blocks by using a colored tag or by making a knot on the shallow block, 2 knots on the deep one (3 knots on the next, if three blocks are used in the same station).

WHERE TO PLACE BLOCKS

The location and depth of the blocks depends on the nature of the crops, the potential root zone, the type of soil and subsurface formation, and the profile of the field. While it is not possible to give specific instructions applicable to all cases, there are some guidelines to be followed: (A "string" of blocks 2, 3, or 4, depending on the depth to be reached, is called "station").

- ▶ Select a station locations where the plant population is representative of the field. Do not place the blocks in low or high spots or near changes in slope of the irrigation run unless you wish to measure variability in water penetration caused by such differences.
- ▶ Keep the soil around the stations from becoming compacted when taking readings, especially where blocks are planted near the surface. Do not walk in furrows in which soil moisture readings are being measured. Walk in the next furrow. Mark each "walk" furrow when installing the blocks.
- ▶ When using sprinkler systems, make sure the blocks are set so they will not be damaged when the sprinkler is moved. Inaccurate readings can also result if the blocks are placed too close to the sprinkler head.
- ▶ The blocks should not be shielded by any low hanging branches or in an area that may be flooded by run-off. In the case of row crops, the blocks should be located directly in the row. In orchards, the blocks are located at the drip line of a tree.

We recommend that a second string of a few blocks be placed in the ground not far from the first – 10" to 20" apart. This will serve as a control on the blocks and on other factors. If the readings of two adjacent blocks at the same depth show a significant discrepancy, the cause should be determined. It may be poor distribution of water from the sprinkler system, or difference in sprinkler distribution caused by wind, differences in root concentration surrounding the block installations, or differences in the soil.

DEPTH OF INSTALLATION

The active root zone of the crop determines the depth at which to place the blocks. Type of crop, soil depth, and state of growth should also be considered.

When seeds are first planted, irrigation is necessary to assure quick and uniform seed germination. Visual inspection of the soil near the seeds will indicate whether irrigation is needed at that time. A minimum of two blocks per station is recommended; one shallow, one deep. The table below gives recommended depths for setting the blocks according to soil depth or active root zone.

Recommended depths for placing electrical resistance blocks according to soil depth or active root zones.

Soil depth or active root zone (Inches)	Shallow blocks (Inches)	Deep blocks (Inches)
18	8	12
24	12	18
36	12	24
48	18	36

CARE OF YOUR METER

- ▶ Store your meter in a clean, dry place. The protective carrying case is an ideal storage place when the meter is not in use.
- ▶ Change the 9-Volt battery as needed. Continued use with a low battery may cause the meter to go out of calibration.
- ▶ Clean the meter with any biodegradable cleaner. Use the cleaner sparingly and on external parts only.
- ▶ Remove the battery if the meter will not to be used for one month or longer.

SERVICE FOR YOUR METER

If your meter is not working properly, replace the battery with a new one and check the calibration. If this does not resolve the problem,

WARRANTY

Delmhorst Instrument Co., referred to hereafter as Delmhorst, guarantees its KS-D1 meter for one year from date of purchase and any optional electrodes against defects in material or workmanship for 90 days. If, within the warranty period of the KS-D1, you find any defect in material or workmanship return the meter following the instructions in the **Service for Your Meter** section. This limited warranty does not cover abuse, alteration, misuse, damage during shipment, improper service, unauthorized or unreasonable use of the meter or electrodes. This warranty does not cover batteries, pin assemblies, or pins. If the meter or any optional electrodes have been tampered with, the warranty shall be void. At our option we may replace or repair the meter.

Delmhorst shall not be liable for incidental or consequential damages for the breach of any express or implied warranty with respect to this product or its calibration. With proper care and maintenance the meter should stay in calibration; follow the instructions in the **Care of Your Meter** section.

UNDER NO CIRCUMSTANCES SHALL DELMHORST BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES OF ANY TYPE WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOST PROFITS OR DOWNTIME ARISING OUT OF OR RELATED IN ANY RESPECT TO ITS METERS OR ELECTRODES AND NO OTHER WARRANTY, WRITTEN, ORAL OR IMPLIED APPLIES. DELMHORST SHALL IN NO EVENT BE LIABLE FOR ANY BREACH OF WARRANTY OR DEFECT IN THIS PRODUCT THAT EXCEEDS THE AMOUNT OF PURCHASE OF THIS PRODUCT.

The express warranty set forth above constitutes the entire warranty with respect to Delmhorst meters and electrodes and no other warranty, written, oral, or implied applies. This warranty is personal to the customer purchasing the product and is not transferable.

[illegible]

For 65 years Delmhorst has been the leading manufacturer of high quality, US-made moisture meters and thermo-hygrometers. Today we offer a wide range of meters for applications including water damage restoration, construction, flooring, lumber/woodworking, paper, and agriculture.



©1999, Delmhorst Instrument Co.

510INS-0015

REV. 04/11

.561.8187

www.**itm**.com

information@itm