

Digital Storage Oscilloscope

GDS-1000A-U Series

USER MANUAL

GW INSTEK PART NO. 82DS-112AUEA1



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

April 2011 edition

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will Corporation.

The information in this manual was correct at the time of printing. However, Good Will continues to improve its products and therefore reserves the right to change the specifications, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.

Table of Contents

SAFETY INSTRUCTIONS..... 8

- Safety Symbols 8
- Safety Guidelines..... 9
- Power cord for the United Kingdom..... 12

GETTING STARTED..... 13

- Main Features 13
- Panel Overview..... 15
 - Front Panel 15
 - Rear Panel..... 19
 - Display..... 20
- Setting up the Oscilloscope..... 21

QUICK REFERENCE 24

- Menu Tree and Shortcuts..... 24
 - CH1/CH2 key 25
 - Cursor key 1/2 26
 - Cursor key 2/2 26
 - Display key..... 27
 - Autoset key 27
 - Hardcopy key..... 27
 - Help key..... 28
 - Horizontal menu key..... 28
 - Math key 1/2 (+/-/x)..... 29
 - Math key 2/2 (FFT/FFT rms) 30
 - Measure key..... 31
 - Run/Stop key 31
 - Save/Recall key 1/10 32
 - Save/Recall key 2/10 32
 - Save/Recall key 3/10 33
 - Save/Recall key 4/10 33
 - Save/Recall key 5/10 34
 - Save/Recall key 6/10 34
 - Save/Recall key 7/10 35
 - Save/Recall key 8/10 35
 - Save/Recall key 9/10 36
 - Save/Recall key 10/10 36
 - Trigger key 1/6..... 37

Trigger key 2/6	37
Trigger key 3/6	38
Trigger key 4/6	38
Trigger key 5/6	39
Trigger key 6/6	39
Utility key 1/11 (Utility #1)	40
Utility key 2/11 (Utility #2)	40
Utility key 3/11 (Utility #3)	41
Utility key 4/11 (Hardcopy -Save All).....	41
Utility key 5/11 (Hardcopy -Printer)	42
Utility key 6/11 (Hardcopy -Save Image).....	42
Utility key 7/11 (Probe compensation)	43
Utility key 8/11 (Go-NoGo)	43
Utility key 9/11 (Data Logging 1/2)	44
Utility key 10/11 (Data Logging 2/2)	44
Utility key 11/11 (Self CAL Menu)	44
Default Settings.....	45
Built-in Help.....	46
MEASUREMENT	47
Basic Measurements	47
Activating a channel.....	47
Using Autoset	48
Running and stopping the trigger	50
Changing the horizontal position and scale.....	51
Changing the vertical position and scale	52
Using the probe compensation signal	53
Automatic Measurements.....	55
Measurement items.....	55
Automatic measurement gating.....	57
Automatically measuring the input signals.....	58
Cursor Measurements	61
Using the horizontal cursors	61
Using the vertical cursors	62
Math Operations	63
Overview.....	63
Adding, subtracting or multiplying signals	64
Using the FFT function	65
Go No-Go Testing.....	67
Overview.....	67
Edit: NoGo When.....	68
Edit: Source.....	68
Edit: NoGo Violation Conditions.....	69

Edit: Template (boundary)	69
Run Go-NoGo Tests	73
Data Logging	74
Overview	74
Edit: Source	75
Edit: Setup Parameters	75
Run Data logging	77
CONFIGURATION	78
Acquisition	78
Selecting the acquisition mode	78
Selecting Delay mode	80
Real time vs Equivalent time sampling mode	82
Display	83
Selecting vector or dot drawing	83
Accumulating the waveform	83
Adjusting the display contrast	84
Selecting the display grid	84
Horizontal View	85
Moving the waveform position horizontally	85
Selecting the horizontal scale	85
Selecting the waveform update mode	86
Zooming the waveform horizontally	87
Viewing waveforms in the X-Y mode	88
Horizontal Adjustment Menu	89
Vertical View (Channel)	91
Moving the waveform position vertically	91
Selecting the vertical scale	91
Selecting the coupling mode	91
Expand Vertical Scale Center / Ground	92
Inverting the waveform vertically	93
Limiting the waveform bandwidth	94
Probe attenuation level and type	94
Trigger	96
Trigger type	96
Trigger parameter	96
Configuring Holdoff	98
Configuring the edge trigger	99
Configuring the video trigger	100
Configuring the pulse width trigger	101
Manually triggering the signal	103
Rear Panel USB Port Interface	104
Remote Control Interface	105

System Settings	107
Viewing the system information.....	107
Selecting the language.....	107
SAVE/RECALL	109
File Structures	109
Display image file format.....	109
Waveform file format	109
Setup file format	112
Using the USB file utilities.....	113
Quick Save (HardCopy)	115
Save	117
File type/source/destination.....	117
Saving the panel settings.....	118
Saving the waveform.....	119
Saving the display image	121
Saving all (panel settings, display image, waveform)	122
Recall	124
File type/source/destination.....	124
Recalling the default panel settings.....	125
Recalling a reference waveform to the display	126
Recalling panel settings	126
Recalling a waveform	127
Recall Image.....	129
PRINT	131
Print (Hardcopy)	131
MAINTENANCE	134
Vertical Resolution Calibration	134
Probe Compensation	135
FAQ.....	137
The input signal does not appear in the display.	137
I want to remove some contents from the display.	137
The waveform does not update (frozen).....	138
The probe waveform is distorted.....	138
Autoset does not catch the signal well.....	138
I want to clean up the cluttered panel settings.....	138
The saved display image is too dark on the background..	138
The accuracy does not match the specifications.	139

The oscilloscope will not allow a 2M waveform to be saved.	139
APPENDIX.....	140
Fuse Replacement	140
GDS-1000A-U Series Specifications	141
Model-specific specifications.....	141
Common specifications	142
Probe Specifications.....	144
GDS-1072A-U Probe.....	144
GDS-1102A-U Probe.....	144
GDS-1152A-U Probe.....	145
Dimensions	146
EC Declaration of Conformity	147
INDEX.....	148

S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that should be followed when operating and storing the oscilloscope. Read the following before any operation to ensure your safety and to keep the oscilloscope in the best condition.

Safety Symbols

These safety symbols may appear in this manual or on the oscilloscope.

	WARNING	Warning: Identifies conditions or practices that could result in injury or loss of life.
	CAUTION	Caution: Identifies conditions or practices that could result in damage to the oscilloscope or to other objects or property.
	DANGER	High Voltage
	Attention:	Refer to the Manual
		Protective Conductor Terminal
		Earth (Ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline



CAUTION

- Make sure the BNC input voltage does not exceed 300V peak.
- Never connect a hazardous live voltage to the ground side of the BNC connectors. It might lead to fire and electric shock.
- Do not place heavy objects on the oscilloscope.
- Avoid severe impact or rough handling that may damage the oscilloscope.
- Avoid discharges of static electricity on or near the oscilloscope.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan vent.
- Do not perform measurements at power sources and building installation sites (Note below).
- The oscilloscope should only be disassembled by a qualified technician.

(Measurement categories) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. The GDS-1000A-U falls under category II.

- Measurement category IV is for measurement performed at the source of a low-voltage installation.
 - Measurement category III is for measurement performed in a building installation.
 - Measurement category II is for measurement performed on circuits directly connected to a low voltage installation.
 - Measurement category I is for measurements performed on circuits not directly connected to Mains.
-

- Power Supply
- AC Input voltage: 100 ~ 240V AC, 47 ~ 63Hz
-  **WARNING**
- The power supply voltage should not fluctuate more than 10%.
 - Connect the protective grounding conductor of the AC power cord to an earth ground.

- Fuse
- Fuse type: T1A/250V
-  **WARNING**
- To ensure fire protection, replace the fuse only with the specified type and rating.
 - Disconnect the power cord before replacing the fuse.
 - Make sure the cause of fuse blowout is fixed before replacing the fuse.

- Cleaning the oscilloscope
- Disconnect the power cord before cleaning the oscilloscope.
 - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid into the oscilloscope.
 - Do not use chemicals containing harsh products such as benzene, toluene, xylene, and acetone.

- Operation Environment
- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
 - Relative Humidity: $\leq 80\%$, 40°C or below
 $\leq 45\%$, 41°C~50°C
 - Altitude: < 2000m
 - Temperature: 0°C to 50°C

(Pollution Degree) EN 61010-1:2001 specifies pollution degrees and their requirements as follows. The oscilloscope falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage environment

- Location: Indoor
- Storage Temperature: -10°C~60°C, no condensation-
- Relative Humidity: 93% @ 40°C
65% @ 41°C ~60°C

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

Power cord for the United Kingdom

When using the oscilloscope in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons



WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow:	Earth
Blue:	Neutral
Brown:	Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol \oplus or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

G E T T I N G S T A R T E D

The Getting started chapter introduces the oscilloscope’s main features, appearance, and set up procedure.


Main Features

Model name	Frequency bandwidth	Input channels
GDS-1072A-U	DC – 70MHz (-3dB)	2
GDS-1102A-U	DC – 100MHz (-3dB)	2
GDS-1152A-U	DC – 150MHz (-3dB)	2
Performance	<ul style="list-style-type: none"> • 1 GS/s real-time sampling rate • 25GS/s equivalent-time sampling rate • 2M points record length • Up to 10ns peak detection • 2mV~10V vertical scale • 1ns ~ 50s time scale 	
Features	<ul style="list-style-type: none"> • 5.7 inch color TFT display • Saving and recalling setups and waveforms • 27 automatic measurements • Multi-language menu (12 languages) • Math operation: Addition, Subtraction, multiplication, FFT, FFT RMS • Data logging • Go-NoGo testing • Edge, video, pulse width trigger 	

- Compact size: (W) 310 x (D) 140 x (H) 142 mm
 - Probe factor from 0.1X~2000X voltage/current
-
- Interface
- USB 2.0 full-speed interface for saving and recalling data
 - Calibration output
 - External trigger input
 - USB slave interface for remote control
 - PictBridge Printer compatible

Panel Overview

Front Panel

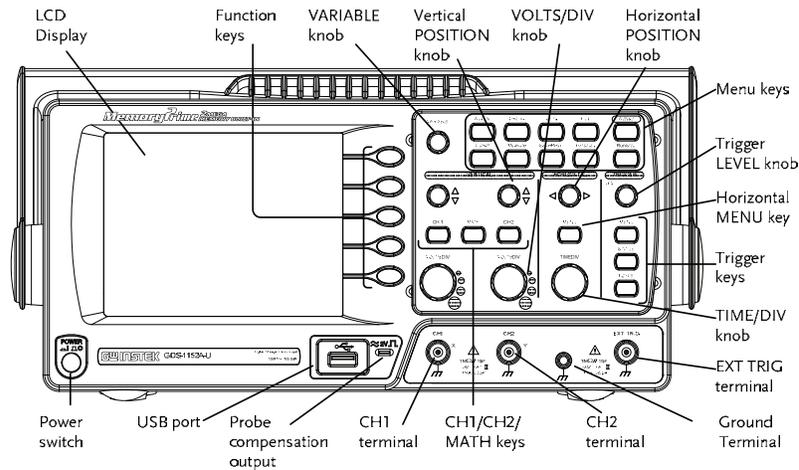

LCD display TFT color, 320 x 234 resolution, wide angle view LCD display.

Function keys:  Activates the functions which appear in the left side of the LCD display.
 F1 (top) to
 F5 (bottom)


Variable knob  Increases or decreases values and moves to the next or previous parameter.

Acquire key  Configures the acquisition mode (page 78).


Display key  Configures the display settings (page 83).

Cursor key  Runs cursor measurements (page 61).


(Continued on next page)

Utility key		Configures the Hardcopy function (page 115), shows the system status (page 107), selects the menu language (page 107), runs the self calibration (page 134), configures the probe compensation signal (page 135), and selects the USB host type (page 104).
Help key		Shows the Help contents on the display (page 46).
Autoset key		Automatically configures the horizontal, vertical, and trigger settings according to the input signal (page 48).
Measure key		Configures and runs automatic measurements (page 55).
Save/Recall key		Saves and recalls images, waveforms, or panel settings (page 109).
Hardcopy key		Stores images, waveforms, or panel settings to USB (page 115), or prints screen images to a PictBridge compatible printer (page 131).
Run/Stop key		Runs or stops triggering (page 50).
Trigger level knob		Sets the trigger level (page 96).
Trigger menu key		Configures the trigger settings (page 96).
Single trigger key		Selects the single triggering mode (page 103).


Trigger force key		Acquires the input signal once regardless of the trigger condition at the time (page 103).
Horizontal menu key		Configures the horizontal view (page 85).
Horizontal position knob		Moves the waveform horizontally (page 85).
TIME/DIV knob		Selects the horizontal scale (page 85).
Vertical position knob		Moves the waveform vertically (page 91).
CH1/CH2 key		Configures the vertical scale and coupling mode for each channel (page 91).
VOLTS/DIV knob		Selects the vertical scale (page 91).
Input terminal		Accepts input signals: $1M\Omega \pm 2\%$ input impedance, BNC terminal.
Ground terminal		Accepts the DUT ground lead to achieve a common ground.
MATH key		Performs math operations (page 63).
USB port		Facilitates transferring waveform data, display images, and panel settings (page 109).
Probe compensation output		Outputs a 2Vp-p, square signal for compensating the probe (page 135) or demonstration.

External trigger input		Accepts an external trigger signal (page 96).
Power switch		Powers the oscilloscope on or off.

Rear Panel

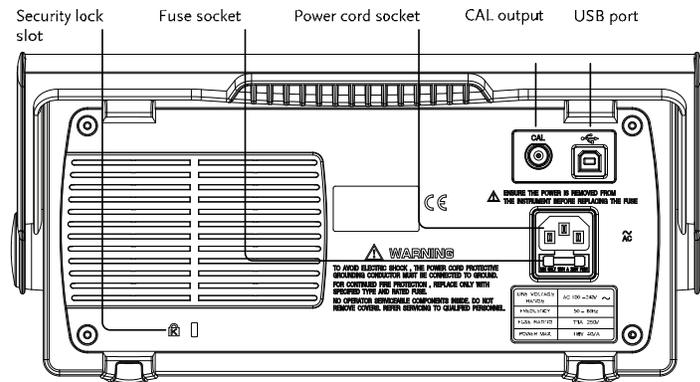

Power cord socket

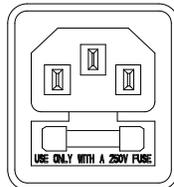


Power cord socket accepts the AC mains, 100 ~ 240V, 50/60Hz.
The fuse socket holds the AC main fuse, T1A/250V.

Fuse socket

For the fuse replacement procedure, see page 140.

USB slave port



Accepts a type B (slave) male USB connector for remote control of the oscilloscope (page 104) or to print directly to a PictBridge compatible printer.

Calibration output




Outputs the calibration signal used in vertical scale accuracy calibration (page 134).

Security lock slot



Standard laptop security lock slot for ensuring the security of the GDS-1000A-U.





Display

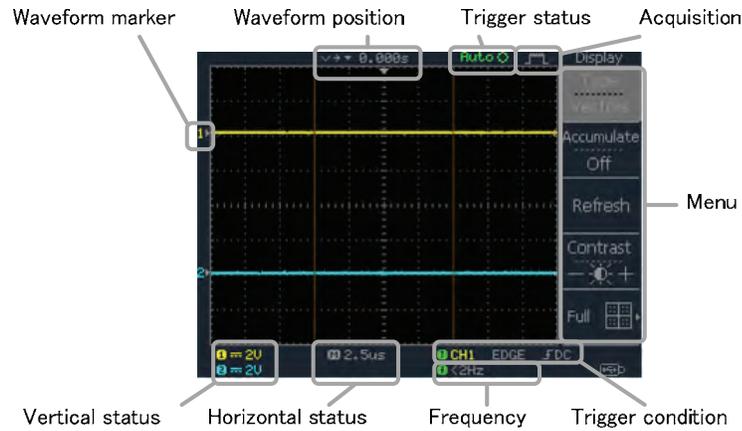


Waveforms	Channel 1: Yellow	Channel 2: Blue
Trigger status	Trig'd	A signal is being triggered
	Trig?	Waiting for a trigger condition
	Auto	Updating the input signal regardless of trigger conditions
	STOP	Triggering is stopped
	For trigger setting details, see page 96.	
Input signal frequency	Updates the input signal frequency (the trigger source signal) in real-time. " < 2Hz " Indicates that the signal frequency is less than the lower frequency limit (2Hz) and thus not accurate.	
Trigger configuration	Shows the trigger source, type, and slope. In case of the Video trigger, shows the trigger source and polarity.	
Horizontal status	Shows the channel configurations: coupling mode, vertical scale, and horizontal scale.	
Vertical status		

Setting up the Oscilloscope

Background This section describes how to set up the oscilloscope properly including adjusting the handle, connecting a signal, adjusting the scale, and compensating the probe. Before operating the oscilloscope in a new environment, run these steps to make sure the oscilloscope is functionally stable.

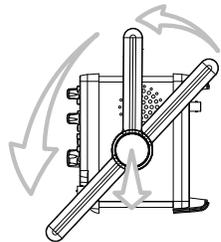- Procedure**
1. Pull both bases of the handle out slightly. 
 2. Turn to one of the three preset positions. 
 3. Connect the power cord. 
 4. Press the power switch. The display will become active in approximately 10 seconds. 
 5. Reset the system by recalling the factory settings. Press the Save/Recall key, then *Default Setup*. For details regarding the factory settings, see page 45. 



6. Connect the probe between the Channel1 input terminal and probe compensation signal output (2Vp-p, 1kHz square wave).
7. Set the probe attenuation voltage to x10.

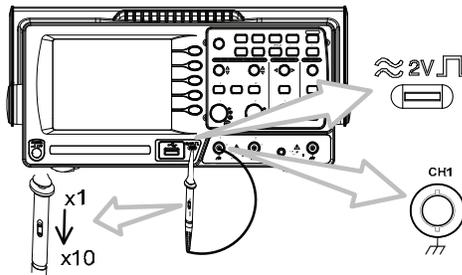


8. Press the AutoSet key. A square waveform will appear in the center of the display. For details on AutoSet, see page 48.



9. Press the Display key, then *Type* and select the vector waveform type.



10. Turn the adjustment point on the probe to flatten the square waveform edge.

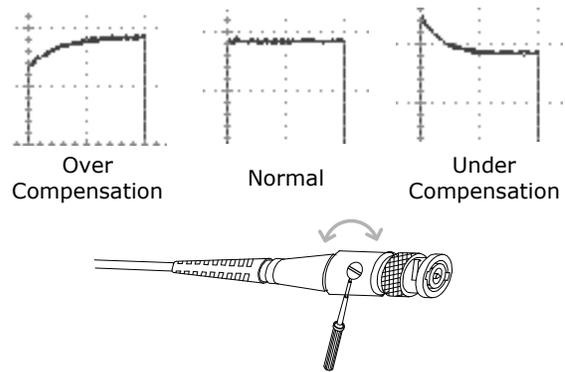

11. Setting up the oscilloscope is complete. You may continue with the other operations.


Measurement: page 47 Configuration: page 78

QUICK REFERENCE

This chapter lists the oscilloscope menu tree, operation shortcuts, built-in help coverage, and default factory settings. Use this chapter as a handy reference to access the oscilloscope functions.

Menu Tree and Shortcuts

Conventions	Examples
Normal	= Press the functional key for "Normal"
Average 	= Repeatedly press the functional key for "Average"
Normal ~ Average	= Select a menu from "Normal" to "Average" and press its functionality key
Normal → VAR 	= Press the functionality key for "Normal", and then use the Variable knob

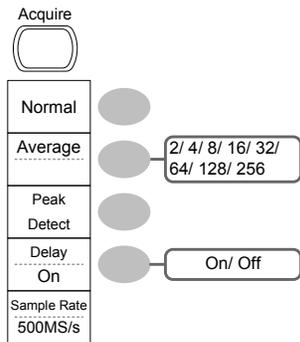

Select acquisition mode

Normal ~ Peak-Detect


Select average number

Average ↩

Turn Delay on/off

Delay On ↩

CH1/CH2 key

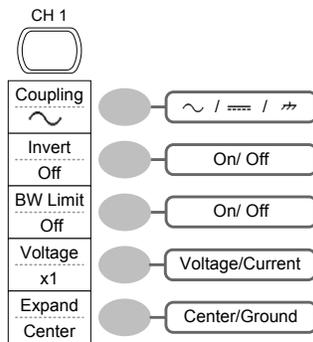

Turn channel on/off

CH 1/2 ↩

Select coupling mode

Coupling ↩

Invert waveform

Invert ↩

Turn bandwidth limit on/off

BW Limit ↩

Select probe type

Voltage↔Current


Select probe attenuation

VAR ⌚ (0.1x~2000x) (1-2-5 step)


Expand type

Expand ↩


Cursor key 1/2

Cursor 		Turn cursor on/off Cursor 
Source CH1		Move X1 cursor X1 → VAR 
X1 -5.000uS 0.000uV		Move X2 cursor X2 → VAR 
X2 5.000uS 0.000uV		Move both X1 and X2 cursor X1X2 → VAR 
X1X2 A: 10.00uS F: 100.0kHz 0.000uV		Switch to Y cursor X ↔ Y
X ↔ Y		

Cursor key 2/2


Cursor 		Turn cursor on/off Cursor 
Source CH1		Move Y1 cursor Y1 → VAR 
Y1 123.4mV		Move Y2 cursor Y2 → VAR 
Y2 12.9mV		Move both Y1 and Y2 cursor Y1Y2 → VAR 
Y1Y2 10.5mV		Switch to X cursor X ↔ Y
X ↔ Y		

Display key

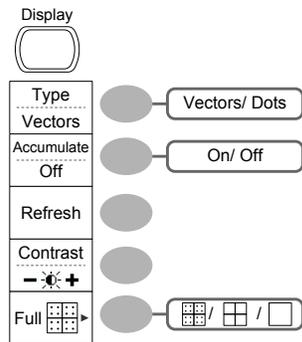


- Select waveform type
Type ↵
- Waveform accumulate On/Off
Accumulate ↵
- Refresh accumulation
Refresh
- Set display contrast
Contrast → VAR ↻
- Select display grid
[Grid Icon] ↵

Autoset key

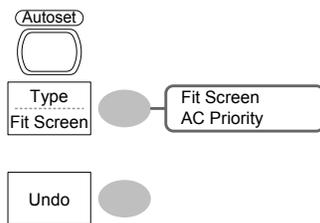

- Automatically find the signal and set the scale
Autoset
- Change the Type of Autoset mode.
Type ↵ (available for a few seconds)
- Undo Autoset
Undo ↵ (available for a few seconds)

Hardcopy key




Help key



Turn help mode on/off
Help ↵

Horizontal menu key

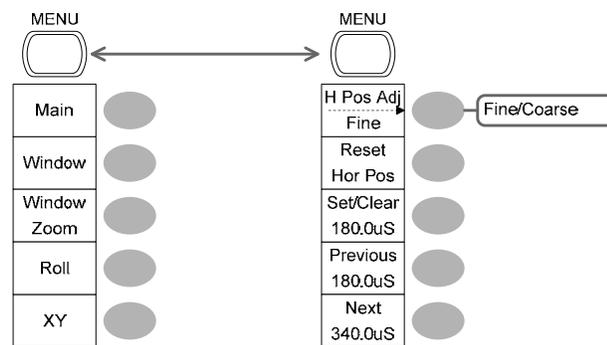

Switch from Horizontal Menu to Horizontal Position Menu. Horizontal MENU ↵

Select main (default) display Main

Select window mode Window → TIME/DIV ⌚

Zoom in window mode Window Zoom

Select window roll mode Roll

Select XY mode XY

Toggle adjustment mode H Pos Adj ↵


Reset horizontal marker Reset

Set Horizontal marker/delete horizontal marker. HOR ⌚ → Set/Clear

Navigate to previous horizontal marker. Previous

Navigate to next horizontal marker. Next

Math key 1/2 (+/-/x)

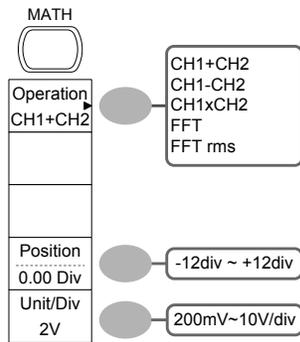

Math on/off
Math

Select math operation type (+/-
/x/FFT/FFT rms)


Operation

Set result position
Position → VAR

Math result Volt/Div

Unit/Div → VOLTS/DIV(CH2)

Math key 2/2 (FFT/FFT rms)

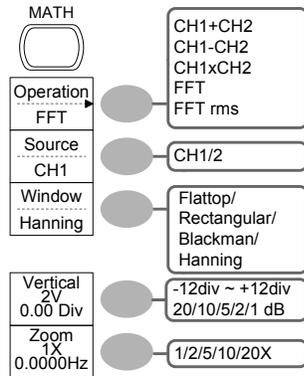

Math on/off

Math \leftarrow

Select math operation type (+/-
/x/FFT/FFT rms)

Operation \leftarrow

Select FFT source channel

Source \leftarrow

Select FFT window

Window \leftarrow

Select FFT result position

Vertical \rightarrow VAR \odot

Select vertical scale

Vertical \rightarrow VOLTS/DIV \odot

Select vertical units

Vertical \leftarrow


Select Zoom level

Zoom(X) \rightarrow VAR \odot

Select Horizontal position

Zoom(Hz) \rightarrow VAR \odot

Measure key

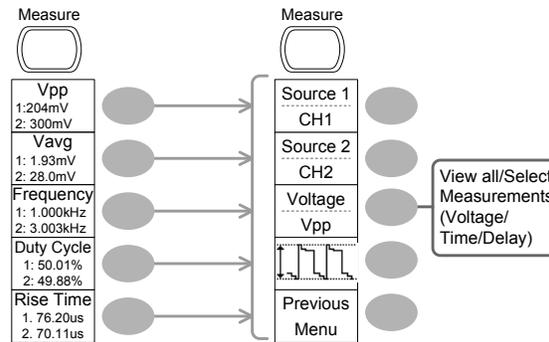


Turn on/off measurement	Measure
Select measurement type	Voltage/Time/Delay
Select measurement item	VAR or Icon(F3) / VAR
Go back to previous menu	Previous Menu

Run/Stop key


Run/Stop	Freeze/unfreeze waveform or trigger Run/Stop
----------	---

Save/Recall key 1/10

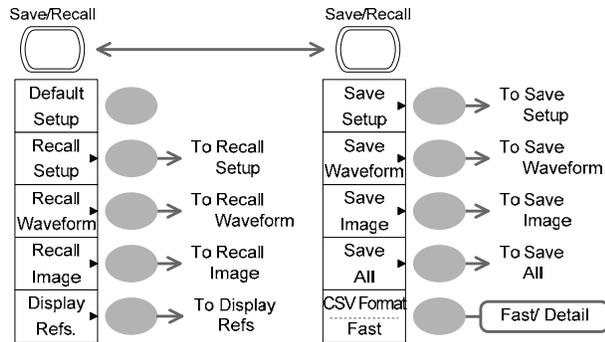

- Switch to Save or Recall menu Save/Recall
- Recall default setup Default Setup
- Change CSV format CSV Format


Save/Recall key 2/10

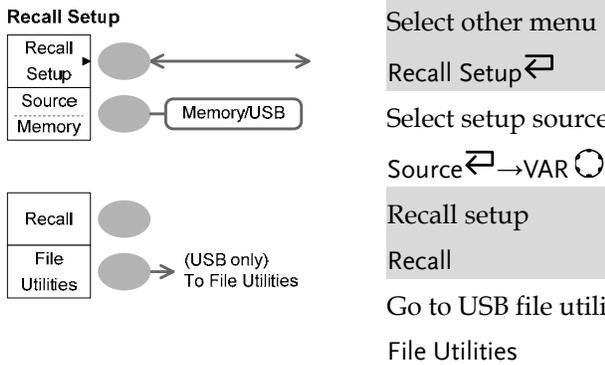

- Select other menu
- Recall Setup
- Select setup source
- Source → VAR
- Recall setup
- Recall
- Go to USB file utilities
- File Utilities

Save/Recall key 3/10


Recall Waveform

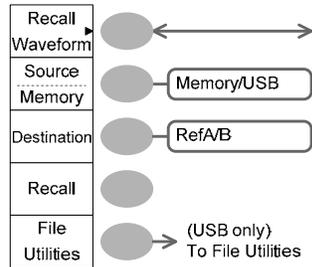

- Select other menu
- Recall Waveform \leftarrow
- Select waveform source
- Source \leftarrow \rightarrow VAR \odot
- Select waveform destination
- Destination \rightarrow VAR \odot
- Recall waveform
- Recall
- Go to USB file utilities
- File Utilities

Save/Recall key 4/10


Recall Image

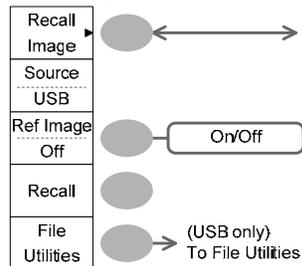

- Select other menu
- Recall Image \leftarrow
- Turn reference image on/off
- Ref image \leftarrow
- Recall waveform
- Recall
- Go to USB file utilities
- File Utilities

Save/Recall key 5/10


Display Refs.

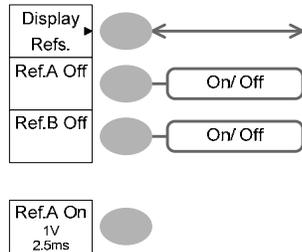

Select other menu
 Display Refs. \leftarrow
 Turn ref. waveform A on/off
 Ref.A \leftarrow
 Turn ref. waveform B on/off
 Ref.B \leftarrow

Save/Recall key 6/10

Save Setup

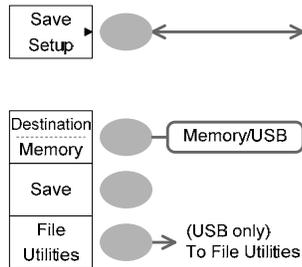

Select other menu
 Save Setup \leftarrow
 Select destination
 Destination \leftarrow \rightarrow VAR \odot
 Save setup
 Save
 Go to USB file utilities
 File Utilities

Save/Recall key 7/10

Save Waveform	
Save Waveform	↔
Source	CH1/2/Math Ref A/B
Destination Memory	Memory USB Normal USB 1M USB 2M/Refs.
Save	
File Utilities	(USB only) To File Utilities

Select other menu
Save Waveform ↩
Select source
Source ↩ → VAR ○
Select destination
Destination ↩ → VAR ○
Save waveform
Save
Go to USB file utilities
File Utilities

Save/Recall key 8/10

Save Image	
Save Image	↔
Ink Saver Off	On/ Off
Destination USB	
Save	
File Utilities	(USB only) To File Utilities

Select other menu
Save Image ↩
Turn on/off ink saver
Ink Saver ↩
Save image
Save
Go to USB file utilities
File Utilities

Save/Recall key 9/10

Save All	
Save All	↔
Ink Saver Off	On/Off
Destination USB	USB Normal USB 1M/ USB 2M
Save	
File Utilities	(USB only) To File Utilities

Select other menu
Save All ↩
Turn on/off ink saver
Ink Saver ↩
Select destination
Destination ↩ → VAR ⦿
Save all
Save
Go to USB file utilities
File Utilities

Save/Recall key 10/10

File Utilities	
Select	Enter Character
New Folder	Back Space
Rename	
Delete	Save
Previous Menu	Previous Menu

Select file/folder
VAR ⦿ → Select
Create or rename folder/file
New Folder/Rename
VAR ⦿ → Enter character / Backspace / Save / Previous menu
Delete folder/file
Delete
Go to previous menu
Previous menu

Trigger key 1/6

Trigger Type MENU	Trigger Holdoff MENU	
Type	Holdoff	Select Trigger type or Trigger Holdoff menu Type ↵
Edge	40.0ns	
Source	Set to	
CH1	Minimum	
Slope / Coupling		
Mode		
Auto		

Trigger key 2/6

Video Trigger		
Type	Video	Select video trigger type Type ↵
Source	CH1/2	Select trigger source Source ↵
Standard	NTSC/SECAMPAL	Select video standard Standard ↵
Polarity	↑ / ↓	Select video polarity Polarity ↵
Line	Field 1/ Field 2/ Line	Select video field/line Line ↵ → VAR ○

Trigger key 3/6


Edge Trigger		Select edge trigger type
Type Edge	← →	Edge ↵
Source CH1	CH1/2/Ext/Line	Select trigger source
		Source ↵
Slope / Coupling	→ To Slope/Coupling	Go to slope/coupling menu (page 39)
Mode Auto	Auto/ Normal	Slope/Coupling
		Select trigger mode
		Mode ↵

Trigger key 4/6

Pulse Trigger		Select pulse trigger type
Type Pulse	← →	Type ↵
Source CH1	CH1/2/Ext/Line	Select trigger source
		Source ↵
When < 20.0ns	>/</=/ ≠ 20ns~10s	Select pulse trigger condition and pulse width
Slope / Coupling	→ To Slope/Coupling	When ↵ → VAR ○
Mode Auto	Auto/ Normal	Go to slope/coupling menu (page 39)
		Slope/Coupling
		Select trigger mode
		Mode ↵

Trigger key 5/6


Coupling/Slope

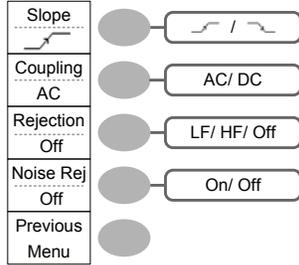

- Select trigger slope type
Slope ↩
- Select trigger coupling mode
Coupling ↩
- Select frequency rejection
Rejection ↩
- Turn noise rejection on/off
Noise Rej ↩
- Go back to previous menu
Previous Menu


Trigger key 6/6

Trigger Holdoff




- Select Holdoff time
VAR ○
- Set to minimum Holdoff time
Set to Minimum ↩

Utility key 1/11 (Utility #1)

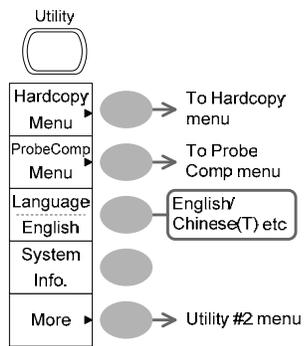

- Go to hardcopy menu
- Hardcopy
- Go to probe compensation menu
- ProbeComp
- Select language
- Language ←
- Show system information
- System Info.
- Go to the next Utility menu
- More

Utility 2/11 (Utility #2)

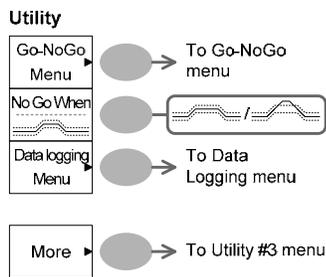

- Go to the Go-NoGo menu
- Go-NoGo
- Set the NoGo conditions to inside /outside limits
- No Go When ←
- Go to the Data Logging Menu
- Data Logging
- Go to the next Utility menu
- More

Utility key 3/11 (Utility #3)


Calibration		
Self CAL Menu	→ To Self CAL menu	Enter self calibration Self CAL
USB Port Auto Detect	Auto Detect Computer Printer	Select USB port interface USB Port ↵
More	→ To Utility #1 menu	Go to the first Utility menu More

Utility key 4/11 (Hardcopy -Save All)

Hardcopy – Save All		
Function Save All	↔	Select Hardcopy function Function ↵
Ink Saver Off	On/ Off	Turn on/off Ink saver Ink Saver ↵
Mem Leng USB 1M	USB Normal USB 1M/2M	Set the memory length Mem Leng ↵
CSV Format Fast	Fast/ Detail	Change CSV format CSV Format ↵
Previous Menu		Go to previous menu Previous Menu ↵

Utility key 5/11 (Hardcopy -Printer)

Hardcopy – Printer

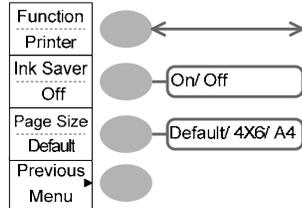

Select Hardcopy function

Function ↩

Turn on/off Ink saver

Ink Saver ↩

Set default page size


Page Size ↩

Go to previous menu

Previous Menu ↩

Utility key 6/11 (Hardcopy -Save Image)

Hardcopy – Save Image

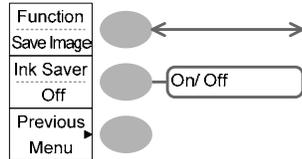

Select Hardcopy function

Function ↩

Turn on/off Inksaver

Ink Saver ↩

Go to previous menu

Previous Menu ↩

Utility key 7/11 (Probe compensation)

Probe compensation	
Wave Type [Square Wave Icon]	[Square Wave / Inverted Square Wave Icon]
Frequency 1 K	([Square Wave Icon] only) 1k ~ 100k
Duty Cycle 50%	([Square Wave Icon] only) 5% ~ 95%
Default 1kHz	
Previous Menu	

Select probe compensation signal
Wave Type ←
Set frequency for square wave
Frequency → VAR ○
Set duty cycle for square wave
Duty Cycle → VAR ○
Go to previous menu
Previous Menu

Utility key 8/11 (Go-NoGo)

Edit	
Template Max	Max/Min/Auto Auto: CH1, CH2
Source W 01	Max/Min: Ref A/ Ref B, W01~W15
Tolerance 0.4%	0.4%~40% 0.4DIV~40DIV
Save & Create	
Previous Menu	To previous menu

Switch between templates
Template ←
Select the template source
Source ←
Set the tolerance (% or Divisions)
Tolerance ← → VAR ○
Save the template
Save & Create
Go back to previous menu
Previous Menu

Utility key 9/11 (Data Logging 1/2)

Data logging		
Data logging Off	●	On/Off
Source CH1	●	CH1/CH2
Setup	● →	To the Edit menu
File Utilities	● →	(USB only) To File Utilities
Previous Menu	● →	To previous menu

Turn Data Logging On/Off
Data logging ↩
Set the logging source
Source ↩
Go to the Data Logging Edit menu
Setup
Go to the File Utilities menu
File Utilities
Go back to previous menu
Previous Menu

Utility key 10/11 (Data Logging 2/2)

Edit		
Save Waveform	●	Waveform/Image
Interval 2 secs	●	2 secs~30 mins
Duration 5 mins	●	5 mins~100 hrs
Previous Menu	● →	To previous menu

Save the logs as waveform data or as image files
Save ↩
Set the logging interval
Interval → VAR ⌚
Set the duration of the record log
Duration → VAR ⌚
Go back to previous menu
Previous Menu


Utility key 11/11 (Self CAL Menu)

Self Cal.		
Vertical ▶	● →	Start Vertical Calibration

Start Vertical Calibration
Vertical

Default Settings

Here are the factory installed panel settings which appear when pressing the Save/Recall key → *Default Setup*.



Acquisition	Mode: Normal	
Channel	Scale: 2V/Div	Invert: Off
	Coupling: DC	Probe attenuation voltage: x1
	BW limit: Off	Channel 1 & 2: On
Cursor	Source: CH1	Cursor: Off
Display	Type: Vectors	Accumulate: Off
	Grid: Full 	
Horizontal	Scale: 2.5us/Div	Mode: Main Timebase
	H Pos Adj: Fine	Hor Pos: 0
Math	Type: + (Add)	Position: 0.00 Div
	Unit/Div: 2V	
Measure	Item: Vpp, Vavg, Frequency, Duty Cycle, Rise Time	
Trigger	Type: Edge	Source: Channel1
	Mode: Auto	Slope: 
	Coupling: DC	Rejection: Off
	Noise Rejection: Off	
Utility	Hardcopy: SaveImage, InkSaver On	ProbeComp: Square wave, 1k, 50% duty cycle
Go-NoGo	Go-NoGo: Off	Source: CH1
	When: 	Violating: Stop

(Continued)


Data Logging	Data logging: Off	Source: CH1
	Setup: Waveform	Interval: 2 secs
	Duration: 5 mins	

Built-in Help

The Help key shows the contents of the built-in help support. When you press a function key, its descriptions appear in the display.



Applicable keys

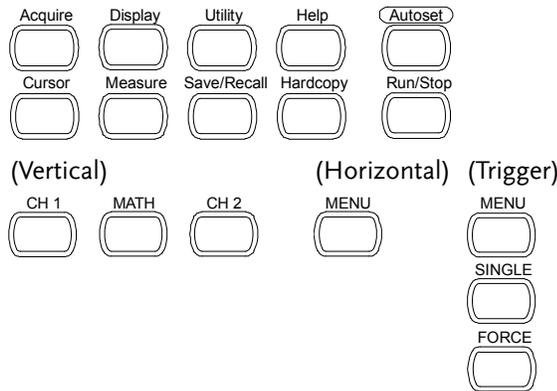

Procedure

1. Press the Help key. The display changes to the Help mode.
2. Press a functional key to access its help contents. (example: Acquire key)
3. Use the Variable knob to scroll the Help contents up and down.
4. Press the Help key again to exit the Help mode.



M EASUREMENT

The Measurement chapter describes how to properly observe a signal using the oscilloscope's basic functions, and how to observe a signal in a detailed manner using some of the advanced functions such as:

Automatic measurements, cursor measurements, and math operations.

Basic Measurements


This section describes the basic operations required in capturing and viewing an input signal. For more detailed operations, see the following chapters.

- Measurements → from page 47
- Configuration → from page 78


Activating a channel

Activating a channel

To activate an input channel, press the Channel key, CH1 or CH2. The channel indicator appears at the left side of the display and the channel icon changes accordingly.



(Continued on next page)

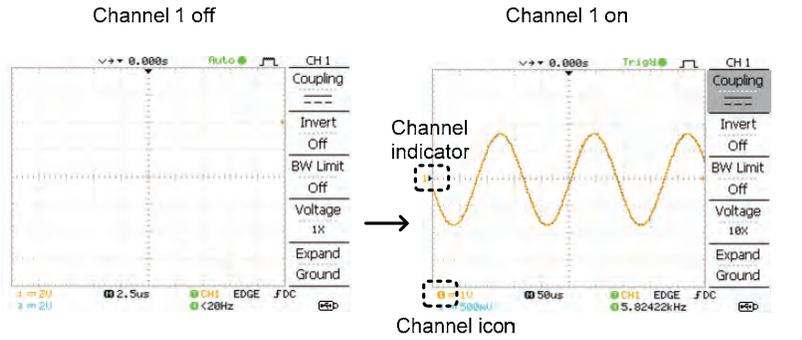

De-activating a channel To de-activate the channel, press the Channel key twice (once if the channel menu is already selected).

Using Autoset

Background The Autoset function automatically configures the panel settings to the best viewing conditions, in the following way.

- Selecting the horizontal scale
- Positioning the waveform horizontally
- Selecting the vertical scale
- Positioning the waveform vertically
- Selecting the trigger source channel
- Activating the channels


Autoset can be configured into two types of modes, AC Priority Mode or Fit Screen Mode.

AC Priority mode will scale the waveform to the screen removing any DC component.

Fit Screen Mode will fit the waveform to the best scale, including any DC components (offset).

Procedure 1. Connect the input signal to the oscilloscope and press the Autaset key. 

2. The waveform(s) appears in the center of the display.

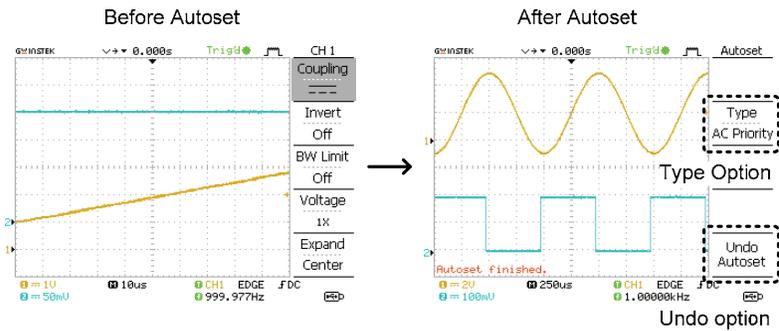


Undoing the Autaset To undo the Autaset, press *Undo* (available for a few seconds). 

Adjusting the trigger level If the waveform is still unstable, try adjusting the trigger level up or down by using the Trigger Level knob. 

Change Modes To change the type of mode, press *Type* (available for a few seconds). The Type icon will change to next type. 

Type Fit Screen, AC Priority

The next time the Autaset key is pressed, the new mode will be activated.

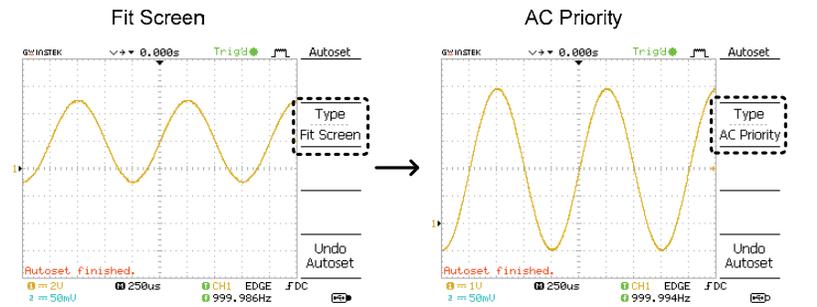

Limitation Autoset does not work in the following situation.

- Input signal frequency less than 2Hz
- Input signal amplitude less than 30mV


Running and stopping the trigger

Background

In the trigger Run mode, the oscilloscope constantly searches for a trigger condition and updates the signal onto the display when the condition is met.

In the trigger Stop mode, the oscilloscope stops triggering and thus the last acquired waveforms stay in the display. The trigger icon at the top of the display changes into Stop mode.

Pressing the Trigger Run/Stop key switches between the Run and Stop mode. 

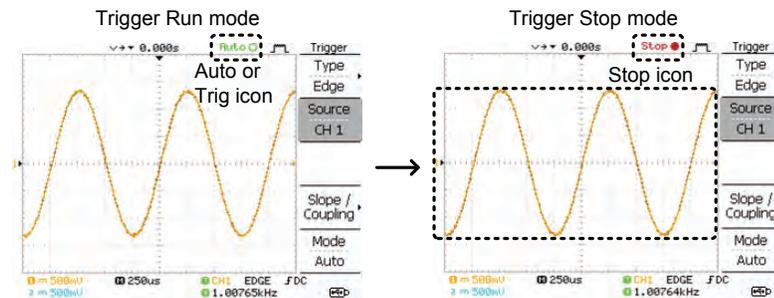


Waveform operation Waveforms can be moved or scaled in both the Run and Stop mode. For details, see page 85 (Horizontal position/scale) and page 91 (Vertical position/scale).

Changing the horizontal position and scale


For more detailed configurations, see page 85.

Setting the horizontal position

The horizontal position knob moves the waveform left or right.



The position indicator moves along with the waveform and the distance from the center point is displayed as the offset in the upper side of the display.

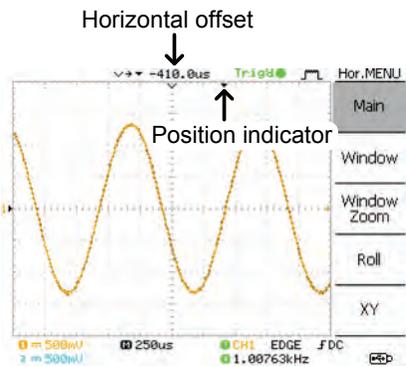


Selecting the horizontal scale

To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).



Range 1ns/Div ~ 10s/Div, 1-2.5-5 increment

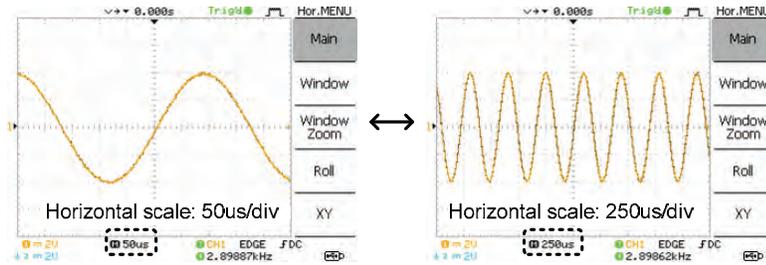

Changing the vertical position and scale

For more detailed configuration, see page 91.

Set vertical position To move the waveform up or down, turn the vertical position knob for each channel. 

As the waveform moves, the vertical position of the cursor appears at the bottom left corner of the display.

Run/Stop mode The waveform can be moved vertically in both Run and Stop mode.

Select vertical scale To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up). 

Range 2mV/Div ~ 10V/Div, 1-2-5 increments

The vertical scale indicator for each channel on the bottom left of the display changes accordingly.

Using the probe compensation signal


Background This section introduces how to use the probe compensation signal for general usage, in case the DUT signal is not available or to get a second signal for comparison. For probe compensation details, see page 135.

 **Note:** The frequency accuracy and duty factor are not guaranteed. Therefore the signal should not be used for reference purposes.

Waveform type		Square waveform used for probe compensation. 1k ~ 100kHz, 5% ~ 95%.
		Demonstration signal for showing the effects of peak detection. See page 78 for peak detection mode details.

View the probe compensation waveform

1. Connect the probe between the compensation signal output and Channel input.

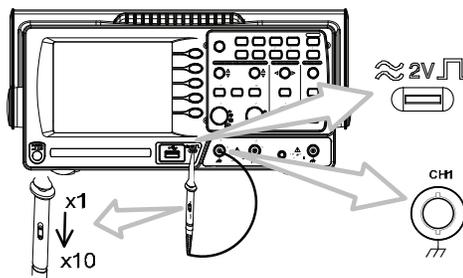


2. Press the Utility key.



3. Press *ProbeComp*.




4. Press Wave type repeatedly to select the wave type.  

5. (For  only) To change the frequency, press *Frequency* and use the Variable knob.  

VARIABLE



Range 1kHz ~ 100kHz

6. (For  only) To change the duty cycle, press *Duty Cycle* and use the Variable knob.  

VARIABLE



Range 5% ~ 95%

Probe compensation For probe compensation details, see page 135.

Automatic Measurements

The automatic measurement function measures input signal attributes and updates them in the display. Up to 5 automatic measurement items can be updated at any one time on the side menus. All automatic measurement types can be displayed on screen if necessary.

Measurement items

Overview	Voltage type	Time type	Delay type
	Vpp	Frequency	FRR
	Vmax	Period	FRF
	Vmin	RiseTime	FFR
	Vamp	FallTime	FFF
	Vhi	+Width	LRR
	Vlo	-Width	LRF
	Vavg	Dutycycle	LFR
	Vrms		LFF
	ROVShoot		
	FOVShoot		
	RPREShoot		
	FPREShoot		
Voltage measurement items	Vpp	Difference between positive and negative peak voltage (=Vmax - Vmin)	
	Vmax	Positive peak voltage.	
	Vmin	Negative peak voltage.	
	Vamp	Difference between global high and global low voltage (=Vhi - Vlo)	
	Vhi	Global high voltage.	

	Vlo		Global low voltage.
	Vavg		Averaged voltage of the first cycle.
	Vrms		RMS (root mean square) voltage.
	ROVShoot		Rise overshoot voltage.
	FOVShoot		Fall overshoot voltage.
	RPREShoot		Rise preshoot voltage.
	FPREShoot		Fall preshoot voltage.
Time measurement items	Freq		Frequency of the waveform.
	Period		Waveform cycle time (=1/Freq).
	Risetime		Rising time of the pulse (~90%).
	Falltime		Falling time of the pulse (~10%).
	+Width		Positive pulse width.
	-Width		Negative pulse width.
	Duty Cycle		Ratio of signal pulse compared with whole cycle =100x (Pulse Width/Cycle)
	Delay measurement items	FRR	

FRF		Time between: Source 1 first rising edge and Source 2 first falling edge
FFR		Time between: Source 1 first falling edge and Source 2 first rising edge
FFF		Time between: Source 1 first falling edge and Source 2 first falling edge
LRR		Time between: Source 1 first rising edge and Source 2 last rising edge
LRF		Time between: Source 1 first rising edge and Source 2 last falling edge
LFR		Time between: Source 1 first falling edge and Source 2 last rising edge
LFF		Time between: Source 1 first falling edge and Source 2 last falling edge

Automatic measurement gating

Background Automatic measurements can be restricted to a specific area (gating). When cursors are turned on, the area between the cursors is used for automatic measurements. When cursors are turned off, measurements are derived from all the points that are displayed on screen.


- Turn gating on**
1. Turn on cursors to enable gated automatic measurements.

page 61

2. Press the Measure key.



3. The measurement results appear on the menu bar, constantly updated. All measurements are derived from the cursor positions. See *Automatically measuring the input signals* for more details (page 58).

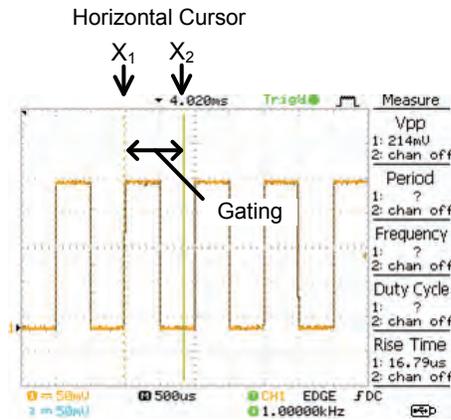

- Turn gating off
4. Turn off cursors to turn off gated automatic measurements.

page 61


Automatically measuring the input signals

Viewing the measurement result

1. Press the Measure key.



2. The measurement results appear on the menu bar, constantly updated. 5 measurement slots (F1 to F5) can be customized.

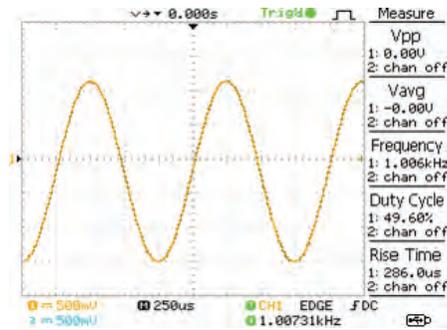


Editing a measurement item

3. Press the corresponding menu key (F1~F5) to select the measurement slot to be edited.



4. The editing menu appears

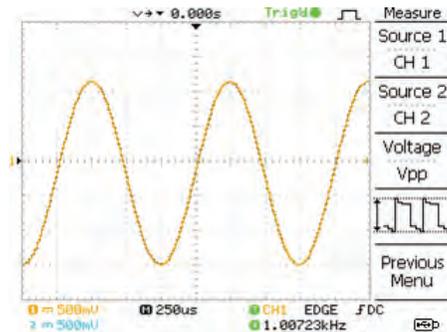


Change measurement item

5. Use the Variable knob to select a different measurement item.




Change measurement source

6. Press *Source 1* repeatedly to change Source1 from CH1 to CH2 or MATH.



Range CH1, 2, Math

7. Press *Source 2* repeatedly to change the channel for Source2.



Range CH1, 2, Math

View all measurements

8. Press *F3* to view all measurement items.



9. All the measurements appear in the center of the screen.



10. Press *F3* again to return.



Note: All the editing operations can still be performed when viewing all the measurement items.


11. Press *Previous Menu* to confirm the item selection and to go back to the measurement results view.



Cursor Measurements




Cursor lines, horizontal or vertical, show the precise position of the input waveforms or the math operation results. The horizontal cursors can track time, voltage/current* and frequency, whilst the vertical cursors can track voltage/current*. All measurements are updated in real-time. *probe type dependant (page 94).

Using the horizontal cursors



- | | |
|-----------|--|
| Procedure | <ol style="list-style-type: none"> 1. Press the Cursor key. The cursors appear in the display.  2. Press X↔Y to select the horizontal (X1&X2) cursor.  3. Press <i>Source</i> repeatedly to select the source channel.  |
| | <p>Range CH1, 2, MATH</p> |
| | 4. The cursor measurement results will appear in the menu, F2 to F4. |

Parameters	<table border="0"> <tr> <td>X1</td> <td>Time position of the left cursor. (relative to zero)</td> </tr> <tr> <td>X2</td> <td>Time position of the right cursor. (relative to zero)</td> </tr> <tr> <td>X1X2</td> <td>The difference between the X1 and X2.</td> </tr> <tr> <td>Δ: us</td> <td>The time difference between X1 and X2.</td> </tr> <tr> <td>f: Hz</td> <td>The time difference converted to frequency.</td> </tr> <tr> <td>V/A</td> <td>The voltage/current difference from X1 and X2.</td> </tr> </table>	X1	Time position of the left cursor. (relative to zero)	X2	Time position of the right cursor. (relative to zero)	X1X2	The difference between the X1 and X2.	Δ: us	The time difference between X1 and X2.	f: Hz	The time difference converted to frequency.	V/A	The voltage/current difference from X1 and X2.
X1	Time position of the left cursor. (relative to zero)												
X2	Time position of the right cursor. (relative to zero)												
X1X2	The difference between the X1 and X2.												
Δ: us	The time difference between X1 and X2.												
f: Hz	The time difference converted to frequency.												
V/A	The voltage/current difference from X1 and X2.												

M1:dB Position of the left cursor in dB.
 M2:dB Position of the right cursor in dB.
 Δ: dB The dB difference between M1 and M2.
 Div: The frequency per division.

Moving the horizontal cursors	To move the left cursor, press X1 and then use the Variable knob.		
	To move the right cursor, press X2 and then use the Variable knob.		
	To move both cursors at once, press X1X2 and then use the Variable knob.		
Remove cursors	Press Cursor to remove the onscreen cursors.		

Using the vertical cursors

Procedure	1. Press the Cursor key.	
	2. Press X↔Y to select the vertical (Y1&Y2) cursor.	
	3. Press <i>Source</i> repeatedly to select the source channel.	
	Range CH1, 2, MATH	
4. The cursor measurement results will appear in the menu.		

Parameters	Y1	Voltage level of the upper cursor
	Y2	Voltage level of the lower cursor

	Y1Y2	The difference between the upper and lower cursor	
	V/A	The voltage/current difference (Y1-Y2).	
Moving the vertical cursors	To move the upper cursor, press Y1 and then use the Variable knob.	Y1 123.4mV	
	To move the lower cursor, press Y2 and then use the Variable knob.	Y2 12.9mV	
	To move both cursors at once, press Y1Y2 and then use the Variable knob.	Y1Y2 10.5mV	
Remove cursors	Press Cursor to remove the onscreen cursors.		

Math Operations

The Math operations can add, subtract, multiply or perform FFT/FFT RMS on the input waveforms. The resulted waveform can be measured using the cursors, and saved or recalled just like normal input signals.

Overview


Addition (+)	Adds the amplitude of CH1 & CH2 signals.
Subtraction (-)	Extracts the amplitude difference between CH1 & CH2.
Multiplication (x)	Multiplies CH1 and CH2.
FFT	Performs a FFT calculation on a signal. Four types of FFT windows are available: Hanning, Flattop, Rectangular, and Blackman.

FFT RMS	Performs a FFT RMS calculation on a signal. RMS is similar to FFT, however the amplitude is calculated as RMS and not dB. Four types of FFT windows are available: Hanning, Flattop, Rectangular, and Blackman.	
Hanning FFT window	Frequency resolution	Good
	Amplitude resolution	Not good
	Suitable for....	Frequency measurement on periodic waveforms
Flattop FFT window	Frequency resolution	Not good
	Amplitude resolution	Good
	Suitable for....	Amplitude measurement on periodic waveforms
Rectangular FFT window	Frequency resolution	Very good
	Amplitude resolution	Bad
	Suitable for....	Single-shot phenomenon (this mode is the same as having no window at all)
Blackman FFT window	Frequency resolution	Bad
	Amplitude resolution	Very good
	Suitable for....	Amplitude measurement on periodic waveforms

Adding, subtracting or multiplying signals

- Procedure
1. Activate both CH1 and CH2. 
 2. Press the Math key. 

3. Press *Operation* repeatedly to select addition (+), subtraction (-) or multiplication (×).




4. The math measurement result appears in the display.




5. To move the math result vertically, use the Variable knob. The position will be displayed in *Position*.

VARIABLE







6. To clear the math result from the display, press the Math key again.




Using the FFT function

- | | | |
|-----------|--|---|
| Procedure | <ol style="list-style-type: none"> 1. Press the Math key. |  |
| | <ol style="list-style-type: none"> 2. Press <i>Operation</i> repeatedly to select FFT or FFT RMS. |   |
| | <ol style="list-style-type: none"> 3. Press <i>Source</i> repeatedly to select the source channel. |   |
| | <ol style="list-style-type: none"> 4. Press <i>Window</i> repeatedly to select the FFT window type. |   |

5. The FFT result appears. The horizontal scale changes from time to frequency, and the vertical scale from voltage to dB or RMS.

6. To move the FFT waveform vertically, press *Vertical* repeatedly until Div is selected. Use the Variable knob to change the vertical scale.




VARIABLE



Range -12.00 Div ~ +12.00 Div

7. To select the vertical scale of an FFT waveform, press *Vertical* repeatedly until dB is selected. Use the Variable knob to change the vertical scale.



VARIABLE



Range 1, 2, 5, 10, 20 dB/Div


8. To select the vertical scale of an FFT rms waveform, use the VOLTS/DIV knob to change the vertical scale. The scale will be shown in the *Vertical* soft-key.

VOLTS/DIV



Range Volts/Div

9. To zoom in on the FFT/FFT rms waveform, press *Zoom* repeatedly until X is selected. Use the Variable knob to change the Zoom level.




VARIABLE



Range 1/2/5/10/20X

10. To move the FFT/FFT rms waveform horizontally, press *Zoom* repeatedly until Hz is selected. Use the Variable knob to change the horizontal position.

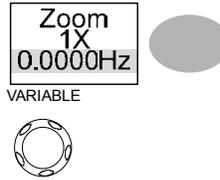

Range 0~50.000MHz

11. To clear the FFT result from the display, press the Math key again.





Go No-Go Testing

Overview

Background Go-NoGo testing checks if a waveform conforms to a user-specified maximum and minimum boundary (template). The testing can be set to stop or continue each time the template has or has not been violated by the input waveform.

Settings	Item	Default	Details
	NoGo criteria: When inside or outside the boundary	Inside	Page 68
	Source	Channel 1	Page 68
	Test continue or stop when NoGo occurs	Stop	Page 69
	Boundary (template) - selects the minimum and maximum boundaries (template) from a single waveform	Auto (0.4%)	Page 69
	Run Tests		Page 73

Edit: NoGo When

- | | | |
|-----------|---|--|
| Procedure | 1. Press the Utility key. |  |
| | 2. Press the <i>More</i> key. |  |
| | 3. Press <i>No Go When</i> repeatedly to select the NoGo conditions. |  |
| |  | NoGo when the waveform is inside the boundary (template) |
| |  | NoGo when the waveform is outside of the boundary (template) |

Edit: Source

- | | | |
|-----------|--|--|
| Procedure | 1. Press the Utility key. |  |
| | 2. Press the <i>More</i> key. |  |
| | 3. Press the <i>Go-NoGo Menu</i> key. |  |
| | 4. Press <i>Source</i> repeatedly to select the source channel (CH1 or CH2). |  |

Edit: NoGo Violation Conditions

Procedure	1. Press the Utility key.	
	2. Press the <i>More</i> key.	
	3. Press the <i>Go-NoGo Menu</i> key.	
	4. Press <i>Violating</i> repeatedly to select the NoGo conditions.	
	Stop	Stops the test when the NoGo conditions have been met.
	Continue	The tests continue even when the NoGo conditions have been met.

Edit: Template (boundary)

Background	The NoGo template sets the upper and lower amplitude boundary. Two methods are available: Min/Max and Auto.	
	Min/Max	<p>Selects the upper boundary (Max) and lower boundary (Min) as separate waveforms, from the internal memory. The upper boundary is saved to Ref A, the lower boundary is saved to Ref. B.</p> <p>Advantage: The template shape and distance (allowance) between the source signal are fully customizable.</p>

Disadvantage: The waveforms (templates) have to be stored internally prior to this selection.

Auto Creates the upper and lower boundary (template) from the source signal, not from an internally stored waveform.

Advantage: No need to store the waveforms prior to this selection.

Disadvantage: The template shape is proportional to the source signal. The distance (allowance) between the source signal and the upper and lower template is the same.

Max/Mix

1. The template is based on the source signal. Ensure the source signal appears on the display.


2. Press the Utility key.




3. Press the *More* key.




4. Press the *Go-NoGo Menu* key.



5. Press the *Template Edit* key.



6. Press *Template* repeatedly to select the upper (Max) or lower (Min) boundaries.



7. Press *Source* and use the Variable knob to select the waveform template.




VARIABLE



Max Waveform A: Ref A, W01~W15
 Min Waveform B: Ref B, W01~W15

8. Press *Position* and use the Variable knob to set the waveform amplitude.




VARIABLE



9. Repeat steps 5-7 for the other template setting (Max or Min).

10. When both Max and Min templates have been configured, press *Save & Create* to save the templates.

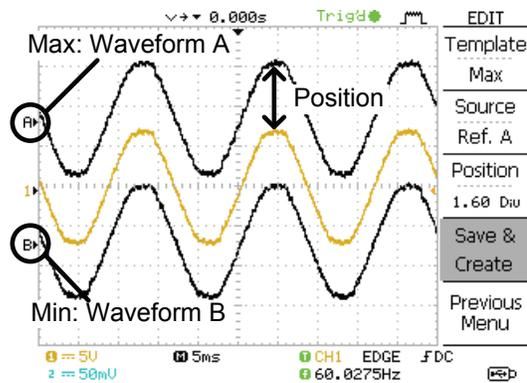

Auto

1. The template is based on the source signal. Ensure the source signal appears on the display.

2. Press the Utility key.



3. Press the *More* key.




4. Press the *Go-NoGo Menu* key.




5. Press the *Template Edit* key.



6. Press *Template* repeatedly to select the Auto template.



7. Press *Source* and use the Variable knob to select the template source.




VARIABLE



Source CH1, CH2

8. Press *Tolerance* repeatedly to choose the tolerance units, % or Div. Use the Variable knob to set the tolerance. The tolerance is for both the horizontal and vertical axis.




VARIABLE



% 0.4% ~ 40.0%

Div 0.04 Div ~ 4.0 Div

- When the Auto template has been configured, press *Save & Create* to save the template. 

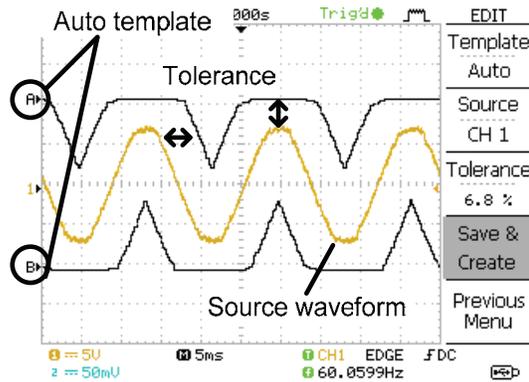


Run Go-NoGo Tests


- Procedure
- Press the Utility key. 
 - Press the *More* key. 
 - Press the *Go-NoGo Menu* key. 

Ensure the source signal and boundary templates appear on the screen.

4. Press *Go-NoGo*. The test starts and stops according to the conditions set on page 68, 69. To stop the test that has already started, press *Go-NoGo* again.



5. The test results appear in the Ratio soft-key. The numerator denotes the total number of failed tests. The denominator denotes the total number of tests.



Numerator Number of “failed” tests.

Denominator Total number of tests.

Data Logging

Overview


Background

The Data logging function allows you to log data or a screen image over timed intervals for up to 100 hours to a USB flash drive.

The data or images are stored to a USB flash drive in a directory named LogXXXX. LogXXXX is incremented each time the data logging function is used.

The files saved in the LogXXXX directory are named DSXXXX.CSV, or DSXXXX.BMP for data or image files, respectively. At each timed interval data or an image file is saved and the file number incremented. For example, DS0000 is the first logged data, DS0001 is the second and so on.

Edit: Source

Procedure	1. Press the Utility key.	
	2. Press the <i>More</i> key.	
	3. Press the <i>Data logging Menu</i> key.	
	4. Press <i>Source</i> repeatedly to select the source channel (CH1 or CH2).	

Edit: Setup Parameters

Background The logging function must set the type of data that will be logged (waveform/image), the capture interval time and the duration of the data logging.

Procedure	1. Press the Utility key.	
	2. Press the <i>More</i> key.	
	3. Press the <i>Data logging Menu</i> key.	
	4. Press the <i>Setup</i> key.	

5. Press *Save* repeatedly to log data or screen images.



6. Press *Interval* and use the Variable knob to select the interval time.



VARIABLE



Interval time	2 secs~ 2min (duration = 5 min)
	2 secs~ 5 min (duration 5~ 30 min)
	2 secs~ 30 min (duration 30+ min)

7. Press *Duration* and use the Variable knob to set the duration time.



VARIABLE




Duration 5 mins ~ 100 hours

8. Press Previous menu to return to the Data logging menu. Data logging is now ready to begin.



Run Data logging

Background Ensure the data source (page 75) and data logging setup has been set (page 75).

- Procedure**
1. Insert a USB flash drive into the USB front panel port. 
 2. Press the Utility key. 
 3. Press the *More* key. 
 4. Press the *Data logging Menu* key. 
 5. Press *Data logging* to turn data logging On. Data/image files start logging to the USB flash drive automatically. To stop the Data logging, press the *Data logging* key again. 

C ONFIGURATION

The Configuration chapter describes how to configure panel settings to make measurements and observations suited to the application needs.

Acquisition

The acquisition process samples the analog input signals and converts them into digital format for internal processing. You may select the normal, average, or peak detect acquisition mode.

Selecting the acquisition mode

Procedure	1. Press the Acquire key.						
	2. Select the acquisition mode between <i>Normal</i> , <i>Average</i> and <i>Peak Detect</i> .	<table border="1"> <tr> <td>Normal</td> <td></td> </tr> <tr> <td>Average</td> <td></td> </tr> <tr> <td>Peak Detect</td> <td></td> </tr> </table>	Normal		Average		Peak Detect
Normal							
Average							
Peak Detect							
Range	Normal	All of the acquired data is used to draw the waveform.					

- Average Multiple data is averaged to form a waveform. This mode is useful for drawing a noise-free waveform. To select the number, press *Average* repeatedly.
Average number: 2, 4, 8, 16, 32, 64, 128, 256
- Peak detect To activate the Peak detect mode, press *Peak-Detect*. Only the minimum and maximum value pairs for each acquisition interval (bucket) are used. This mode is useful for catching abnormal glitches in a signal.

Peak detect effect using the probe comp. waveform

1. One of the probe compensation waveforms can demonstrate the peak detection mode. Connect the probe to the probe compensation output.




2. Press the Utility key.



3. Press *ProbeComp*.



4. Press *Wave Type* and select the waveform.



5. Press the Autoset key. The oscilloscope positions the waveform in the center of the display.




6. Press the Acquire key.



7. Press *Normal*.




8. Press *Peak-Detect* and see that a spike noise is captured.




Example

The peak detect mode reveals the occasional glitch.

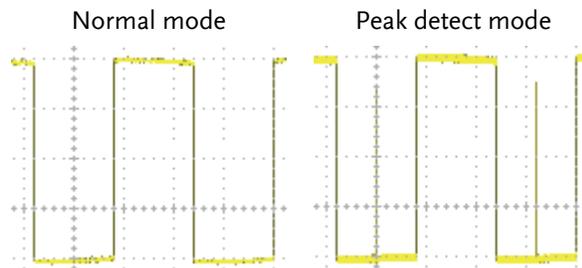


Selecting Delay mode

Background	When delay time is ON, the displayed output is delayed for a defined amount of time from the trigger point. Using the delay function is useful for observing an area of the waveform that occurs some time after the trigger point.
Delay On	With Delay On the expansion point and trigger point become separated by the amount of delay time. As the delay time is increased the trigger point moves left from the expansion point. When the horizontal scale is adjusted, the waveform expands from the expansion point, not the trigger point.

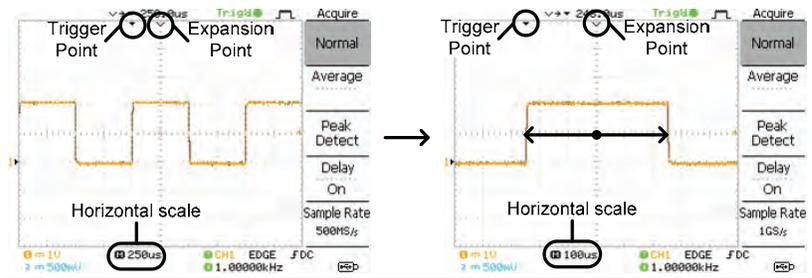

Delay Off

With Delay Off the expansion point and trigger point are always in the same position. Thus when the horizontal scale is adjusted, the waveform expands from the trigger point.

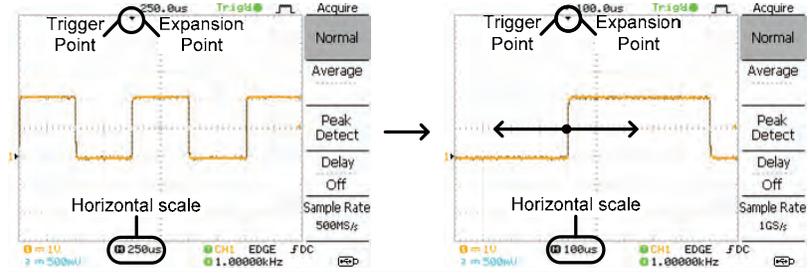

Procedure


1. Press the Acquire key.



2. Press *Delay On/Off* to toggle Delay On/Off.



3. Use the Horizontal Position knob to increase or decrease the delay time when Delay is set to On.



4. Adjust the horizontal scale to zoom into the waveform.



Real time vs Equivalent time sampling mode

Background	The oscilloscope automatically switches between two sampling modes, Real-time and Equivalent-time, according to the number of active channels and sampling rate.
Real-time sampling	Once sampled data is used to reconstruct a single waveform. Short-time events might get lost if the sampling rate gets too high. This mode is used when the sampling rate is relatively low (1GSa/s or lower).
Equivalent-time sampling	Multiple numbers of sampled data are accumulated to reconstruct a single waveform. ETS restores more waveform detail but takes longer to update the waveform. This mode is used when the sampling rate becomes higher than 1GSa/s. The maximum equivalent-time sampling rate is 25GSa/s.

Display

The Display section describes how to configure the display settings: drawing type, waveform accumulation, contrast adjustment, and grid settings.


Selecting vector or dot drawing

Procedure	1. Press the Display key.	
	2. Press <i>Type</i> repeatedly to select the waveform drawing.	


Types	Dots	Only the sampled dots are displayed.
	Vectors	The sampled dots are connected by lines.

Accumulating the waveform


Background	Accumulation preserves the old waveform drawings and overwrites new waveforms on top of it. It is useful for observing waveform variation.
------------	--

Procedure	1. Press the Display key.	
	2. Press <i>Accumulate</i> to turn on the waveform accumulation.	
	3. To clear the accumulation and start it over (refresh), press <i>Refresh</i> .	


Example

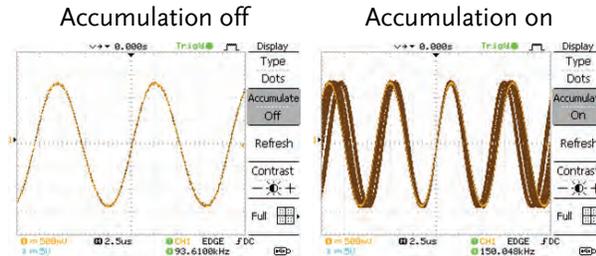

Adjusting the display contrast

- Procedure
1. Press the Display key. 
 2. Press *Contrast*. 
 3. Turn the Variable knob left to lower the contrast (dark display) or right to raise the contrast (bright display). 

Selecting the display grid

- Procedure
1. Press the Display key. 
 2. Press the grid icon repeatedly to select the grid. 


Parameters		Shows the full grid.
		Shows the outer frame and X/Y axis.
		Shows only the outer frame.

Horizontal View

The Horizontal view section describes how to configure the horizontal scale, position, waveform update mode, window zoom, and X-Y mode.

Moving the waveform position horizontally

Procedure The horizontal position knob moves the waveform left or right. The position indicator at the top of the display shows the center and current position.



Selecting the horizontal scale

Select horizontal scale To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).




Range 1ns/Div ~ 50s/Div, 1-2.5-5-10 increment

The timebase indicator at the bottom of the display updates the current horizontal scale.



Selecting the waveform update mode

Background	The display update mode is switched automatically or manually according to the horizontal scale.
Main mode	Updates the whole displayed waveform at once. The main mode is automatically selected when the horizontal scale (timebase) is fast. Horizontal scale $\leq 100\text{ms/div}$ Trigger All modes available
Roll mode	Updates and moves the waveform gradually from the right side of the display to the left. The Roll mode is automatically selected when the horizontal scale (timebase) is 50ms or slower. When in the Roll mode, an indicator appears at the bottom of the display. When in roll mode the record length is 2M (1 channel) or 1M (2 channel). <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Main mode</p>  <p>100µs</p> </div> <div style="text-align: center;"> <p>Roll mode</p>  <p>50ms ROLL</p> </div> </div> Timebase $\geq 50\text{ms/div}$ ($\leq 1.25\text{MS/s}$) Trigger Auto mode only

- Selecting the Roll mode manually
1. Press the Horizontal menu key. 
 2. Press *Roll*. The horizontal scale automatically becomes 50ms/div and the waveform starts scrolling from the right side of the display (If the oscilloscope is already in the Roll mode, there will be no change). 

Zooming the waveform horizontally


Procedure/ range 1. Press the Horizontal Menu key.



2. Press *Window*.




3. Use the horizontal position knob to move the zoom range sideways, and TIME/DIV knob to change the zoom range width.




The width of the bar in the middle of the display is the actual zoomed area.

Zoom range 1ns ~ 25s

4. Press *Window Zoom*. The specified range gets zoomed.



Example

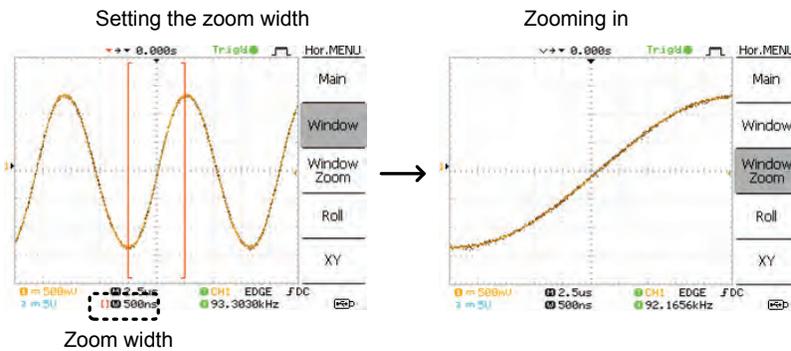


Viewing waveforms in the X-Y mode

Background The X-Y mode compares the voltage of Channel 1 and Channel 2 waveforms in a single display. This mode is useful for observing the phase relationship between the two waveforms.

- Procedure**
1. Connect the signals to Channel 1 (X-axis) and Channel 2 (Y-axis). 
 2. Make sure both Channel 1 and 2 are activated. 
 3. Press the Horizontal key. 
 4. Press XY. The display shows two waveforms in X-Y format; Channel 1 as X-axis, Channel 2 as Y-axis. 


Adjusting the X-Y mode waveform	Horizontal position	CH1 Position knob
	Horizontal scale	CH1 Volts/Div knob
	Vertical position	CH2 Position knob
	Vertical scale	CH2 Volts/Div knob

Example

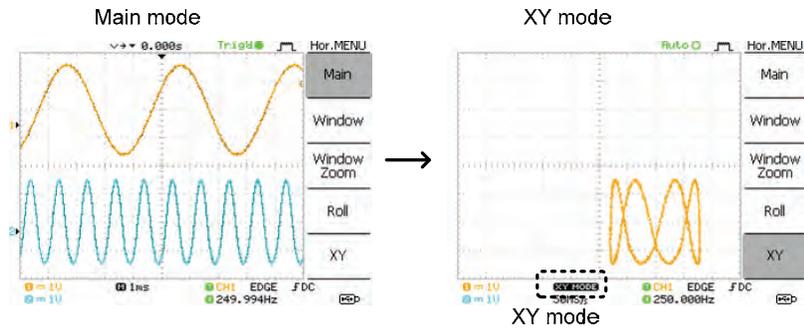

Horizontal Adjustment Menu

Background The horizontal adjustment menu allows markers to be set at different times relative to the Horizontal position marker at 0 seconds. Each marker is linked to the mark directly before and after (in time). There can be up to 30 markers linked together.


- | | | |
|---------------------------|--|---|
| | 1. Press the Horizontal menu key twice to enter the horizontal adjustment menu |  |
| | 2. Press <i>H Pos Adj</i> to toggle between coarse and fine adjustments. |  |
| | 3. Adjust the horizontal position with the horizontal position knob. |  |
| Set marker | 4. Press <i>Set/Clear</i> to create a marker at the current horizontal position. |  |
| Delete marker | 5. If there is already a marker at the current horizontal position press <i>Set/Clear</i> to delete the current marker. |  |
| Reset horizontal position | 6. Press <i>Reset</i> to reset the horizontal position to 0 seconds when the trigger is running, or to the last position before the trigger was stopped. |  |

Navigate markers 7. Press *Previous* to go to the previous marker.

Previous 180.0uS	●
---------------------	---

8. Press *Next* to go to the next marker.

Next 340.0uS	●
-----------------	---

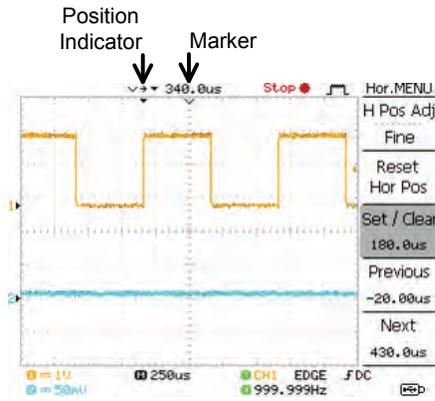

Vertical View (Channel)

The Vertical view section describes how to set the vertical scale, position, bandwidth limitation, coupling mode, and attenuation.

Moving the waveform position vertically


Procedure To move the waveform up or down, turn the vertical position knob for each channel. 

Selecting the vertical scale

Procedure To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up). 

Range 2mV/Div ~ 10V/Div, 1-2-5 increments

Selecting the coupling mode

Procedure 1. Press the Channel key. 
 2. Press *Coupling* repeatedly to select the coupling mode. 

Range  DC coupling mode. The whole portion (AC and DC) of the signal appears on the display.
 Ground coupling mode. The display shows only the zero voltage level as a horizontal line. This mode is useful for measuring the signal amplitude with respect to the ground level.




AC coupling mode. Only the AC portion of the signal appears on the display. This mode is useful for observing AC waveforms mixed with DC components.

Expand Vertical Scale Center / Ground


Background

Normally when the vertical scale is increased, the scaled image is centered from ground. However a signal with a voltage bias could be obscured when the vertical scale is increased. The Expand Center function expands the image from the center of the signal, rather than ground.

Expand Ground

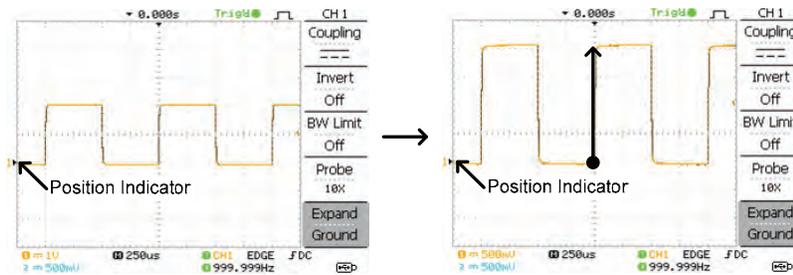

Expand Center

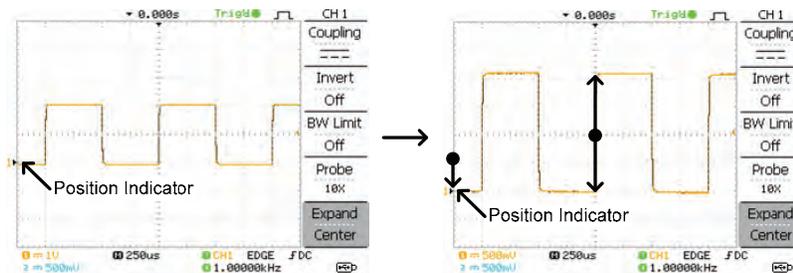


- Procedure
1. Press the Channel key. 
 2. Press F5 to toggle between Expand Center and Expand Ground. 
 3. To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up). 

The vertical scale indicator on the bottom left of the display changes accordingly.




Inverting the waveform vertically


- Procedure
1. Press the Channel key. 
 2. Press *Invert*. The waveform becomes inverted (upside down) and the Channel indicator in the display shows a down arrow. 

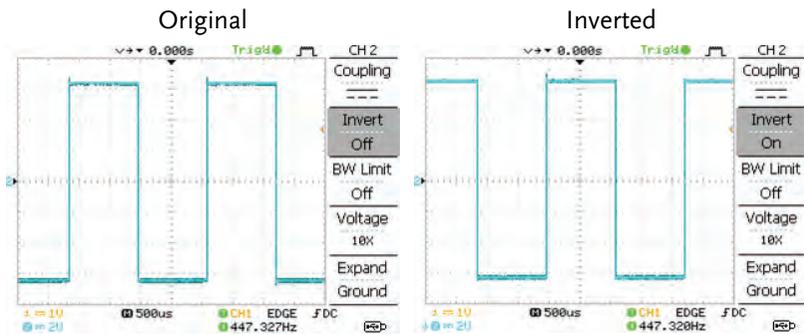Limiting the waveform bandwidth

Background Bandwidth limitation puts the input signal into a 20MHz (-3dB) low-pass filter. This function is useful for cutting off high frequency noise to see the clear waveform shape.

- Procedure**
1. Press the Channel key. 
 2. Press *BW Limit* to turn on or off the limitation. When turned on, the BW indicator appears next to the Channel indicator in the display.  




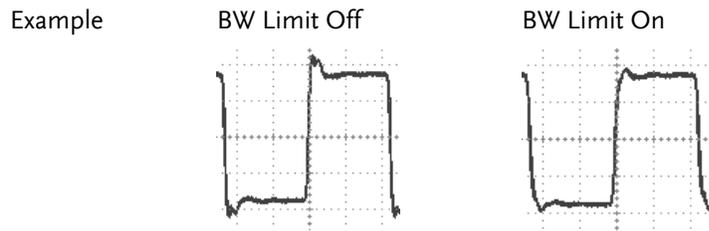Probe attenuation level and type

Background The probe can be set to either voltage or current. A signal probe has an attenuation switch to lower the original DUT signal level to the oscilloscope input range, if necessary. The probe attenuation selection adjusts the vertical scale so that the voltage or current level on the display reflects the real value, not the attenuated level.

- Procedure**
1. Press the Channel key. 

2. Press *F4* repeatedly to select voltage or current probes.



3. Use the variable knob to edit the voltage or current attenuation.

VARIABLE



4. The voltage/current scale in the channel indicator changes accordingly. There is no change in the waveform shape.

Range 0.1X~2000X (1-2-5 steps)





Note: The attenuation factor adds no influence on the real signal; it only changes the voltage/current scale on the display.

Trigger

The Trigger function configures the conditions by which the oscilloscope captures the incoming signals.


Trigger type

Edge	Triggers when the signal crosses an amplitude threshold in either a positive or negative slope.	
Video	Extracts a sync pulse from a video format signal and triggers on a specific line or field.	
Pulse	Triggers when the pulse width of the signal matches the trigger settings.	
Indicators	Edge/Pulse	Video
		
	(CH1, Edge, Rising edge, DC coupling)	(CH1, Video, Positive polarity, NTSC standard)

Trigger parameter

Trigger source	CH1, 2	Channel 1, 2 input signals
	Line	AC mains signal
	Ext	External trigger input signal
		
Trigger mode	Auto	The oscilloscope updates the input signal regardless of the trigger conditions (if there is no trigger event, the oscilloscope generates an internal trigger). Select this mode especially when viewing rolling waveforms at a slow timebase.

The Auto trigger status appears in the upper right corner of the display.



Single The oscilloscope acquires the input signals once when a trigger event occurs, then stops acquiring. Pressing the Single key again will repeat the process.



The Single trigger status appears in the upper right corner of the display.



Normal The oscilloscope acquires and updates the input signals only when a trigger event occurs.

The Normal trigger status appears in the upper right corner of the display.



Holdoff The holdoff function defines the waiting period before the GDS-1000A-U starts triggering again after a trigger point. The Holdoff function ensures a stable display.

Video standard (video trigger)

NTSC	National Television System Committee
PAL	Phase Alternative by Line
SECAM	SEquential Couleur A Mémoire

Sync polarity (video trigger)



	Positive polarity
	Negative polarity

Video line (video trigger) Selects the trigger point in the video signal.

field	1 or 2
-------	--------

	line	1~263 for NTSC, 1~313 for PAL/SECAM
Pulse condition (pulse trigger)	<p>Sets the pulse width (20ns ~ 10s) and the triggering condition.</p> <p>> Longer than = Equal to</p> <p>< Shorter than ≠ Not equal to</p>	
Trigger slope	 Triggers on the rising edge.  Triggers on the falling edge.	
Trigger coupling	<p>AC Triggers only on AC component.</p> <p>DC Triggers on AC+DC component.</p>	
Frequency rejection	<p>LF Puts a high-pass filter and rejects the frequency below 50kHz.</p> <p>HF Puts a low-pass filter and rejects the frequency above 50kHz.</p>	
Noise rejection	Rejects noise signals.	
Trigger level	 Using the trigger level knob moves the trigger point up or down.	

Configuring Holdoff

Background	The Holdoff function defines the waiting period before GDS-1000A-U starts triggering again after the trigger point. The holdoff function is especially useful for waveforms with two or more repetitive frequencies or periods that can be triggered.	
Panel operation	<ol style="list-style-type: none"> 1. Press the Trigger menu key twice.  2. To set the Holdoff time, use the Variable knob. The resolution depends on the horizontal scale. Range 40ns~2.5s 	

Pressing *Set to Minimum* sets the Holdoff time to the minimum, 40ns.



Note: The holdoff function is automatically disabled when the waveform update mode is in Roll mode.

Configuring the edge trigger

Procedure

1. Press the Trigger menu key.



2. Press *Type* repeatedly to select edge trigger.



3. Press *Source* repeatedly to select the trigger source.



Range Channel 1, 2, Line, Ext

4. Press *Mode* repeatedly to select the Auto or Normal trigger mode. To select the single trigger mode, press the Single key.



Range Auto, Normal

5. Press *Slope/coupling* to enter into the trigger slope and coupling selection menu.



6. Press *Slope* repeatedly to select the trigger slope, rising or falling edge.



Range Rising edge, falling edge

- 7. Press *Coupling* repeatedly to select the trigger coupling, DC or AC.

Coupling
AC

Range DC, AC

- 8. Press *Rejection* to select the frequency rejection mode.

Rejection
Off

Range LF, HF, Off

- 9. Press *Noise Rej* to turn the noise rejection on or off.

Noise Rej
Off

Range On, Off

- 10. Press *Previous* menu to go back to the previous menu.

Previous
Menu

Configuring the video trigger

- Procedure
- 1. Press the Trigger menu key.

MENU

 - 2. Press *Type* repeatedly to select video trigger. The video trigger indicator appears at the bottom of the display.


Type
Video


 - 3. Press *Source* repeatedly to select the trigger source channel.

Source
CH1

Range Channel 1, 2


4. Press *Standard* repeatedly to select the video standard.  
 Range NTSC, PAL, SECAM


5. Press *Polarity* repeatedly to select the video signal polarity.  
 Range positive, negative

6. Press *Line* repeatedly to select the video field line. Use the Variable knob to select the field.  
 VARIABLE 
 Field NTSC: 1 ~ 262 (Field 2), 1 ~ 263 (Field 1) PAL/SECAM: 1 ~ 312 (Field 2), 1 ~ 313 (Field1)

Configuring the pulse width trigger

- Procedure
1. Press the Trigger menu key. 

 2. Press *Type* repeatedly to select pulse width trigger. The pulse width trigger indicator appears at the bottom of the display.  

 3. Press *Source* repeatedly to select the trigger source.  
 Range Channel 1, 2, Ext

4. Press *Mode* repeatedly to select the trigger mode, Auto or Normal. To select the Single trigger mode, press the Single key.

Mode

Auto



Range Auto, Normal

5. Press *When* repeatedly to select the pulse condition. Then use the Variable knob to set the pulse width.

When <

20.0ns



Condition > , < , = , ≠
Width 20ns ~ 10s

6. Press *Slope/Coupling* to set trigger slope and coupling.

Slope /

Coupling

7. Press *Slope* repeatedly to select the trigger slope, which also appears at the bottom of the display.

Slope



Range Rising edge, falling edge

8. Press *Coupling* repeatedly to select the trigger coupling.

Coupling

AC

Range DC, AC

9. Press *Rejection* to select the frequency rejection mode.

Rejection

Off

Range LF, HF, Off

10. Press *Noise Rej* to turn the noise rejection on or off.



Range On, Off

11. Press *Previous* menu to go back to the previous menu.



Manually triggering the signal




Note: This section describes how to manually trigger the input signals when the oscilloscope does not capture them. This section applies to the Normal and Single trigger mode, since in the Auto trigger mode, the oscilloscope keeps updating the input signal regardless of the trigger conditions.

<p>To acquire the signal regardless of trigger conditions</p>	<p>To acquire the input signal regardless of the trigger condition, press the Force key. The oscilloscope captures the signals once.</p>	
<p>In the Single trigger mode</p>	<p>Press the Single key to start waiting for the trigger condition. To break out of the Single mode, press the Run/Stop key. The trigger mode changes to the Normal mode.</p>	 

Rear Panel USB Port Interface

The USB slave port on the rear panel can be set to auto detect, however occasionally the USB host type cannot be detected. The USB Port function allows the USB host type to be manually or automatically set for the rear panel.

USB connection	PC / Printer end	Type A, host
	GDS-1000A-U end	Type B, slave
Speed		1.1/2.0 (full speed)

Procedure	1. Connect the USB cable to the USB slave port on the GDS-1000A-U.	
	2. Insert the other end of the USB cable into the PC or Printer USB port.	
	3. Press the Utility key.	
	4. Press <i>More</i> twice.	
	5. Press <i>USB Port</i> repeatedly to set the host device .	
	Range	Printer, PC, Auto Detect

Remote Control Interface

The Remote control interface section describes how to set up the USB interface for PC connection. Remote control command details are described in the GDS-1000A-U Programming Manual. Note that printing to a PictBridge compatible printer and remote control cannot be supported at the same time as the same USB port is used.

USB connection	PC / Printer end	Type A, host
	GDS-1000A-U end	Type B, slave
	Speed	1.1/2.0 (full speed)


- Procedure
1. Connect the USB cable to the USB slave port. 
 2. The USB port may need to be configured if the USB port is not automatically detected. [page 104](#)
 3. When the PC asks for the USB driver, select dso_cdc_1000.inf (Windows XP) or dso_vista_cdc.inf (Vista 32bit) which are
 4. On the PC, activate a terminal application such as Hyper Terminal. To check the COM port No., see the Device Manager in the PC. For WindowsXP, select Control panel → System → Hardware tab.

5. Run this query command via the terminal application.
*idn?
This command should return the manufacturer, model number, serial number, and firmware version in the following format.
GW, GDS-1152A-U, XXXXXXX, V1.00
6. Configuring the command interface is complete. Refer to the programming manual for the remote commands and other details.

System Settings

The system settings show the oscilloscope’s system information and allow changing the language.

Viewing the system information

- | | |
|-----------|--|
| Procedure | <ol style="list-style-type: none"> 1. Press the Utility key. 
 2. Press <i>System Info</i>. The upper half of the display shows the following information. <ul style="list-style-type: none"> • Manufacturer • Serial number • Web address • Model • Firmware version 
 3. Press any other key to go back to the waveform display mode.  |
|-----------|--|

Selecting the language


- | | |
|-----------|---|
| Parameter | <p>Language selection differs according to the region to which the oscilloscope is shipped.</p> <ul style="list-style-type: none"> • English • Chinese (simplified) • Korean • German • Portuguese • Polish • Chinese (traditional) • Japanese • French • Russian • Italian • Spanish |
|-----------|---|

Procedure

1. Press the Utility key.



2. Press *Language* repeatedly to select the language.



SAVE/RECALL

The save function allows saving display images, waveform data, and panel settings into the oscilloscope's internal memory or to the front panel USB port. The recall function allows recalling the default factory settings, waveform data, and panel settings from the oscilloscope's internal memory or from USB.

File Structures

Three types of file are available: display image, waveform file, and panel settings.

Display image file format

Format	xxxx.bmp (Windows bitmap format)
Contents	The current display image in 234 x 320 pixels, color mode. The background color can be inverted (Ink saver function).

Waveform file format

Format	xxxx.csv (Comma-separated values format which can be opened in spreadsheet applications such as Microsoft Excel)
	Files can be saved as two different types of CSV formats. The GDS-1000A-U can recall any of the two formats

	Detail	Contains the waveform amplitude and time of each point (4k/1M/2M) relative to the trigger point.
	Fast	Only contains the waveform amplitude data for each point (4k/1M/2M).
Waveform type	CH1, 2	Input channel signal
	Math	Math operation result (page 63)
Storage location	Internal memory	The oscilloscope's internal memory, which can hold 15 waveforms.
	External USB Flash drive	A USB flash drive (FAT or FAT32 format) can hold practically an unlimited number of waveforms.
	Ref A, B	Two reference waveforms are used as a buffer to recall a waveform in the display. You have to save a waveform into internal memory or to USB, then copy the waveform into the reference waveform slot (A or B), and then recall the reference waveform into the display.
Waveform Memory Depth	<p>The memory depth is limited to 1 M points when both channels are activated or 2M points when only a single channel is activated. The signal must be triggered /stopped to have access to the full memory depth. Therefore when a signal is saved the waveform will be automatically stopped if it is not manually triggered /stopped first.</p> <p>There are a number of conditions when all of the available memory is not utilized due to a limited number of different sample rates. This can be caused by an un-triggered signal, or a time/div setting that is too fast to display all the points on screen.</p>	



Note: 2M point memory lengths are only available for time bases slower than 10ns/div on a single channel, and 1 M point memory lengths are only available for time bases slower than 25ns/div on two channels.

Waveform file
contents: other
data

A waveform file also includes the following information.


- Memory Length
- Source
- Vertical Units
- Vertical Position
- Horizontal Scale
- Horizontal Mode
- Firmware
- Mode
- Trigger Level
- Probe
- Vertical Scale
- Horizontal Units
- Horizontal Position
- Sampling Period
- Time
- Waveform Data

Setup file format

Format	xxxx.set (proprietary format)	
	A setup file saves or recalls the following settings.	
Contents	Acquire	• mode
	Cursor	• source channel • cursor on/off • cursor location
	Display	• dots/vectors • accumulation on/off • grid type
	Measure	• item
	Utility	• hardcopy type • ink saver on/off • language • Go-Nogo settings • Data Logging settings
	Horizontal	• display mode • scale • position
	Trigger	• trigger type • source channel • trigger mode • video standard • video polarity • video line • pulse timing • slope/coupling
	Channel (vertical)	• vertical scale • vertical position • coupling mode • invert on/off • bandwidth limit on/off • voltage/current (probe)
	Math	• operation type • source channel • vertical position • unit/div • FFT window

Using the USB file utilities

Background When a USB flash drive is inserted into the oscilloscope, file utilities (file deletion, folder creation and file/folder renaming) are available from the front panel.

- Procedure**
1. Insert a USB flash drive into the front panel USB port. 
 2. Press the Save/Recall key. Select any save or recall function. For example USB Destination in the Save image function.  (Example)
 
 3. Press *File Utilities*. The display shows the USB flash drive contents. 
 4. Use the Variable knob to move the cursor. Press *Select* to go into the folder or go back to the previous directory level.  

USB flash drive indicator When a USB flash drive is inserted into the oscilloscope, an indicator appears at the right bottom corner of the display. (The USB flash drive shouldn't be removed when a file is saved or retrieved from USB).



- Creating a new folder / renaming a file or folder
1. Move the cursor to the file or folder location and press *New Folder* or *Rename*. The file/folder name and the character map will appear on the display.

New Folder	
Rename	
 2. Use the Variable knob to move the pointer to the characters. Press *Enter Character* or *Back Space* to delete a character.

VARIABLE	
Enter Character	
Back Space	
 3. When editing is complete, press *Save*. The new/renamed file or folder will be saved.



Save	
------	--

- Deleting a folder or file
1. Move the cursor to the folder or file location and press *Delete*. The message "*Press F4 again to confirm this process*" appears at the bottom of the display.

Delete	
--------	---
 2. If the file/folder still needs to be deleted, press *Delete* again to complete the deletion. To cancel the deletion, press any other key.

Delete	
--------	---

Quick Save (HardCopy)

Background	<p>The Hardcopy key works as a shortcut for printing screen images directly to a printer or to save display images, waveform data, and panel settings onto a USB flash drive card.</p> <p>The Hardcopy key can be configured into three types of operations: save image, save all (image, waveform, setup) and printer.</p> <p>Using the Save/Recall key can also save files with more options. For details, see page 117.</p>	 				
Functionalities	<table border="0"> <tr> <td style="padding-right: 20px;">Save image (*.bmp)</td> <td>Saves the current display image into a USB flash drive.</td> </tr> <tr> <td style="padding-right: 20px;">Save all</td> <td> Saves the following items into a USB flash drive. <ul style="list-style-type: none"> • Current display image (*.bmp) • Current system settings (*.set) • Current waveform data (*.csv) </td> </tr> </table>	Save image (*.bmp)	Saves the current display image into a USB flash drive.	Save all	Saves the following items into a USB flash drive. <ul style="list-style-type: none"> • Current display image (*.bmp) • Current system settings (*.set) • Current waveform data (*.csv) 	
Save image (*.bmp)	Saves the current display image into a USB flash drive.					
Save all	Saves the following items into a USB flash drive. <ul style="list-style-type: none"> • Current display image (*.bmp) • Current system settings (*.set) • Current waveform data (*.csv) 					
Procedure	<ol style="list-style-type: none"> 1. Insert a USB flash drive into the front panel USB port.  2. Press the Utility key.  3. Press <i>Hardcopy Menu</i>.  4. Press <i>Function</i> repeatedly to select <i>Save Image</i> or <i>Save All</i>.  					

- 5. To invert the color in the display image, press *Ink Saver*. This turns Ink Saver on or off.



- 6. If *Save Image* was selected, press *Mem Leng* repeatedly to select *USB Normal* or *USB 1M/2M*. *USB Normal* and *USB 1M/2M* sets the waveforms to a 4k and 1M/2M memory length when saving, respectively.



1M memory length is available when both CH1 and CH2 are active; 2M memory length is available when a single channel is active only.

- 7. Press the Hardcopy key. The file or folder will be saved to the root directory of the USB flash drive.







Save

This section describes how to save data using the Save/Recall menu.

File type/source/destination

Item	Source	Destination
Panel setup (xxx.set)	<ul style="list-style-type: none"> Panel settings 	<ul style="list-style-type: none"> Internal memory: S1 ~ S15 External memory: USB
Waveform data (xxx.csv)	<ul style="list-style-type: none"> Channel 1, 2 Math operation result Reference waveform A, B 	<ul style="list-style-type: none"> Internal memory: W1 ~ W15 Reference waveform A, B External memory: USB
Display image (xxx.bmp)	<ul style="list-style-type: none"> Display image 	<ul style="list-style-type: none"> External memory: USB
Save All	<ul style="list-style-type: none"> Display image (xxx.bmp) Waveform data (xxx.csv) Panel settings (xxx.set) 	<ul style="list-style-type: none"> External memory: USB



Saving the panel settings

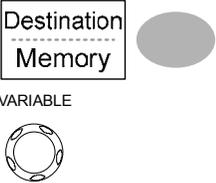- | | | |
|-----------|---|--|
| Procedure | <p>1. (For saving to USB flash drive) Insert the USB flash drive into the front panel USB port.</p> |  |
| | <p>2. Press the Save/Recall key twice to access the Save menu.</p> |  |
| | <p>3. Press <i>Save Setup</i>.</p> |  |
| | <p>4. Press <i>Destination</i> repeatedly to select the saved location. Use the Variable knob to change the internal memory location (S1 ~ S15).</p> |  |
| | <p>Memory Internal memory, S1 ~ S15</p> <p>USB USB, no practical limitation for the amount of files. When saved, the setup file will be placed in the root directory.</p> | |
| | <p>5. Press <i>Save</i> to confirm saving. When completed, a message appears at the bottom of the display.</p> |  |

Note  The file will not be saved if the power is turned off or the USB flash drive is removed before completion.

File utilities	To edit the USB drive contents (create/ delete/ rename files and folders), press <i>File Utilities</i> . For details, see page 113.		
----------------	---	---	---

Saving the waveform

- | | | |
|-----------|---|--|
| Procedure | 1. (For saving to USB flash drive) Insert the USB flash drive into the front panel USB port. |  |
| | 2. Press the Save/Recall key twice to access the Save menu. |  |
| | 3. Press <i>Save Waveform</i> . |  |
| | 4. Press <i>Source</i> . Use the Variable knob to select the source signal. | 
 |
| | 5. Press <i>Destination</i> repeatedly to select the file destination. Use the Variable knob to select the memory location. | 
 |
-
- | | |
|-----------|--|
| CH1 ~ CH2 | Channel 1 ~ 2 signal |
| Math | Math operation result (page 63) |
| RefA, B | Internally stored reference waveforms A, B |

Memory	Internal memory, W1 ~ W15
USB Normal	Save to the USB flash drive with a 4k waveform memory length.
USB 1M	Save to the USB flash drive with a 1M waveform memory length. For 2 channel operation only.
USB 2M	Save to the USB flash drive with a 2M waveform memory length. For single channel operation only.
Ref	Internal reference waveform, A/B

6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.



Note 

The file will not be saved if the power is turned off or the USB flash drive is removed from the USB port.

It takes approximately 1 min to save a 2M waveform to the USB drive in fast mode. Detailed mode may take over 10 times longer depending on the speed of the USB flash drive.


File utilities

To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.



Saving the display image



Background Saving the display image can be used as a screen capture or it can be used as a reference waveform.

- Procedure**
1. Insert the USB flash drive into the front panel USB port. (Image files can only be saved to USB) 
 2. Press the Save/Recall key twice to access the Save menu. 
 3. Press *Save Image*. 
 4. Press *Ink Saver* repeatedly to invert the background color (on) or not (off). 
 5. Note: *Destination* is set as USB. This cannot be changed. 
 6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display. 

Note  The file will not be saved if the power is turned off or the USB flash drive is removed before completion.

File utilities To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113. 

Saving all (panel settings, display image, waveform)

- | | | |
|-----------|---|--|
| Procedure | <p>1. (For saving to USB flash drive) Insert the USB flash drive into the front panel USB port.</p> |  |
| | <p>2. Press the Save/Recall key twice to access the Save menu.</p> |  |
| | <p>3. Press <i>Save All</i>. The following information will be saved.</p> |  |
| | <p>Setup file (Axxx.set)</p> | <p>Two types of setups are saved: the current panel setting and the last internally saved settings (one of S1 ~ S15).</p> |
| | <p>Display image (Axxx.bmp)</p> | <p>The current display image in bitmap format.</p> |
| | <p>Waveform data (Axxx.csv)</p> | <p>Two types of waveform data are saved: the currently active channel data and the last internally saved data (one of W1 ~ W15).</p> |
| | <p>4. Press <i>Ink Saver</i> repeatedly to invert the background color (on) or not (off) for the display image.</p> |  |
| | <p>5. Press <i>Destination</i>.</p> |  |
| | <p>USB Normal</p> | <p>Save to the USB flash drive with a 4k waveform memory length.</p> |

- USB 1M Save to the USB flash drive with a 1M waveform memory length. For 2 channel operation only.
- USB 2M Save to the USB flash drive with a 2M waveform memory length. For single channel operation only.

6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.



Note  The file will not be saved if the power is turned off or the USB flash drive is removed from the USB port.

It takes approximately 1 min to save a 2M waveform to the USB drive in fast mode. Detailed mode may take over 10 times longer depending on the speed of the USB flash drive.

7. The current waveform(s) (*.CSV), setup file (*.SET) and display image (*.BMP) are saved to a directory (ALLXXXX).

File utilities To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.




Recall

File type/source/destination

Item	Source	Destination
Default panel setup	<ul style="list-style-type: none"> • Factory installed setting 	<ul style="list-style-type: none"> • Current front panel
Reference waveform	<ul style="list-style-type: none"> • Internal memory: A, B 	<ul style="list-style-type: none"> • Current front panel
Panel setup (DSxxxx.set)	<ul style="list-style-type: none"> • Internal memory: S1 ~ S15 • External memory: USB flash drive 	<ul style="list-style-type: none"> • Current front panel
Waveform data (DSxxxx.csv)	<ul style="list-style-type: none"> • Internal memory: W1 ~ W15 • External memory: USB flash drive 	<ul style="list-style-type: none"> • Reference waveform A, B

Recalling the default panel settings


- Procedure
1. Press the Save/Recall key. 
 2. Press *Default Setup*. The factory installed setting will be recalled.  

Setting contents	The following is the default panel setting contents.	
Acquisition	Mode: Normal	
Channel	Coupling: DC	Invert: Off
	BW limit: Off	voltage: x1
Cursor	Source: CH1	Horizontal: None
	Vertical: None	
Display	Type: Vectors	Accumulate: Off
	Graticule: 	
Horizontal	Scale: 2.5us/Div	Mode: Main Timebase
	H Pos Adj: Fine	Hor Pos: 0
Math	Type: + (Add)	Channel: CH1+CH2
	Position: 0.00 Div	Unit/Div: 2V
Measure	Item: Vpp, Vavg, Frequency, Duty cycle, Rise Time	
Trigger	Type: Edge	Source: Channel1
	Mode: Auto	Slope: 
	Coupling: DC	Rejection: Off
	Noise Rejection: Off	
Utility	SaveImage, InkSaver On, Probe squarewave 1kHz 50% duty.	

Recalling a reference waveform to the display

- | | |
|-----------|--|
| Procedure | <ol style="list-style-type: none"> 1. The reference waveform must be stored in advance. See page 119 for details. 2. Press the Save/Recall key.  3. Press <i>Display Refs.</i> The reference waveform display menu appears.  4. Select the reference waveform, <i>Ref A</i> or <i>Ref B</i>, and press it. The waveform appears on the display and the period and amplitude of the waveform appears in the menu. 
↓
 5. To clear the waveform from the display, press <i>RefA/B</i> again.  |
|-----------|--|


Recalling panel settings

- | | |
|-----------|--|
| Procedure | <ol style="list-style-type: none"> 1. (For recalling to USB) Insert the USB flash drive into the front panel USB port.  2. Press the Save/Recall key.  |
|-----------|--|

3. Press *Recall Setup*.



4. Press *Source* repeatedly to select the file source, internal or external memory. Use the Variable knob to change the memory.

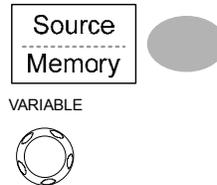

Memory Internal memory, S1 ~ S15
 USB USB flash drive, DSXXXX.SET. The setup file(s) must be placed in the root directory to be recognized.

5. Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display.




Note  The file will not be recalled if the power is turned off or the USB flash drive is removed before completion.

File utilities To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.



Recalling a waveform

Procedure 1. (For recalling to USB) Insert the USB flash drive into the front panel USB port.



2. Press the Save/Recall key.



3. Press *Recall Waveform*. The display shows the available source and destination options.



4. Press *Source* repeatedly to select the file source, internal memory or USB. Use the Variable knob to change the memory location (W1 ~ W15)/DSXXXX.CSV.




Memory	Internal memory, W1 ~ W15
USB	USB flash drive, DSXXXX.CSV. The waveform file(s) must be placed in the root directory to be loaded.

5. Press *Destination*. Use the Variable knob to select the memory location.




RefA, B	Internally stored reference waveforms A, B
---------	--

6. Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display.



Note  The file will not be recalled if the power is turned off or the USB flash drive is removed before completion.

File utilities

To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.




Recall Image

Background


Recall Image is useful for recalling reference images that would not be possible using the Recall Waveform function, such as in X-Y mode. Using the Recall Image function will superimpose the reference image on the screen.

Before recalling an image, an image must first be saved to USB, see page 121.

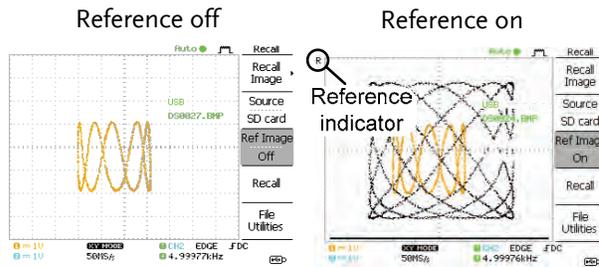

Procedure

1. Insert the USB flash drive into the front panel USB.



2. Press the Save/Recall key.



3. Press *Recall Image*. The display shows the available source and destination options.



4. Use the Variable knob to choose a file name (DSXXXX.BMP). VARIABLE

- USB The image file must be placed in the root directory to be recognized.

5. Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display.  

6. Press *Reference Image* to turn on / off the current image.  

Note  The file will not be recalled if the power is turned off or the USB flash drive is removed before completion.

File utilities To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*.  
For details, see page 113.



P RINT

The GDS-1000A-U is able to print screen images directly to a PictBridge compatible printer. The printed images can use the “Ink Saver” feature to print onto a white rather than a black background to reduce the amount of ink used. Note that printing and remote control cannot be used at the same time.

Print (Hardcopy)

Background	<p>The Hardcopy key works as a shortcut for printing screen images directly to a printer or to save display images, waveform data, and panel settings onto USB.</p> <p>The Hardcopy key can be configured into three types of operations: save image, save all (image, waveform, setup) and printer.</p>	 <p style="font-size: 8px; margin: 0;">Hardcopy</p>									
USB connection	<table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">Printer end</td> <td style="width: 30%;">Type A, host</td> <td style="width: 40%;"></td> </tr> <tr> <td>GDS-1000A-U end</td> <td>Type B, slave</td> <td></td> </tr> <tr> <td>Speed</td> <td>1.1/2.0 (full speed)</td> <td></td> </tr> </table>	Printer end	Type A, host		GDS-1000A-U end	Type B, slave		Speed	1.1/2.0 (full speed)		
Printer end	Type A, host										
GDS-1000A-U end	Type B, slave										
Speed	1.1/2.0 (full speed)										
Procedure	<ol style="list-style-type: none"> 1. Connect the USB cable to the USB slave port on the GDS-1000A-U rear panel. 										


2. Insert the other end of the USB cable into the printer USB port.

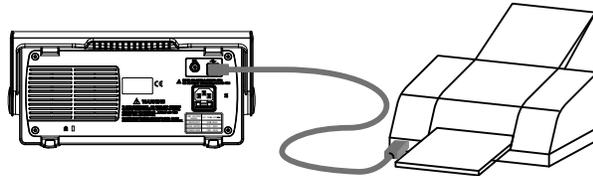

3. Press the Utility key.



4. Press the *More* key twice.




5. Press *USB Port* repeatedly to set the USB Port to Printer.



6. Press the Utility key.



7. Press *Hardcopy Menu*.



8. Press *Function* repeatedly to select *Printer*.



9. To invert the color in the display image, press *Ink Saver*. This turns Ink Saver on or off.



10. To change the default page size, press *Page Size*.



- Default Default printer page setting.
- 4 X 6 4 X 6 inches
- A4 Standard A4 size

11. Press the Hardcopy key.
The current screen image will be printed to the printer.



The Hardcopy key can be used to print to a printer each time until it is configured otherwise.




Note

If the error message “Printer Not Ready” is displayed, please check to ensure the printer is turned on, the USB cable is properly connected, and that the printer is ready.


M AINTENANCE

Two types of maintenance operations are available: calibrating the vertical resolution, and compensating the probe. Run these operations when using the oscilloscope in a new environment.

Vertical Resolution Calibration

- | | | |
|-----------|--|--|
| Procedure | 1. Press the Utility key. |  |
| | 2. Press the <i>More</i> key twice. |  |
| | 3. Press <i>Self Cal Menu</i> . |  |
| | 4. Press <i>Vertical</i> . The message "Set CAL to CH1, then press F5" appears at the bottom of the display. |  |
| | 5. Connect the calibration signal between the rear panel CAL out terminal and the Channel1 input. |  |
| | 6. Press F5. The calibration automatically starts. | |

- 7. The Channel1 calibration will complete in less than 5 minutes.



- 8. When finished, connect the calibration signal to the Channel 2 input and repeat the procedure.




- 9. When the calibration is complete the display will go back to the previous state.

Probe Compensation

Procedure


- 1. Connect the probe between the Channel1 input and the probe compensation output (2Vp-p, 1kHz square wave) on the front panel. Set the probe voltage attenuation to x10.

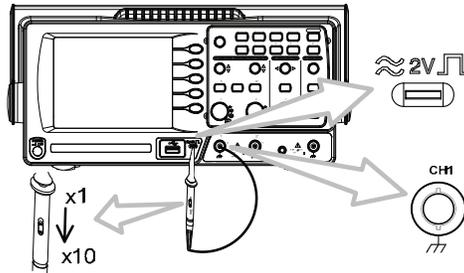


- 2. Press the Utility key.



- 3. Press *ProbeComp*.





4. Press *Wavetype* repeatedly to select the standard square wave.





5. Press the Autoset key. The compensation signal will appear in the display.



6. Press the Display key, then *Type* to select the vector waveform.



7. Turn the adjustment point on the probe until the signal edge becomes sharp.

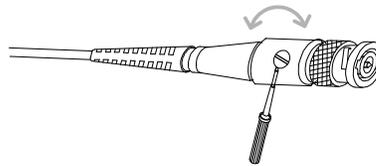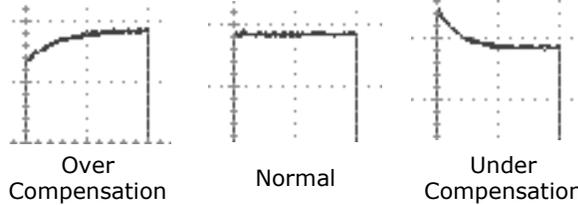

FAQ

- The input signal does not appear in the display.
- I want to remove some contents from the display.
- The waveform does not update (frozen).
- The probe waveform is distorted.
- Autoset does not catch the signal well.
- I want to clean up the cluttered panel settings.
- The accuracy does not match the specifications.
- The oscilloscope will not allow a 2M waveform to be saved.

The input signal does not appear in the display.

Make sure you have activated the channel by pressing the CH key (page 47).

I want to remove some contents from the display.

To clear the math result, press the Math key again (page 63).

To clear the cursor, press the Cursor key again (page 61).

To clear the Help contents, press the Help key again (page 46).

The waveform does not update (frozen).

Press the Run/Stop key to unfreeze the waveform. See page 50 for details. For trigger setting details, see page 96.

If this does not help, press the CH key. If the signal still does not appear, press the Autoset key.

The probe waveform is distorted.

You might need to compensate the probe. For details, see page 135. Note that the frequency accuracy and duty factor are not specified for probe compensation waveforms and therefore it should not be used for other reference purposes.

Autoset does not catch the signal well.

The Autoset function does not catch signals well under 30mV or 2Hz. Please operate the oscilloscope manually. See page 48 for details.

I want to clean up the cluttered panel settings.

Recall the default settings by pressing the Save/Recall key→Default Setting. For default setting contents, see page 45.

The saved display image is too dark on the background.

Use the Inksaver function which reverses the background color. For details, see page 121.

The accuracy does not match the specifications.

Make sure the device is powered on for at least 30 minutes, within +20°C~+30°C. This is necessary to stabilize the unit to match the specification.


The oscilloscope will not allow a 2M waveform to be saved.

Make sure that only 1 channel is active. Make sure that the signal has been triggered and that the STOP or Single key has been pressed. Ensure the time base is slower than 10 ns/div. See page 109.


APPENDIX

Fuse Replacement

- Procedure
1. Remove the power cord and remove the fuse socket using a minus driver.

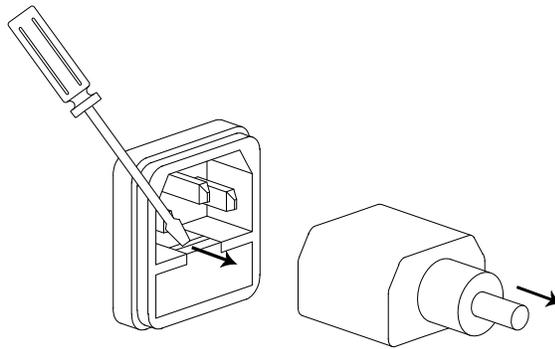

2. Replace the fuse in the holder.

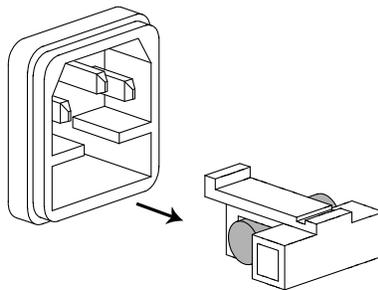

Ratings T1A, 250V

GDS-1000A-U Series Specifications

The specifications apply when the oscilloscope is powered on for at least 30 minutes under +20°C~+30°C.

Model-specific specifications

GDS-1072A-U	Bandwidth (-3dB)	DC coupling: DC ~ 70MHz AC coupling: 10Hz ~ 70MHz
	Bandwidth Limit	20MHz (-3dB)
	Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz) 1.5div or 15mV (25MHz~70MHz)
	External Trigger	~ 50mV (DC~25MHz)
	Sensitivity	~ 100mV (25MHz~70MHz)
	Rise Time	< 5ns approx.
GDS-1102A-U	Bandwidth (-3dB)	DC coupling: DC ~ 100MHz AC coupling: 10Hz ~ 100MHz
	Bandwidth Limit	20MHz (-3dB)
	Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz) 1.5div or 15mV (25MHz~100MHz)
	External Trigger	~ 50mV (DC~25MHz)
	Sensitivity	~ 100mV (25MHz~100MHz)
	Rise Time	< 3.5ns approx.
GDS-1152A-U	Bandwidth (-3dB)	DC coupling: DC ~ 150MHz AC coupling: 10Hz ~ 150MHz
	Bandwidth Limit	20MHz (-3dB)
	Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz) 1.5div or 15mV (25MHz~150MHz)
	External Trigger	~ 50mV (DC~25MHz)
	Sensitivity	~ 100mV (25MHz~100MHz)
	Rise Time	< 2.3ns approx.

Common specifications

Vertical	Sensitivity	2mV/div~10V/Div (1-2-5 increments)
	Accuracy	± (3% x Readout +0.1div + 1mV)
	Bandwidth	See model-specific specifications
	Rise Time	See model-specific specifications
	Input Coupling	AC, DC, Ground
	Input Impedance	1MΩ±2%, ~15pF
	Polarity	Normal, Invert
	Maximum Input	300V (DC+AC peak), CAT II
	Math Operation	+, -, ×, FFT, FFT rms
	Offset Range	2mV/div~50mV/div: ±0.4V 100mV/div~500mV/div: ±4V 1V/div~5V/div: ±40V 10V/div : ±300V
Trigger	Sources	CH1, CH2, Line, EXT
	Modes	Auto, Normal, Single, TV, Edge, Pulse
	Coupling	AC, DC, LF rej, HF rej, Noise rej
	Sensitivity	See model-specific specifications
	Holdoff	40ns ~ 2.5s
External trigger	Range	DC: ±15V, AC: ±2V
	Sensitivity	See model-specific specifications
	Input Impedance	1MΩ±2%, ~15pF
	Maximum Input	300V (DC+AC peak), CATII
Horizontal	Range	1ns/div~50s/div, 1-2.5-5 increment Roll: 50ms/div – 50s/div
	Modes	Main, Window, Window Zoom, Roll, X-Y
	Accuracy	±0.01%
	Pre-Trigger	10 div maximum
	Post-Trigger	1000 div
X-Y Mode	X-Axis Input	Channel 1
	Y-Axis Input	Channel 2
	Phase Shift	±3° at 100kHz
Signal Acquisition	Real-Time	1G Sa/s maximum
	Equivalent	25G Sa/s maximum
	Vertical Resolution	8 bits
	Record Length	Maximum; 2M points (1 channel), 1M points (2 channels)
	Acquisition	Normal, Peak Detect, Average
	Peak Detection	10ns (500ns/div ~ 50s/div)
	Average	2, 4, 8, 16, 32, 64, 128, 256

Cursors and Measurement	Voltage	V _{pp} , V _{amp} , V _{avg} , V _{rms} , V _{hi} , V _{lo} , V _{max} , V _{min} , Rise Preshoot/ Overshoot, Fall Preshoot/ Overshoot
	Time	Freq, Period, Rise Time, Fall Time, + Width, - Width, Duty Cycle
	Delay	FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF
	Cursors	Voltage difference (ΔV) and Time difference (ΔT) between cursors
	Auto Counter	Resolution: 6 digits, Accuracy: $\pm 2\%$ Signal source: All available trigger source except the Video trigger
Control Panel Function	Autoset	Automatically adjust Vertical Volt/div, Horizontal Time/div, and Trigger level
	Save/Recall	Up to 15 sets of measurement conditions and waveforms
Display	LCD	5.7 inch, TFT, brightness adjustable
	Resolution (dots)	234 (Vertical) x 320 (Horizontal)
	Graticule	8 x 10 divisions
	Display Contrast	Adjustable
Interface	USB Slave Connector	USB1.1 & 2.0 full speed compatible (flash disk not supported)
	USB Host connector	Image (BMP) and waveform data (CSV)
	Probe Compensation Signal	Frequency range 1kHz ~ 100kHz adjustable, 1kHz step
	Duty cycle	5% ~ 95% adjustable, 5% step
	Amplitude	2V _{pp} $\pm 3\%$
Power Source	Line Voltage	100V~240V AC, 47Hz~63Hz
	Power	18W, 40VA maximum
	Consumption	
	Fuse Rating	1A slow, 250V
Operation Environment	Ambient temperature	0 ~ 50°C
	Relative humidity	$\leq 80\%$, 40°C or below $\leq 45\%$, 41°C~50°C
Storage Environment	Storage Temperature:	-10°C~60°C, no condensation-
	Relative humidity	93% @ 40°C 65% @ 41°C~60°C
Dimensions	310(W) x 142(H) x 140(D) mm	
Weight	Approx. 2.5kg	

Probe Specifications

GDS-1072A-U Probe

Applicable model & probe	GDS-1072A-U GTP-070A-4*	
Position x 10	Attenuation Ratio	10:1
	Bandwidth	DC ~ 70MHz
	Input Resistance	10MΩ when used with 1MΩ input
	Input Capacitance	28pF~32pF
	Maximum Input Voltage	≤600Vpk, Derating with frequency
Position x 1	Attenuation Ratio	1:1
	Bandwidth	DC ~ 6MHz
	Input Resistance	1MΩ when used with 1MΩ input
	Input Capacitance	120pF~220pF
	Maximum Input Voltage	≤200Vpk, Derating with frequency
Operating Cond.	Temperature	-10°C ~ 50°C
	Relative Humidity	≤85%
Safety Standard	EN 61010-031 CAT II	

GDS-1102A-U Probe


Applicable model & probe	GDS-1102A-U GTP-100A-4*	
Position x 10	Attenuation Ratio	10:1
	Bandwidth	DC ~ 100MHz
	Input Resistance	10MΩ when used with 1MΩ input
	Input Capacitance	14.5~17.5pF approx.
	Maximum Input Voltage	≤600Vpk, Derating with frequency
Position x 1	Attenuation Ratio	1:1
	Bandwidth	DC ~ 6MHz
	Input Resistance	1MΩ when used with 1MΩ input
	Input Capacitance	85~115pF approx.
	Maximum Input Voltage	≤200Vpk, Derating with frequency
Operating Cond.	Temperature	-10°C ~ 50°C
	Relative Humidity	≤85% @35°C
Safety Standard	EN 61010-031 CAT II	

GDS-1152A-U Probe

Applicable model & probe	GDS-1152A-U GTP-150A-2*	
Position x 10	Attenuation Ratio	10:1
	Bandwidth	DC ~ 150MHz
	Input Resistance	10MΩ when used with 1MΩ input
	Input Capacitance	17pF approx.
	Maximum Input Voltage	500V CAT I, 300V CAT II (DC+Peak AC)Derating with frequency
Position x 1	Attenuation Ratio	1:1
	Bandwidth	DC ~ 6MHz
	Input Resistance	1MΩ when used with 1MΩ input
	Input Capacitance	47pF approx.
	Maximum Input Voltage	300V CAT I, 150V CAT II (DC+Peak AC)Derating with frequency
Operating Cond.	Temperature	-10°C ~ 55°C
	Relative Humidity	≤85% @35°C
Safety Standard	EN 61010-031 CAT II	

* Note: GW Instek reserves the right to change the probe model type (GTP-070A-4, GTP-100A-4, GTP-150A-2) at anytime without notice for probe model types of similar specification.

Dimensions

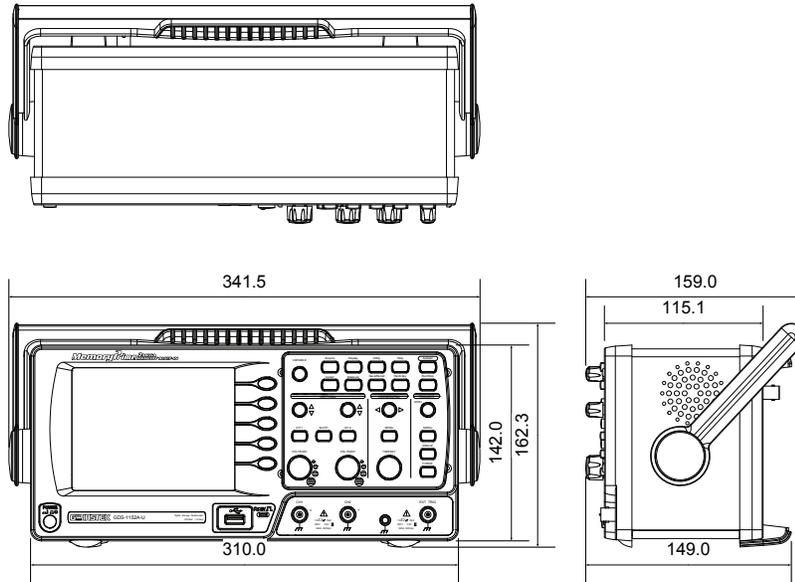

EC Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

No.7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan

GOOD WILL INSTRUMENT (SUZHOU) CO., LTD.

No. 69, Lushan Road, Suzhou New District Jiangsu, China

declares that the below mentioned product

GDS-1072A-U, GDS-1102A-U, GDS-1152A-U

Are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2004/108/EC) and Low Voltage Equipment Directive (2006/95/EC). For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Equipment Directive, the following standards were applied:

© **EMC**

EN 61326-1 :	Electrical equipment for measurement, control and laboratory use — EMC requirements (2006)	
EN 61326-2-1:		
Conducted and Radiated Emissions EN 55011: 2009+A1: 2010	Electrostatic Discharge EN 61000-4-2: 2009	
Current Harmonic EN 61000-3-2: 2006+A1: 2009+A2: 2009	Radiated Immunity EN 61000-4-3: 2006+A1: 2008+A2 :2010	
Voltage Fluctuation EN 61000-3-3: 2008	Electrical Fast Transients EN 61000-4-4: 2004+A1: 2010	
-----	Surge Immunity EN 61000-4-5: 2006	
-----	Conducted Susceptibility EN 61000-4-6: 2009	
-----	Power Frequency Magnetic Field EN 61000-4-8: 2010	
-----	Voltage Dips/ Interrupts EN 61000-4-11: 2004	

© **Safety**

Low Voltage Equipment Directive 2006/95/EC
Safety Requirements EN 61010-1: 2010 EN 61010-2-030: 2010

INDEX

2M memory length limits.....	110	menu tree.....	26
AC coupling.....	92	specification.....	143
Accumulating waveform.....	83	Cycle time measure.....	56
Acquisition.....	78	Data logging	
menu tree.....	25	menu tree.....	44
specification.....	142	overview.....	74
Addition.....	64	run.....	77
Amplitude measure.....	55	setup.....	75
Auto set.....	49	source.....	75
exception.....	50	DC coupling.....	91
specification.....	143	Declaration of conformity.....	147
type.....	49	Default setup.....	125
Auto trigger.....	96	contents.....	45
Automatic measurement.....	58	menu tree.....	32
menu tree.....	31	Delay measure.....	56
overview.....	55	Delay mode.....	80
specification.....	143	Delay Off.....	81
Automatic measurement gating		Delay On.....	80
.....	57	Display.....	84
Average acquisition.....	79	contrast setting.....	84
Average voltage measure.....	56	diagram.....	20
Bandwidth limitation.....	94	grid setting.....	84
Blackman window.....	64	menu tree.....	27
Calibration		specification.....	143
menu tree.....	41	Display image	
Calibration, vertical resolution		faq.....	138
.....	134	file format.....	109
Caution symbol.....	8	recall menu tree.....	33
Channel.....	47	save.....	121
faq.....	137	save menu tree.....	35
menu tree.....	25	Disposal instructions.....	11
Cleaning the instrument.....	10	Dot waveform.....	83
Configure remote control.....	106	Duty cycle measure.....	56
Coupling mode.....	91	Edge trigger.....	99
menu tree.....	25	menu tree.....	38
Cursor.....	61	EN 61010-031.....	144, 145
faq.....	137	EN61010	
		measurement category.....	9

pollution degree.....	11	faq	137
Environment.....	143	High voltage measure	55
safety instructions	10	Holdoff	98
Equivalent time sampling.....	82	Horizontal	85
Expand Center	92	basic operation	51
Expand Ground	92	cursor operation.....	61
External trigger	96	menu tree	28
input terminal	18	position.....	85
Falling time measure	56	scale	85
Faq	138	specification.....	142
FFT	65	Image	
menu tree	30	recall	129
overview	63, 64	Ink saver	
File format.....	109	in hardcopy	116
Firmware version.....	107	in print.....	132
Flattop window.....	64	in save all	122
Force trigger	103	Input frequency indicator	20
Frequency measure	56	Invert waveform	93
Frequency rejection	98	Language selection	107
Front panel diagram.....	15	List of features	13
Fuse replacement	140	Low voltage measure	56
safety instruction.....	10	Math	
Gated Automatic measurements		faq	137
.....	57	menu tree	29
General purpose signal	53	overview	63
Go-NoGo		Measurement	47
conditions	69	Memory Length	
menu tree	40	faq	139
overview	67	Model comparison.....	13
run.....	73	Multiplication.....	64
source	68	Negative peak measure.....	55
template	69	Noise rejection.....	98
when	68	Normal acquisition	78
Ground		Normal trigger.....	97
coupling	91	NTSC	97
symbol.....	8	Operating environment.....	143
terminal	17	Overshoot voltage measure	56
Hanning window.....	64	Page size	
Hardcopy	115	in print.....	133
Hardcopy - Print		PAL	97
menu tree	42	Peak detect acquisition.....	79
Hardcopy - Save All		Peak to peak measure.....	55
menu tree	41	Peak voltage measure.....	55
Hardcopy - Save image		Power on/off	
menu tree	42, 44	safety instruction	10
Help	46	switch overview.....	19

Preshoot voltage measure	56	Setting up the oscilloscope	21
Print.....	131	Setup	
Probe	135	default contents	45
attenuation level	94	file format	112
attenuation menu tree.....	25	how to save.....	118
compensation menu tree.....	43	recall	126
compensation signal overview..	53	recall menu tree	32
faq.....	138	save menu tree	34
peak detect demonstration.....	79	Single trigger	103
Pulse time measure	56	Single trigger mode	97
Pulse width trigger.....	101	Specifications.....	141
condition	98	faq	139
menu tree	38	Subtraction.....	64
Real time sampling.....	82	System information	107
Rear panel diagram.....	19	Timebase indicator	85
Recall.....	124	Trigger.....	96
default setup.....	125	coupling	98
image	129	edge.....	99
menu tree	32	force	103
reference waveform	126	indicator	96
setup	126	level knob.....	98
waveform.....	127	menu tree	37
Rectangular window.....	64	parameter.....	96
Reference waveform		pulse width.....	101
menu tree.....	34	specification.....	142
recall	126	status indicator	20
Remote control interface..104, 105		video	100
Rising time measure.....	56	UK power cord.....	12
Roll mode	86	USB	
Root mean square measure	56	file operation	113
Run/stop	50	file utilities menu tree.....	36
faq.....	138	Utility	
Save	117	key overview	16
display image.....	121	menu tree	40
menu tree	32	Vector waveform	83
setup	118	Vertical.....	91
specification.....	143	basic operation.....	52
waveform.....	119	cursor operation.....	62
Save all.....	122	position.....	91
menu tree.....	36	resolution calibration.....	134
SECAM	97	scale	91
Security lock slot.....	19	specification.....	142
Serial number	107	Video line.....	97
Service operation		Video trigger	100
about disassembly	9	menu tree	37
contact	139	Warning symbol	8
Setting the handle.....	21	Waveform	

expand waveform	92	save menu tree	35
file format	109	x-y mode	88, 89
invert waveform	93	zoom mode	87
Memory depth	110	Waveform accumulation.....	83
recall	127	X-Y mode	88, 89
recall menu tree	33	specification.....	142
roll mode.....	86	Zoom waveform.....	87
save	119		