



PX3

CE

RoHS


## PX3 Series

Differential Pressure / Air Velocity Transducer

### Product Overview

The PX3 transducer can measure either air pressure or velocity with the flip of a switch. The PX3 is available in three installation configurations: duct, panel or universal. Duct and panel models have two pressure and velocity ranges: 0-1 in. WC / 0-3,000 ft/min or 1-10 in. WC / 3,000-6,000 ft/min with four field-selectable sub-ranges. The universal model comes in one pressure/velocity range: 0-10 in. WC / 0-7,000 ft/min with seven field-selectable sub-ranges for pressure and eight for velocity. All variants are available with and without display. The PX3 has an IP65/NEMA 4 environmental rating and a 5-year limited warranty.

#### WARNING



• Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.  
• This equipment must only be installed and serviced by qualified electrical personnel.  
• Turn off all power supplying this equipment before working on or inside equipment.  
• Always use a properly rated voltage sensing device to confirm power is off.  
• Replace all devices, doors and covers before turning on power to this equipment.  
Failure to follow these instructions can result in death, serious injury or equipment damage.

This product is intended for use in HVAC and building environmental control applications. It is not intended for direct medical monitoring of patients.

Read and understand these instructions before installing this product.  
The installer is responsible for all applicable codes.

If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

### Product Identification

| PX3                   | Enclosure                         | Local Display        | NIST Cert* | Accuracy  | Range  | Wireless Technology                        |
|-----------------------|-----------------------------------|----------------------|------------|---|--|--|
| D = Duct<br>P = Panel | L = LCD Display<br>X = No Display | N = NIST<br>X = None | 0 = 1%     | 1 = Pressure:<br>0 to 1 in. WC /<br>0 to 250 Pa | 2 = Pressure:<br>0 to 10 in. WC /<br>250 to 2,500 Pa | S = Standard,<br>no wireless<br>technology |

\*8-point calibration

| PX3           | Enclosure                         | Local Display         | NIST Cert* | Accuracy   | Range   | Wireless Technology                        |
|---------------|-----------------------------------|-----------------------|------------|--|---|--|
| U = Universal | L = LCD Display<br>X = No Display | N = NIST*<br>X = None | 0 = 1%     | 5 = Pressure:<br>0 to 10 in. WC /<br>0 to 250 Pa | Velocity:<br>0 to 7,000 ft/min /<br>0 to 35 m/s | S = Standard,<br>no wireless<br>technology |

\*16-point calibration

Z208537-0A Page 1 of 8 ©2023 Veris Industries 12345 SW Leveton Drive, Tualatin, OR 97062 USA / 800.354.8556 or +1.503.598.4564 / support@veris.com 0523  
Alta Labs, Ensercept, Inspector, Hawkeye, Trustat, Aerospand, Veris, and the Veris 'V' logo are trademarks or registered trademarks of Veris Industries, LLC, in the USA and/or other countries. Other companies' trademarks are hereby acknowledged to belong to their respective owners.

## Installation Guide Pressure Monitoring

### Specifications (cont.)

|                              |  |
|------------------------------|--|
| <b>Zero Drift (1-year)</b>   | 1 in. WC (250 Pa) models: 2.5% FS typ; 10 in. WC (2,500 Pa) models: 0.25% FS typ.  |
| <b>Zero Adjust</b>           | Pushbutton auto-zero and digital input (2-pos terminal block)  |
| <b>Operating Environment</b> | -20 to 60 °C (-4 to 140 °F)***   |
| <b>Altitude of Operation</b> | 0 to 3000 m  |
| <b>Pollution Degree</b>      | 2  |
| <b>Humidity Range</b>        | 100% RH, non-condensing  |
| <b>Mounting Location</b>     | For indoor or outdoor use (display will not function below 0 °C (32 °F))   |
| <b>Fittings</b>              | Brass barb; 0.24" (6.1 mm) o.d.  |
| <b>Suggested Cable</b>       | Shielded:<br>Belden #9939 (22 AWG) 3-wire multi-conductor (or similar)<br>Belden #9940 (22 AWG) 4-wire multi-conductor (or similar)<br>Belden #9939 (22 AWG) 5-wire multi-conductor (or similar)<br><br>Unshielded:<br>Belden #8443 (22 AWG) 3-wire multi-conductor (or similar)<br>Belden #8444 (22 AWG) 4-wire multi-conductor (or similar)<br>Belden #8445 (22 AWG) 5-wire multi-conductor (or similar) |
| <b>Limited Warranty</b>      | 5 years  |
| <b>Environmental Rating</b>  | IP65, NEMA 4   |
| <b>Flammability Rating</b>   | UL 94 5VA fire retardant ABS, plenum rated   |

EMC Conformance: EN 61000-6-3 and A1, Class B, EN 61000-6-1, EN61326-1 and EN61326-2-3.


\* Class 2/I power source.

\*\* For measured values between 200 and 7000 ft/min (1 and 35 m/s).

\*\*\* Display will not function below 0 °C (32 °F).


### Installation, Wiring & Configuration

#### 1. Plan the installation. Panel or duct mount?

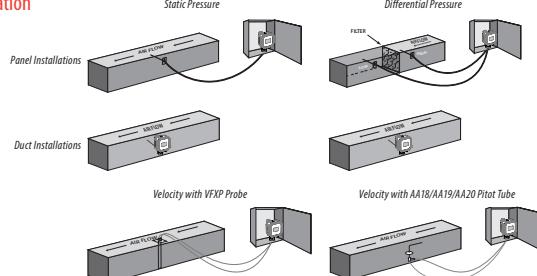

For velocity applications, use the VXP Series air velocity/measurement probe or AA18, AA19 or AA20 velocity pitot tubes. For use with the PX3P (panel) and PX3U (universal) models in Velocity mode only. Sold separately.

### Dimensions

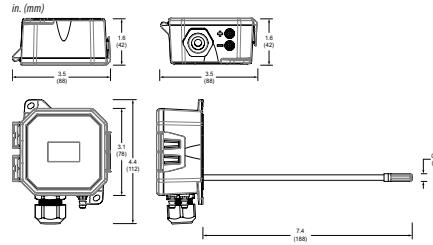

### Specifications

|                               |   |
|-------------------------------|---|
| <b>Media Compatibility</b>    | Dry air or inert gas  |
| <b>Input Power</b>            | Three-wire Volt mode: 24 Vac or 12-30 Vdc*<br>Two-wire mA mode: 12-30 Vdc*  |
| <b>Output Power</b>           | Field-selectable 2-wire, loop-powered 4-20 mA<br>Minimum input voltage for 4 to 20 mA operation: 250 Ω loop = 12 Vdc; 500 Ω loop = 19 Vdc (DC only, clipped and capped); 24 Vac/dc or 3-wire 0.5V-10.0V<br>Minimum load resistance for Volt operation: 5 kΩ   |
| <b>Pressure Range 1</b>       | <b>Pressure Mode</b><br>Unidirectional: 0-1/0.25/0.5/1.0 in. WC, switch selectable<br>Bidirectional: ±0.1/±0.25/±0.5/±1.0 in. WC, switch selectable<br>Unidirectional: 25 Pa/50 Pa/100 Pa/250 Pa, switch selectable<br>Bidirectional: ±25 Pa/±50 Pa/±100 Pa/±250 Pa, switch selectable                              |
| <b>Velocity Mode</b>          | 500/1,000/2,000/3,000 ft/min<br>2.5/5/10/15 m/s   |
| <b>Pressure Range 2</b>       | <b>Pressure Mode</b><br>Unidirectional: 1.0/2.5/5/10 in. WC, switch selectable<br>Bidirectional: ±1.0/±2.5/±5/±10 in. WC, switch selectable<br>Unidirectional: 250/500/1,000/2,500 Pa, switch selectable<br>Bidirectional: ±250/±500/±1,000/±2,500 Pa, switch selectable  |
| <b>Velocity Mode</b>          | 3,000/4,000/5,000/6,000 ft/min<br>3.0/4.0/5.0/6.0 m/s   |
| <b>Pressure Range 5</b>       | <b>Pressure Mode</b><br>Unidirectional: 0.1/0.25/0.5/1.2/5/10 in. WC, switch selectable<br>Bidirectional: ±0.1/±0.25/±0.5/±1.2/±5/±10 in. WC, switch selectable<br>Unidirectional: 25/50/100/250/500/1,000/2,500 Pa, switch selectable<br>Bidirectional: ±25/±50/±100/±250/±500/±1,000/±2,500 Pa, switch selectable |
| <b>Velocity Mode</b>          | 500/1,000/2,000/3,000/4,000/5,000/6,000/7,000 ft/min<br>2.5/5/10/15/20/25/30/35 m/s   |
| <b>Response Time</b>          | Standard: T95 in 20 sec, Fast: T95 in 2 sec, DIP switch selectable  |
| <b>Mode</b>                   | Unidirectional or bidirectional, DIP switch selectable  |
| <b>Display (Option)</b>       | Pressure mode: Signed 3-1/2 digit LCD, indicates pressure, overrange indicator<br>Velocity mode: Signed 4-1/2 digit LCD, indicates velocity, overrange indicator  |
| <b>Proof Pressure</b>         | 3 psid (20,600 Pa)  |
| <b>Burst Pressure</b>         | 5 psid (34,500 Pa)  |
| <b>Pressure Mode Accuracy</b> | ±1% FS (combined linearity and hysteresis)  |
| <b>Velocity Mode Accuracy</b> | ±90 ft/min (±0.45 m/s) plus 5% of measured value**  |
| <b>Temperature Effect</b>     | 10 in. WC (250 Pa) models: 0.05%°C; 10 in. WC (2,500 Pa) models: 0.01%°C<br>(Relative to 25 °C) 0 to 50 °C (32 to 122 °F)   |

Z208537-0A Page 2 of 8 ©2023 Veris Industries 12345 SW Leveton Drive, Tualatin, OR 97062 USA / 800.354.8556 or +1.503.598.4564 / support@veris.com 0523  
Alta Labs, Ensercept, Inspector, Hawkeye, Trustat, Aerospand, Veris, and the Veris 'V' logo are trademarks or registered trademarks of Veris Industries, LLC, in the USA and/or other countries. Other companies' trademarks are hereby acknowledged to belong to their respective owners.

## Installation Guide Pressure Monitoring

### Installation, Wiring & Configuration (cont.)

2. For duct mount applications, thread the probe into the back of the device housing, as shown in the dimensional drawing.



3. Configure the internal tubing for the selected installation method as described below.

#### Duct mount tubing configuration:


- Connect sensor port A to the rear brass barb marked as “-” on the underside of the device housing.
- Connect sensor port B to the probe in the back of the device housing.

#### Panel mount tubing configuration:

- Connect sensor port A to the rear brass barb marked as “-” on the underside of the device housing.
- Connect sensor port B to the front brass barb marked as “+” on the underside of the device housing.

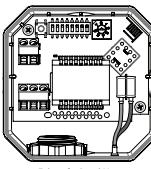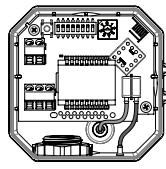


4. Mount the transducer (see the screw hole diagram below).

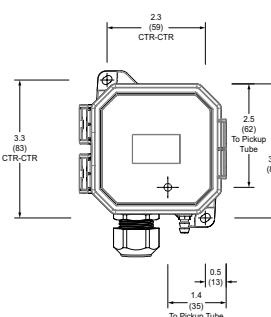

Installation, Wiring  
& Configuration  
(cont.)

5. For applications using conduit, remove the cable gland nut on the bottom of the unit. Thread a standard 1/2-inch NPT female threaded coupler onto the body of the cable gland. Connect the opposite end of the coupler to the conduit.

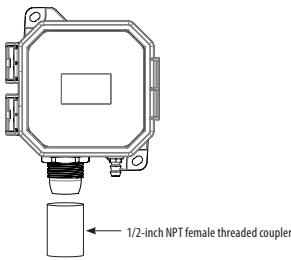

6. Set DIP switches to desired settings.\*

|   |  |
|---|--|
| DIP Switch 1: Scale<br>ON = Pascal (m/s)<br>OFF = in. WC (ft/min)       | DIP Switch 5: Output<br>ON = 4-20 mA<br>OFF = Voltage      |
| DIP Switch 2: Mode<br>ON = Velocity<br>OFF = Pressure                   | DIP Switch 6: Volt Scale<br>ON = 0-5 Vdc<br>OFF = 0-10 Vdc |
| DIP Switch 3: Direction**<br>ON = Unidirectional<br>OFF = Bidirectional | DIP Switch 7: Unused                                       |
| DIP Switch 4: Response<br>ON = Slow<br>OFF = Fast                       | DIP Switch 8: Unused                                       |

\*DIP switches are all set to OFF by the factory.

\*\*Velocity mode is unidirectional regardless of DIP switch setting.

DIP Switch Settings

| Scale     | Mode                     | Direction            | Response  | Output       | Volt Scale | Unused    | Unused           |
|-----------|--------------------------|----------------------|-----------|--------------|------------|-----------|------------------|
| ON<br>OFF | Pascal/mPS<br>in. WC/FPM | Velocity<br>Pressure | Uni<br>Bi | Slow<br>Fast | mA<br>Volt | 5V<br>10V | Unused<br>Unused |
|           |                          |                      |           |              |            |           |                  |

7. Set rotary switch to the desired setting. Align the arrow (not the slot) on the rotary switch to the desired full-scale range. LCD models momentarily indicate the selected range.

Installation, Wiring  
& Configuration  
(cont.)

Rotary Switch Settings (cont.)

Range 5 Model, Field Selectable (P) Pressure or (V) Velocity Mode,  
Field Selectable (WC / ft/min or Pa / m/s)


| (P) Pressure Mode | (V) Velocity Mode |
|-------------------|-------------------|
| 0 to 0.1 in. WC   | 0 to 500 ft/min   |
| 1 to 0.25 in. WC  | 1 to 1,000 ft/min |
| 2 to 0.5 in. WC   | 2 to 2,000 ft/min |
| 3 to 1 in. WC     | 3 to 3,000 ft/min |
| 4 to 2.5 in. WC   | 4 to 4,000 ft/min |
| 5 to 5 in. WC     | 5 to 5,000 ft/min |
| 6 to 10 in. WC    | 6 to 6,000 ft/min |
| 7 to 10 in. WC    | 7 to 7,000 ft/min |


| (P) Pressure Mode | (V) Velocity Mode |
|-------------------|-------------------|
| 0 to 25 Pa        | 0 to 2.5 m/s      |
| 1 to 50 Pa        | 1 to 5 m/s        |
| 2 to 100 Pa       | 2 to 10 m/s       |
| 3 to 250 Pa       | 3 to 15 m/s       |
| 4 to 500 Pa       | 4 to 2.5 m/s      |
| 5 to 1000 Pa      | 5 to 5 m/s        |
| 6 to 2000 Pa      | 6 to 10 m/s       |
| 7 to 2500 Pa      | 7 to 15 m/s       |

8. Connect the transmitter to the control system and power supply as indicated below. Optional: Connect the ZERO terminals to the digital output (contact closure) of the control system.

2-wire, 4-20 mA Current Loop Output

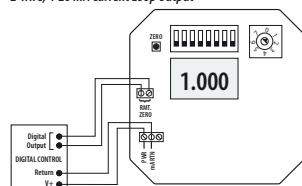

3-wire, 0-5 V/0-10 V Voltage Output

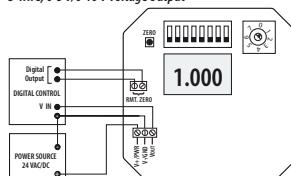

Installation, Wiring  
& Configuration  
(cont.)

Rotary Switch Settings

Range 1 Model, Field Selectable (WC / ft/min or Pa / m/s)

| (P) Pressure Mode | (V) Velocity Mode |
|-------------------|-------------------|
| 0 to 0.1 in. WC   | 0 to 500 ft/min   |
| 1 to 0.25 in. WC  | 1 to 1,000 ft/min |
| 2 to 0.5 in. WC   | 2 to 2,000 ft/min |
| 3 to 1 in. WC     | 3 to 3,000 ft/min |
| 4 to 2.5 in. WC   | 4 to 4,000 ft/min |
| 5 to 5 in. WC     | 5 to 5,000 ft/min |
| 6 to 10 in. WC    | 6 to 6,000 ft/min |
| 7 to 10 in. WC    | 7 to 7,000 ft/min |

| (P) Pressure Mode | (V) Velocity Mode |
|-------------------|-------------------|
| 0 to 25 Pa        | 0 to 2.5 m/s      |
| 1 to 50 Pa        | 1 to 5 m/s        |
| 2 to 100 Pa       | 2 to 10 m/s       |
| 3 to 250 Pa       | 3 to 15 m/s       |
| 4 to 500 Pa       | 4 to 2.5 m/s      |
| 5 to 1000 Pa      | 5 to 5 m/s        |
| 6 to 2000 Pa      | 6 to 10 m/s       |
| 7 to 2500 Pa      | 7 to 15 m/s       |

Range 2 Model, Field Selectable (WC / ft/min or Pa / m/s)

| (P) Pressure Mode | (V) Velocity Mode |
|-------------------|-------------------|
| 0 to 1 in. WC     | 0 to 3,000 ft/min |
| 1 to 2.5 in. WC   | 1 to 4,000 ft/min |
| 2 to 5 in. WC     | 2 to 5,000 ft/min |
| 3 to 10 in. WC    | 3 to 6,000 ft/min |
| 4 to 25 in. WC    | 4 to 3,000 ft/min |
| 5 to 50 in. WC    | 5 to 4,000 ft/min |
| 6 to 100 in. WC   | 6 to 5,000 ft/min |
| 7 to 10 in. WC    | 7 to 6,000 ft/min |

| (P) Pressure Mode | (V) Velocity Mode |
|-------------------|-------------------|
| 0 to 250 Pa       | 0 to 15 m/s       |
| 1 to 500 Pa       | 1 to 20 m/s       |
| 2 to 1,000 Pa     | 2 to 25 m/s       |
| 3 to 2,500 Pa     | 3 to 30 m/s       |
| 4 to 500 Pa       | 4 to 15 m/s       |
| 5 to 1,000 Pa     | 5 to 20 m/s       |
| 6 to 2,000 Pa     | 6 to 25 m/s       |
| 7 to 2,500 Pa     | 7 to 30 m/s       |

Installation, Wiring  
& Configuration  
(cont.)

9. Wait five seconds, then press and hold the ZERO pushbutton for two seconds or provide contact closure on the AUX ZERO terminal. This will reset the output and display to zero pressure. For best accuracy, press the ZERO button while both ports are open to atmospheric pressure. To protect the unit from accidental zero, this feature is enabled only when the detected pressure is within about 0.5 in. WC (125 Pa) of factory calibration.

10. Connect desired external tubing to the PX3.

PX3 Series devices employ high performance sensors and sophisticated temperature compensation circuitry. The sensor achieves its best accuracy after an initial warm-up period. During the first few minutes of operation, readings at zero pressure and the lowest pressure ranges may appear erroneous. Following this initial warm-up period, the PX3 device maintains its specified accuracy and stability.

The LCD momentarily indicates range 'SET' when a selection is made. Pressure is normally indicated on the display. Units are in inches water column (in. WC), Pascals (Pa) or kilopascals (kPa) as indicated on the display. The display shows 'OVER' when the pressure is over range.

China RoHS Compliance  
Information

Environment-Friendly Use Period (EFUP) Table

| Part Name         | 有害物质   | Hazardous Substances |
|-------------------|--------|----------------------|
| Part Name         | 铅 (Pb) | 汞 (Hg)               |
| 电子件<br>Electronic | X      | O                    |

本表格根据SJ/T11364的规定编制。

O: 表示该有害物质在该部件的所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

(企业可在此处, 根据实际情况对上表中打 'X' 的技术原因进行进一步说明。)

This table is made according to SJ/T 11364.

O: indicates the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572.

Z000087-08

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes d'exemption de licence RSS d'Industry Canada. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.