

Quick Clean[™] Fiber Endface Cleaners

Instruction Sheet

The Quick Clean cleaners let you quickly clean the endfaces of these types of fiber optic connectors:

- Quick Clean 1.25 mm: Cleans 1.25 mm LC and MU connectors
- Quick Clean 2.5 mm: Cleans 2.5 mm SC, ST, FC, and E200 connectors
- Quick Clean MPO: Cleans MPO and MTP[®] connectors

To See Other Languages

This instruction sheet is available in other languages on the Fluke Networks website.

Safety Information

Warning

To prevent possible damage to your eyes caused by hazardous radiation:

- Do not look directly into optical connectors. Some optical equipment emits invisible radiation that can cause permanent damage to your eyes.
- Before you clean an endface, turn off any optical sources (laser or LED) that are connected to the fiber.

Caution

To prevent damage to the cleaner and to fiber optic connectors:

- Use the cleaner to clean only the correct type of connector. If you use the cleaner on the incorrect type of connector, you can cause damage to the cleaner and the connector.
- Keep the guide cap on the cleaner with the cover closed when you do not use the cleaner. Keep the guide cap clean.
- Do not touch the tip of the cleaner. Do not pull the cloth away from the tip of the cleaner.




PN 4858825 December 2016

©2016 Fluke Corporation

All product names are trademarks of their respective companies

- Do not use the cleaner when the spool is empty. See Figure 1.
- When you do not use the cleaner for long periods, keep it away from direct sunlight, high temperatures, and high humidity.

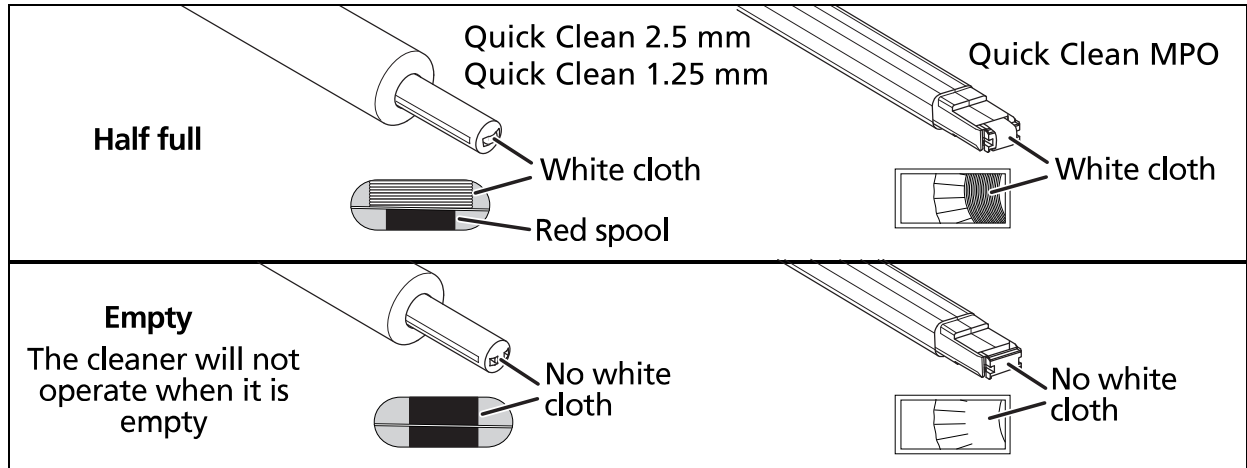

GQZ04.EPS


Figure 1. Window that Shows How Much Cloth is in the Cleaner

How to Use the Cleaner

To clean endfaces in adapters, see Figure 2. To clean endfaces on plugs, see Figure 3.


Note

Do not use too much force when you push the cleaner. If you cannot easily push the cleaner into the connector, make sure that the cleaner is not empty and there is no unwanted material in the connector.

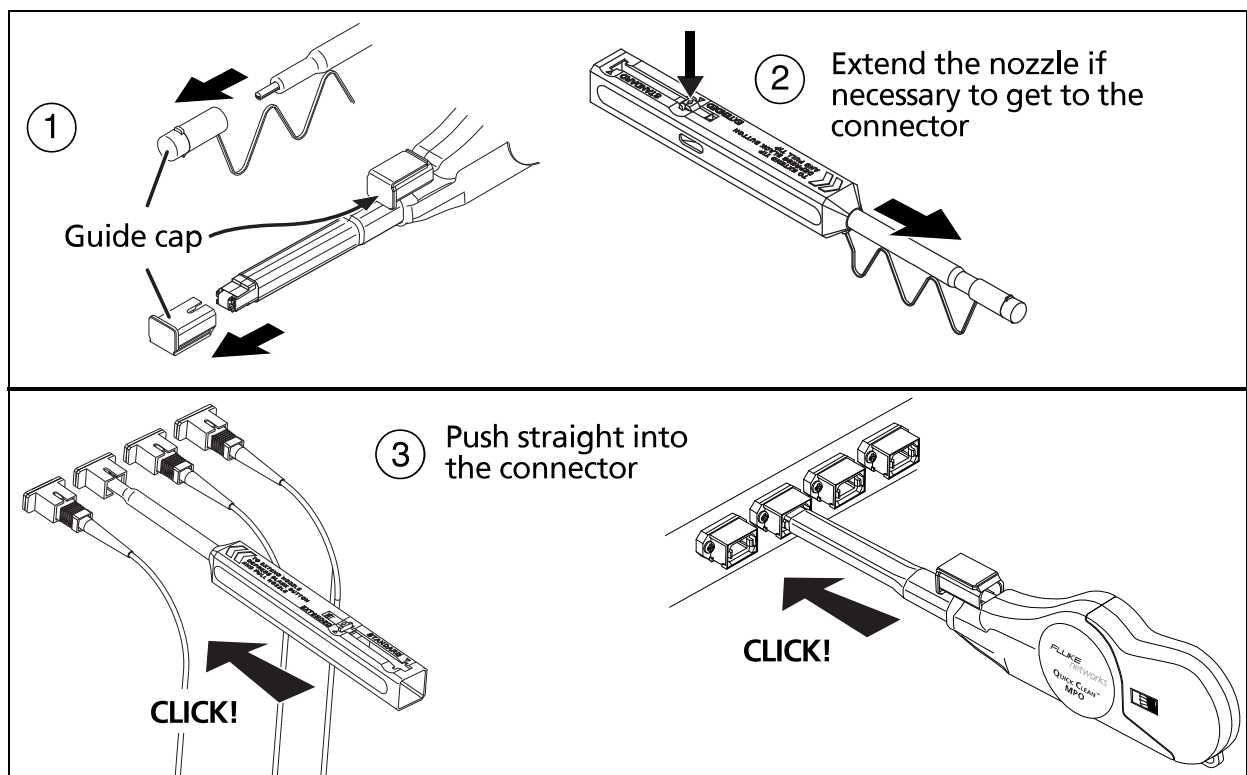

GQZ01.EPS

Figure 2. How to Clean Endfaces in Adapters

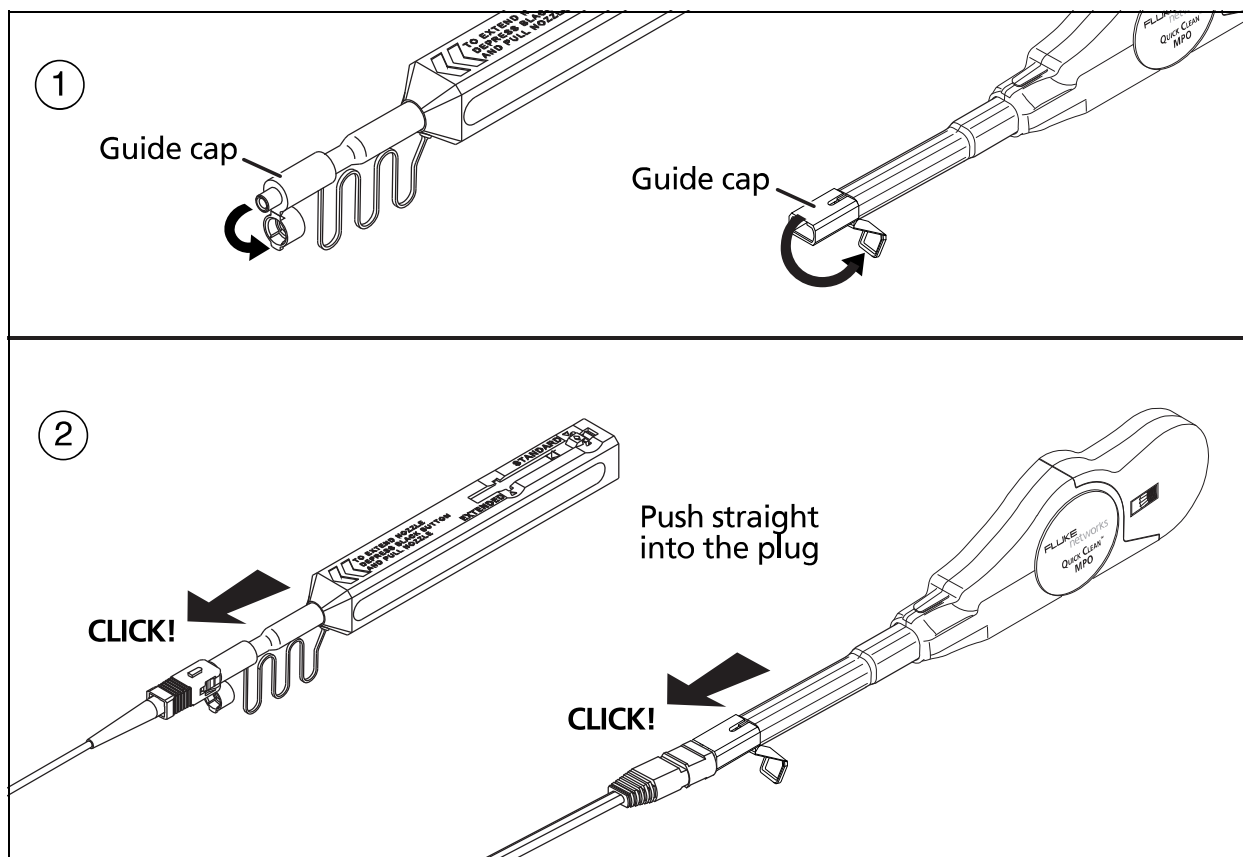

GQZ02.EPS

Figure 3. How to Clean Endfaces on Plugs

Models of Cleaners

To purchase cleaners, contact an authorized Fluke Networks distributor.

Description	Fluke Networks Model Number
Cleaner for 1.25 mm LC and MU connectors, 5-pack	QuickClean-1.25-5P
Cleaner for 1.25 mm LC and MU connectors, single	QuickClean-1.25-1P
Cleaner for 2.5 mm SC, ST, FC, E200 connectors, 5-pack	QuickClean-2.5-5P
Cleaner for 2.5 mm SC, ST, FC, E200 connectors, single	QuickClean-2.5-1P
Cleaner for MPO/MTP connectors, 5-pack	QuickClean-MPO-5P
Cleaner for MPO/MTP connectors, single	QuickClean-MPO-1P
Cleaner kit: 1 QuickClean-1.25-1P, 1 QuickClean-2.5-1P, 1 QuickClean-MPO-1P, 1 solvent pen, and 1 fiber optic cleaning cube	NFC-KIT-CASE-E