

## Getting Started

### Default Recorder Settings

7-day chart rotation  
0 to 100°F (KT800/02/03/09/56)  
0 to 1000°F (KT804)

### Quick Start

1. Remove the protective pen caps.

Plug in thermocouple probe(s).

**Note:** Be sure to observe proper polarity when connecting wires from transmitter. (See figure 3) The **KT809** features an external K-TC connector. Connect the thermocouple probe provided to the external K-TC connector. Use the waterproof tape provided to wrap the connector and jack to create a watertight seal.

2. Insert batteries and plug in AC adapter. (See figure 3.) (**KT800/09** requires 4 AA batteries only.) The unit will power on.
3. The instrument will move pen(s) to the appropriate readings.
4. Install the chart that matches the Dip Switch settings

Press the **Pen Home** key to move the pens to the outside of the chart. The pen is automatically raised off the chart.

Remove the old chart, place the new chart on the *Chart Hub* being certain that the edge of the chart slides under the *Chart Guide Clips* located at the outside of the chart.

5. **Set the appropriate time.** There are two ways to adjust the chart and set the appropriate time:

- a. Set the chart time manually by inserting a coin into the groove in the chart hub and turning clockwise until the correct hour (and day if applicable) on the chart is referenced to the timing arrow (just to the right of the pen tip on the dial).

The following feature should be used for fine adjustments only.

- b. To adjust the chart time, press and hold **Adjust-Up** and **Adjust-Down** buttons located on the back of the unit next to the dip switch (see Figure 3).

**Note:** Model **KT809** only, the **Adjust-Up** and **Adjust-Down** buttons are located under the battery door on the back of the unit.

The green LED will blink rapidly for about five seconds, then the LED will remain solid green. While in this state the **Adjust-Up** button will move the chart backward (counter clockwise) and the **Adjust-Down** button will move the chart forward (clockwise).


Rotate the chart until the correct hour (and day if applicable) on the chart is referenced to the timing arrow. Once you have set your chart, press the **Pen Home** button to exit *Chart Adjust Mode*. The unit will take one minute to exit the *Chart Adjust Mode* once **Pen Home** is pressed.

Press **Pen Home** to move the pens back onto the chart.

6. Place the **KT8** recorder on a flat vibration-free surface. Be sure it is in a vertical position and level. For best performance and longevity, the location should be a clean environment, free from dust and corrosive fumes. Do not exceed temperature specifications.

**Wall Mount** Keyhole slots are provided on the **KT8** recorder for wall mounting.


### Display Symbols KT8

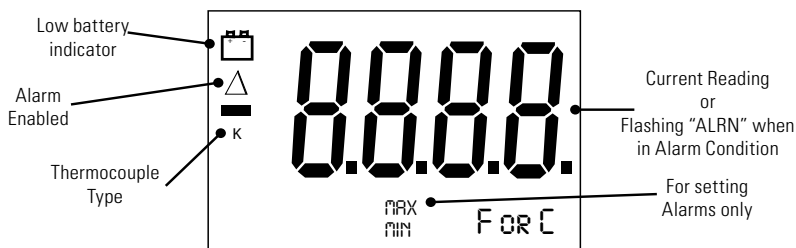


### Button Operations

**Figure 2**

KT803/04/56

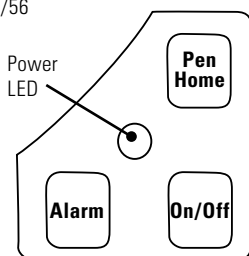

KT800/02/09

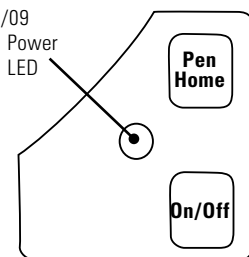

#### On/Off

The On/Off key turns the unit on and off.

#### Pen Home (Down Arrow)

If the pens are located on the outside edge of the chart, press the **Pen Home** to move pen(s) to recording position. If the pens are located on the chart, press the **Pen Home** key to move the pen(s) to the outside edge of the chart.

#### Alarm Optional

Pen 1: = Red Pen

Pen 2: = Blue Pen


1. To set the alarm, make sure unit is on and press and hold the **Alarm** button. The LED will blink red rapidly for about five seconds, then the LED will turn solid green. Release the **Alarm** button and the LED will turn solid red. At this point the display will show "On" or "Off".

Pressing either the **Adjust-Up** or **Adjust-Down** buttons, located on the back of the unit next to the dip switch, will toggle the alarm on or off.

2. Pressing **Pen Home** will scroll to the next alarm options.



Alarm "on" or "off"

**Figure 3**

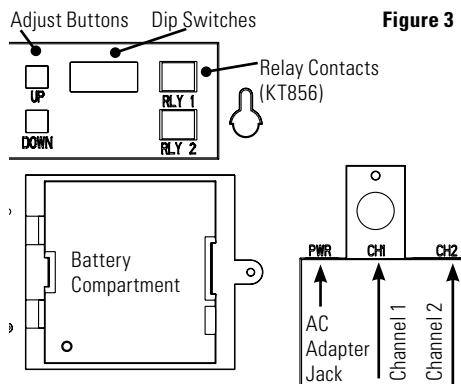

**Figure 3-KT809**

**Battery Case & Switch Cover**

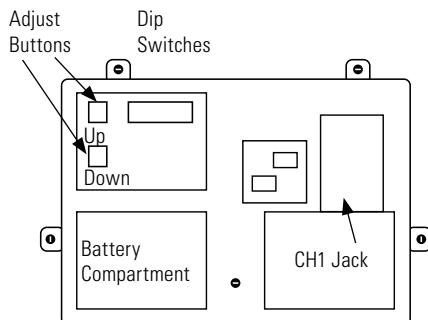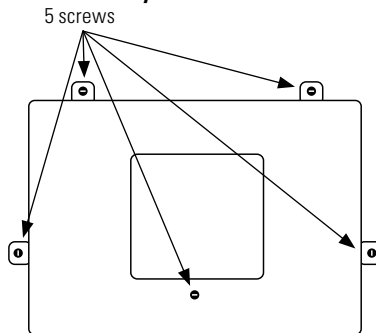

**Note:** KT809 battery door must be removed to access the following: Adjust Buttons, Dip Switches, K-TC Jack, Batteries.

Pen 1 alarm minimum  
Pen 1 alarm maximum

If two pen unit, the additional options are:

Pen 2 alarm minimum  
Pen 2 alarm maximum

- In order to set pen alarm minimums and maximums, pressing **Adjust-Up** will increase the alarm value, and pressing **Adjust-Down** will decrease the alarm value. There is acceleration if the **Adjust-Up** button is held down.

Repetitively pressing the **Pen Home** button will scroll through the five options until the alarm button is pressed to exit from alarm adjust. Each press of the **Pen Home** or **Alarm** button will store the new settings. The unit will take one minute to exit *Alarm Set Mode* once the **Alarm** button is pressed.

- If the alarm is triggered, the LED will show as solid red and the alarm will sound. Press the **Alarm** button to silence the audible alarm.


### Alarm Relays

The SPST 24V 500mA relay contacts are normally open and will close on alarm conditions when the alarms are enabled. Relay contacts are always functional when the alarm is enabled. The relay will close only during minimum and maximum alarm conditions. Two pen models have 2 sets of relay contacts which operate independently. Relays will not operate under battery only power conditions.

### Dip Switch Setup

To set up the **KT8** recorder for your specific application, you might need to change some of the "Dip Switches". The Dip Switches are located on the back of the unit. (Figure 3)

Use a pen or small screw driver to flip the switches. *Remember to install the correct chart to match the corresponding Dip Switch setting.*

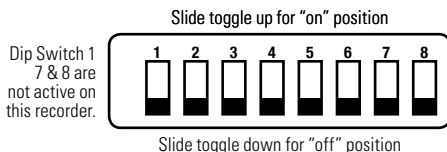

KT8 Dip Switch Setting		Up=On		Down=Off			
Switches 1-6	For Model	1	2	3	4	5	6
7-Day	All Models	D	D				
24-Hour	All Models	D	U				
31-Day	All Models	U	U				
Fahrenheit	All Models			D			
Celsius	All Models			U			
-50 to 50° F/C	All Models				D	D	U
0° to 100° F/C	All Models				D	D	D
0° to 250° F/C	All Models				D	U	U
0° to 500° F/C	KT802/03/ 05/55/56				U	D	D
0 to 150° F/C	KT802/03/ 05/55/56				D	U	D

Remember to install the correct chart to match corresponding switch setting

DICKSON • Addison, IL • [www.DicksonData.com](http://www.DicksonData.com)

KT8 Dip Switch Setting		Up=On		Down=Off			
Switches 1-6	Model	1	2	3	4	5	6
7-Day	KT804	D	D				
24-Hour	KT804	D	U				
Fahrenheit	KT804			D			
Celsius	KT804			U			
0 to 1000° F/C	KT804				D	D	D
0 to 2000° F	KT804				D	D	U
-20° to +20° F/C	KT804				D	U	D
+20° to +100° F/C	KT804				D	U	U
+50 to 150° F/C	KT804				U	D	D

Remember to install the correct chart to match corresponding switch setting

DICKSON • Addison, IL • [www.DicksonData.com](http://www.DicksonData.com)

### Recording Time

All the **KT8** recorders feature user selectable recording times.

24-hour all models	#1 down
	#2 up
7-day all models	#1 down
	#2 down
31-day KT802/03/56	#1 up
	#2 up

### °F/°C

You can record in °F or °C with the **KT8** by using dip switch #3.

°F	#3 down
°C	#3 up

**Note:** Remember to install the correct chart to match corresponding switch setting.

### Temperature Ranges

0 to +100°F	#4 down
	#5 down
	#6 down
-50 to +50°F/C	#4 down
	#5 down
	#6 up
0 to +250°F/C	#4 down
	#5 up
	#6 up
0 to +500°F/C KT802/03/56	#4 up
	#5 down
	#6 down
0 to +150°F/C	#4 down
	#5 up
	#6 down

### KT804 Dip Switches for Ranges

-20 to +20°F/C	#4 down
	#5 up
	#6 down
+20 to +100°F/C	#4 down
	#5 up
	#6 up
+50 to +150°F/C	#4 up
	#5 down
	#6 down
0 to +1000°F/C	#4 down
	#5 down
	#6 down
0 to +2000°F (°F only)	#4 down
	#5 down
	#6 up

### Power

The **KT8** operates on AC power with an optional 4 AA battery backup. Depending on chart rotation selected and model; battery backup will last

### KT802/03/05/55/56

24 Hour Chart Rotation = 1 Day Backup

7 Day Chart Rotation = 2 Day Backup

31 Day Chart Rotation = 1 Week Backup

**Note:** Alarm and relays will not operate under battery only power.

### KT800/09

At 70°F

24-Hour Chart Rotation = 1 Month

7-Day Chart Rotation = 6 Months

At 32°F

24-Hour Chart Rotation = 3 Weeks

7-Day Chart Rotation = 4 Months

**Note:** (Unit should not be placed in an environment below 32°F)

### LED Indicators

- AC Power with battery backup—Solid green
- AC Power with low battery or no battery—Blinks red
- Battery only—Blinks green
- Battery only (Low battery)—Solid red

**Note:** **KT800/09** operates on battery only and will blink one time every minute to conserve battery life.

### CALIBRATION

Your instrument was carefully tested and calibrated before being shipped from the factory. For greatest accuracy, we recommend factory re-calibration every 6–12 months. Call customer service at (630) 543-3747.

If you wish to do calibration yourself, follow these procedures.

1. To activate Calibration Mode, turn the unit on and press and hold both the **On/Off** button and the **Adjust-Down** button (making sure to press the **Adjust-Down** button first so the unit will not turn off). The LED will blink in amber rapidly for about five seconds, and turn solid green. Release the **On/Off** button and the **Adjust-Down** button. The LED will then blink amber at which point only the pen being adjusted will show on the display.
2. To raise the unit of measurement, press the **Adjust-Down** button. To lower the unit of measurement, press the **Adjust-Up** button. **Pen home** switches between the red and blue

pens on a two-pen unit and stores the current adjustment value.

3. When calibration is complete, press the **On/Off** button. Calibration is stored in memory even after you turn the unit off. User calibration information will not be lost if AC power fails.

**Note:** After two hours, if no buttons are pressed, the unit will time out of user calibration and resume normal operation. The user calibration is stored separately from the factory calibration. If you wish to cancel out your user calibration, simply enter *Calibration Mode* and toggle through the steps without adjusting displayed readings. Exit by pressing the **On/Off** button. You have now restored factory calibration.

**Note:** It is recommended that you use a controlled chamber when calibrating temperature and humidity. Calibrating in an open room is not recommended as humidity can vary greatly within a very small area.

## NEED TO KNOW

### KT809 Water Resistant Enclosure

The **KT809** features an IP66 enclosure. In order to maintain the IP66 rating the battery/switch cover, on the back of the unit, must be screwed down tightly at all points. The door must be closed tightly using the two side latches. The K-TC probe must be connected using the external connector and the connector/jack connection must be completely sealed using waterproof tape.

It is strongly recommended that the case door gasket be greased occasionally using a standard silicone rubber grease. The more the door is opened and closed, the more frequently grease should be applied.

The Door and Battery Cover gaskets should maintain the IP66 rating for 1 year under normal use. To replace gaskets, contact *Dickson Customer Service*.

### KT800/09 Pen Movement

The pen movement for the **KT800/09** is slower than on the AC powered models in order to conserve battery power. In 24-hour mode, the pen will move every 1 minute and 30 seconds. In 7-day mode, the pen will move every 8 minutes and 30 seconds.

The recorder takes temperature readings every 50 seconds. An average of the readings taken between pen movements is what is drawn on the chart.

### Pen adjust

Pen adjust may be needed if the pen(s) and display do not match.

1. While the unit is on, press and hold both the **Pen Home** button and the **On/Off** button (making sure to press the **Pen Home** button first so the unit will not turn off). The led will blink rapidly between amber and green for about five seconds. The LED will then turn green. Release the **Pen Home** and **On/Off** buttons. The LED will flash amber and green for one second and the LED will turn off.
2. *One-pen models* The red pen will move to the outer edge of the chart and is ready to be adjusted. Use the **Adjust-Up** and **Adjust-Down** buttons to move the pen to the maximum temperature line on the chart. Once the pen is set, the **Pen Home** button will move the pen to reaffirm the new pen position. Press the **On/Off** button to exit *Pen Home Adjust*.
3. *Two-pen models* Both pens will move to the outer edge of the chart, and then the shorter red pen will move to the current position. Use the **Adjust-Up** and **Adjust-Down** buttons to move the pen to the maximum temperature line on the chart. Once the shorter red pen is set, the **Pen Home** button will move the shorter red pen to the outer edge of the chart and the longer blue pen will move to its current position. The **Adjust-Up** and **Adjust-Down** buttons will adjust the longer blue pen position. Once the pen is set, the **Pen Home** button will move the longer blue pen to the outer edge of the chart and the shorter red pen will move to its new position. Each time pen home is pressed the two pens will switch positions (moving the most recently adjusted position) until the **On/Off** button is pressed to exit pen adjust mode.

**Note:** Pressing the **On/Off** button will exit the adjustment and return the unit to normal operation. Each time the **Pen Home** or **On/Off** button is pressed, the adjustment currently in progress will be stored. The unit will take one minute to exit *Pen Adjust Mode* once the **On/Off** button is pressed.

## TROUBLESHOOTING

### Why isn't the chart keeping time or running slow?

- The chart may be "hung up" or restricted, possibly caused by a rip on the outer edge of the chart or the chart hub, or the chart may be caught between the arm and pen arm platform.
- Incorrect chart installed for the selected chart speed.

### Why did the chart stop turning?

- Chart hung up or restricted, (ripped chart)
- Unit may be "locked up"? This can be confirmed by

pressing any of the buttons on the keypad. If the unit is locked up there will be no response to button presses and the Chart Recorder may appear to be working, but the readings won't change. Also, the chart will not rotate. Remove power and battery, and then re-power.

#### **Why don't the display and chart match?**

- Dip switches are set for a specific range, but using chart for another range, or vice versa.
- Pen(s) not inserted on pen arm(s) all the way
- To adjust pen to match chart see **Pen Adjust** in the *Need to Know* section of this manual. **Note: KT800** does not have a display.

#### **Why does the display read PROB?**

- Check the K-TC probe. Make sure it is properly plugged into the back of unit.
- Is the unit "locked up"? This can be confirmed by pressing any of the buttons on the keypad, if the unit is "locked up" there will be no response to button presses and the unit may appear to be working, but the readings won't change. Also, the chart will not rotate. Remove power and battery, and then re-power.

#### **Why does calibration seem to be off?**

- What is the tolerance of the unit it's being compared to?
- It's ok if the unit is within the sum of the two tolerances.
- Has an outside calibration house attempted calibration? It may not have been adjusted properly.
- Walk through calibration adjustment, found in the manual

#### **Why won't the battery backup work?**

- Are there good batteries in the Chart Recorder?
- Keep in mind that battery backup varies significantly depending on temperature, pen movement and chart rotation speed.
- If there was a momentary power outage (brown out), the unit may not have had enough time to recognize this and switch to *Battery Mode*. (The Chart Recorder may lock up or shut off in this situation) This situation may also occur if the unit is plugged into an outlet that shares the circuit with other machinery that has phase motors or compressors that cycle periodically. As these other machines cycle, they momentarily have a high current draw, therefore drawing from the unit. **Note: KT800** does not have a battery backup.

#### **Why won't the chart recorder respond to changes?**

- Is the unit "locked up"? This can be confirmed by pressing any of the buttons on the keypad. If the unit is locked up there will be no response to button presses and the unit may appear to be working, but the readings won't change. Also, the chart will not rotate. Remove power and battery, and then re-power.

#### **Why won't the unit power up?**

- Remove the batteries and power adapter for a minute or two, this will reset the unit. The unit should respond when the adapter is plugged in.

#### **Water is getting inside the case.**

- Check the battery cover to make sure it is screwed down tightly at all 5 points.
- Check the case door and make sure it is securely fastened at both latches.
- Try greasing the door and battery cover gaskets with a silicone rubber grease.

If the unit is over a year old and/or the door and cover are frequently opened and closed, we recommend replacing the door and battery cover gaskets. Contact *Customer Service* for a *Return Authorization Number*.

#### **Warranty**

Dickson warrants that this line of instruments will be free from defects in material and workmanship under normal use and service for a period of twelve months after delivery.

This warranty does not cover routine calibration and battery replacement.

For *Specifications* and *Technical Support* go to [www.DicksonData.com](http://www.DicksonData.com)

#### **Factory Service & Returns**

Contact *Customer Service* **630.543.3747** for a *Return Authorization Number* (RA) before returning any instrument. Please have the model number, serial number and a PO ready before calling.