

Code 3002

High Range
Chlorine Dioxide
50 Test Strips



Insta-Test[®] ANALYTIC

High Range Chlorine Dioxide										
0	10	25	50	100	250	500				


Using a cup-size sample,
immerse strip for **2 seconds**.

Remove strip with **pad face up**. **DO NOT SHAKE OFF**

EXCESS WATER. With pad
still facing up, **wait 10 seconds**

and read the strip. Discard strip after
30 seconds.

LaMotte Company
Chestertown, MD 21620
www.lamotte.com

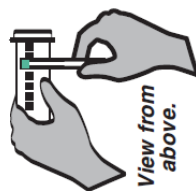

*View from
above.*

!Keep wet fingers
out of the bottle.

!Cap bottle tightly.

!Store in a cool, dry
place.

!In concentrations
greater than 500
ppm the pad will be
a mottled color of
golden-brown and
black.



6 373951 03727 6