



Ultrasound Solutions



SDT340

Asset Health Evaluation Meter

USER MANUAL

Version 8 – 2023

© SDT International. All rights reserved. Specifications are subject to change without notice.

Table of Contents

1. Safety	3
2. Caution	3
3. CE compliance	4
4. Introduction	5
5. Unpack	5
6. Battery	5
7. Controls and connections	8
7.1. Power on	8
7.2. Sleep Mode	9
7.3. Power Off	9
7.4. Driver	9
7.5. Plug & Unplug a Sensor	9
8. Home screen	9
9. Data Collection Modes	10
10. Proceed with ultrasound signal acquisition in Free Mode	11
11. ST tab for ultrasound readings	13
12. Proceed with vibration signal acquisition in Free Mode	13
13. ST tab for vibration readings	15
14. Display Ultrasound and Vibration Time Signal	16
15. Display ultrasound and vibration spectrum	16
16. Proceed with temperature measurement in Free Mode	17
17. Tree navigation and data storage in Free Mode	18
18. Rotational speed	21
19. General Settings	21
19.1. System info	23
19.1.1. Device info	23
19.1.2. License info	24
19.1.3. Last calibration date	24
19.1.4. Battery info	25
19.1.5. Hardware info	26
19.1.6. Software info	26
19.1.7. Database	27
19.1.8. Certifications	27
19.1.9. Manufacturer info	28
19.2. Language	28
19.3. Bluetooth	29
19.4. Date and time format	29
19.5. Brightness	30
19.6. Auto power down	30
19.7. Metric imperial	31
19.8. Security	31
19.9. Network	32
19.10. Theme	32
20. Recommended calibration intervals	33
21. Warranty	33
22. Responsibility limits	33
23. Destruction and recycling of waste equipment	34
24. Copyright and Use of IP	34
26. Support and contact details	35

1. Safety

Carefully read the manual before using the instrument. To prevent death or injury risks and severe damage to the unit and its accessories, use only as specified in this manual. Otherwise, the protection provided by the instrument might be impaired. Make sure that all instructions are fully understood and observed. SDT340 is designed to meet the safety regulations. However, safety can be at risk if the equipment is used by unqualified staff, used improperly, or not inspected and maintained.

To avoid personal injury:

- Do not use if damaged.
- Use caution around rotating equipment and keep cords and straps contained.
- Select a safe location for the sensor and proceed with utmost care during its mounting when taking readings on exposed rotating parts.
- Do not operate around explosive gas, vapor, and dust or in damp or wet environments.
- Use proper protective equipment, as required by local or national authorities
- Do not use the SDT340 in hazardous environments (ATEX environment). Please refer to the SDT270A (Ex proof version) and its marking before considering these restricted areas in the field.
- See emissivity information for actual temperatures. Reflective objects have lower emissivity and might pose a burn hazard.
- Never look directly to the laser beam. Never point the laser beam at a person's eye. Do not aim the laser at specular reflection surfaces. Never look the laser using an optical instrument.

The power supply is designed to operate at ambient temperature between 0 °C to 60 °C (32 °F to +140 °F) up to 90% relative humidity, no condensation. Its storage temperature is between -20 °C to +85 °C (-4 °F to +185 °F). The power supply should never be operated or even stored at places listed below, because this could lead to operating failures:

- Places heavily exposed to moisture or where water condensing may occur.
- Places subject to constant vibrations or to high temperature fluctuations.
- Outdoors.

2. Caution

Do not disassemble the instrument, the sensors, the battery, the battery docking station, and the battery power supply. Do not attempt internal alterations. Do not attempt any repairs. Potential damages will not be covered by the Lifetime Warranty. Contact SDT Ultrasound Solutions or an SDT Authorized Service Provider.

The permissible ambient temperature range for the operation of the SDT340 is -15 °C to +60 °C (5 °F to 140 °F). Relative humidity must be less than 90%, non-condensing.

Due to the typical self-discharge rate of NiMH batteries, it is recommended to charge the battery at least every 3 months, using only the provided charger pack. It is recommended not to store an uncharged/unused battery for more than a few weeks.

The SDT 340 is equipped with a class 2 laser: risk of eye injury


- Never look directly to the laser beam
- Never point the laser beam at a person's eye
- Do not aim the laser at specular reflective surfaces
- Never view the laser using an optical instrument



IEC 60825-1-07
<1 mW, 655 nm

Laser Radiation
Do not stare into beam
Class 2 laser product

Ultrasound inspectors using SDT instruments with audio outputs are exposed to sounds levels having noise exposure characteristics daily, which, if not managed by the manufacturer, can increase your risk of hearing loss. Legislation in Europe has fixed a threshold at 80 dB(A) for a maximum exposure of 8 hours per day.

Government Legislated Noise Exposure Levels	
	
Sound Level dB(A)	Max Exposure Per Day
80	8 hours
83	4 hours
86	2 hours
89	1 hour
92	½ hour
95	15 minutes
98	7.5 minutes

The audio output paired with the Peltor headsets supplied by SDT, having the references FUHDPH-1 and FUHDPH-2 delivers a maximum sound pressure level of 79 dB. SDT makes an additional safety guarantee to our users. When connecting a sensor, or selecting/changing sensors, SDT instruments self-adjust the volume to a default, maximum sound pressure level of 58 dB typical. This applies to all compatible, SDT manufactured sensors and is done so, willingly for the protection and safety of anyone who uses our products.

3. CE compliance

SDT340 and its accessories have been designed and tested to meet the following directives and standards. The SDT340 kit meets the essential requirements of the applicable European Directives:

- 2014/30/EU; Electromagnetic Compatibility Directive (EMC)
- 2011/65/EU; Restriction of Hazardous Substances (RoHS)
- 2014/35/EU; Low Voltage Directive (LVD)
- 2006/66/EU; Batteries and accumulators and waste batteries and accumulators

The declaration of CE conformity is available on SDT website at:

4. Introduction

The SDT340 is a screening and diagnostic tool for Asset Health Evaluation. The SDT340 includes the following features:

- Ultrasound and vibration measurements through 2 input channels
- 4 Scalar indicators
- 0 Hz to 100 kHz Bandwidth
- 10 minutes record length
- Tree database structure
- 3.5" full-color display 320x480
- On-screen time waveform and spectrum
- Spanning and expanding functions for navigation through time waveform and spectrum
- Signal play back
- On-board temperature and rotational speed measurements
- 256 kHz sample rate
- 6.5 GB data memory
- Quick and intuitive navigation through database nodes
- Recall of historical data in-the-field
- TWF and FFT 10 highest values table
- Off-route and on-route data collection modes
- Bluetooth for wireless audio streaming

5. Unpack

The items that follow are included in your purchase of the SDT340 kit. Unpack and inspect them.

- SDT340
- Wired headset
- Spiral Cable, 2 male 7-pole LEMO connectors
- USB type C communication cable
- USB key containing user manuals and UAS Lite
- Battery pack
- Battery charger, power cord, EU, US and UK plugs
- Battery docking station
- Shoulder strap
- Multi-function screwdriver

6. Battery

Caution: Only use the docking station and the power supply provided by SDT.
Do not store an uncharged battery for more than a few weeks.
Perform preferably a complete charge cycle.
Charge the battery at least every 3 months, even not used.

The SDT340 operates on a rechargeable Nickel Metal Hydride (NiMH) battery. After unpacking the unit, please fully charge the battery pack before its first use. To charge the battery pack:

- Plug the power supply (*) to the main and connect it ① to the docking station. Then the LED is blinking blue.
- Loosen the quick fastener using the screwdriver and remove the battery pack from the unit.
- Place the battery pack in the docking station ③. The LED should stay on blue a few seconds and then flash green. Otherwise, perform a force charging by inserting a needle in the reset location ②.

- When the LED is continuously lit green, the battery is fully charged.

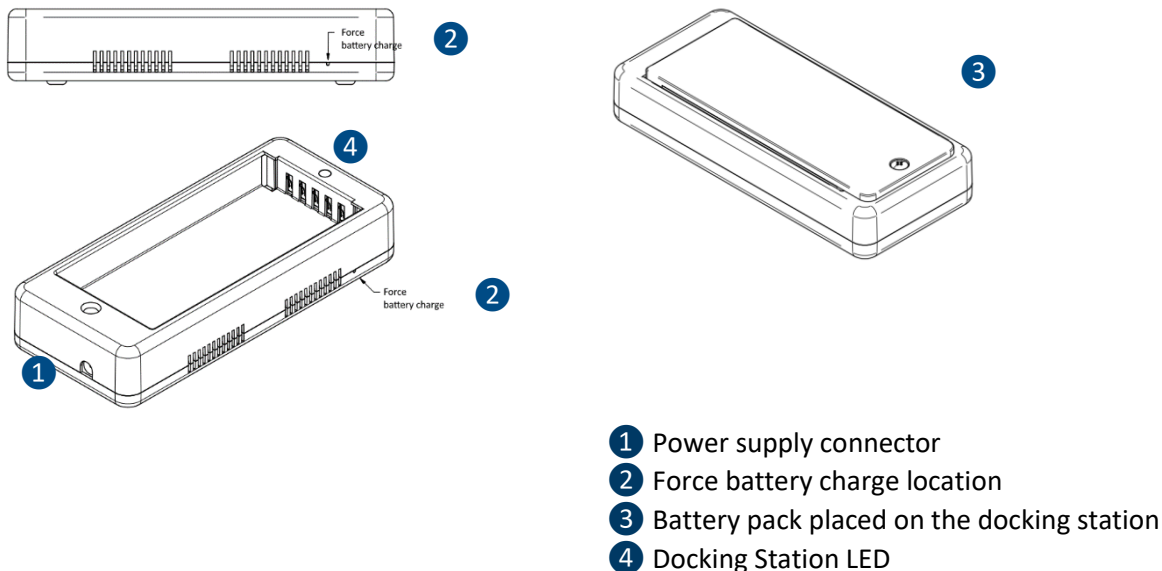


Figure 6-1 Recharge the battery

AC/DC power supply:	Based on XP Power, Model ACM24 series (you may find other references/brand depending on your order date. Please refer to the label)
Power supply:	Input: 100-240 VAC-0.5 A, 50/60 Hz Output: 12 VDC-2000 mA, total regulation 5%, efficiency 88.8 %
Operating temperature:	0 to +60 °C (+32 to 140 °F), < 90 % humidity, non-condensing
Storage temperature:	-20 to + 85 °C (-4 to 185 °F)
Output Power:	Max 24 W
Category:	Class II construction
EMC Emissions:	EN 55032, EN 61000-3
EMC Immunity:	IEC 60601-1-2, EN 61204-3, EN 61000-4, EN 60601-1-2
Electrical safety (LVD):	UL 60950-1, UL 62368-1, ANSI/AAMI ES 60601-1 EN 60950-1, EN/IEC 62368-1, EN 60601-1 CSA C22.2 No. 60601 CCC China Compulsory certification, GB4943 AU/NZ 60950.1 CE: meets all applicable directives UKCA: meets all applicable directives
Weight:	160 grams (0.35 lb)
Dimensions (body only):	88.0 x 30.0 x 57.0 mm (3.46 x 1.18 x 2.24")
AC input plugs:	UK, US, EU

(*) The primary plug of the power supply is interchangeable. The procedure of changing is as per the pictures.

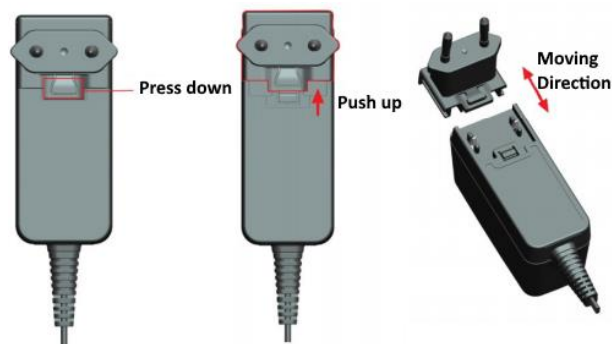



Figure 6-2 Change the primary plug of the power supply

The color of the docking station status LED ④ shows:

- The LED flashes blue – the docking station is powered.
- The LED remains blue illuminated a few seconds when the battery is placed in the docking station – the battery is detected.
If not, perform a force charge by inserting a needle in the force battery charge location ②.
- The LED flashes green – the battery pack is charging.
- The LED is green lit continuously – the battery is fully charged.
- The LED flashes red – the docking station detect an abnormal current consumption or an abnormal temperature. Disconnect and then reconnect the power supply from the main to reset the docking station.


The SDT340 autonomy is typically 8 hours for a fully charged battery pack and the recharge time is about 7 hours.

7. Controls and connections

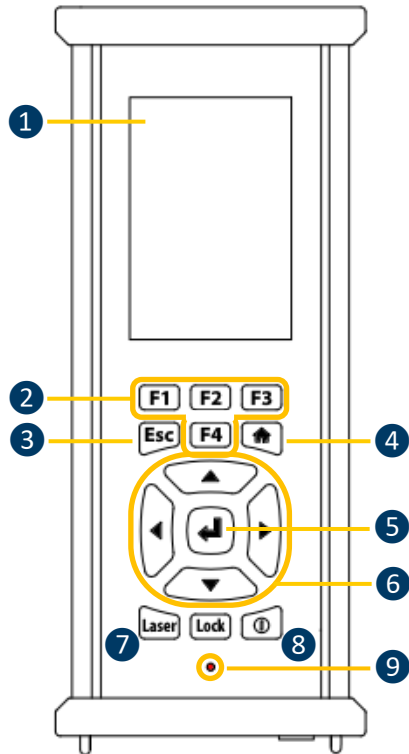

- ① Display
- ② **F1 to F4**. Their respective function is indicated in the bottom of the display
- ③ **Escape** for stopping a signal acquisition and going back to the previous menu through setting screens
- ④ **Home** for displaying the main menu
- ⑤ **Enter** to start the acquisition and validate changes through setting screens
- ⑥ **Up, Down, Left and Right** navigation keys for the signal, audio amplification adjustment and navigation through the settings screens
- ⑦ Hold-on laser
- ⑧ On/Off
- ⑨ Status LED.

Figure 7-1 Front panel

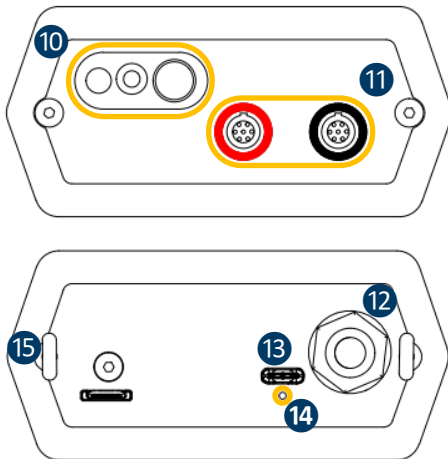

- ⑩ Tachometer, laser and IR thermometer
- ⑪ Inputs channels. Black collar for ultrasound, red for vibration. To plug a connector, line up the red dot on the plug with the red mark on the connector. Insert the plug into the connector without any rotating movement. To unplug the connector, move up, towards the cable, the ring located on the bottom of the plug. Only pull the connector without any rotation.
- ⑫ Wired headset connector.
- ⑬ USB type-C Port.
- ⑭ Reset location. Insert a needle, the unit will restart.
- ⑮ Shoulder strap rings.

Figure 7-2 Lateral plates

7.1. Power on

Press the Power button ⑧. At power up, device information and battery charge are displayed, then the Home menu is displayed on the screen.

7.2. Sleep Mode

After a few minutes of inactivity, the screen is powered off for battery saving and the status LED is blinking green. Press any key to reactivate the display.

7.3. Power Off

Press the Power button **8**. At the prompt, select **Yes** with the **Left** navigation key **6**, or **No** to continue with the operation. Confirm using **Enter** **5**.

7.4. Driver

The USB driver is automatically installed from the 340, once connected to your PC.

In case of synchronization issue, the **driver** file SDT2xxDriverinstaller.exe can download from our website, by clicking [this link](#).

7.5. Plug & Unplug a Sensor

SDT 340 has 2 input ports with 7-pole LEMO connectors for external sensors. The channel with the red collar is dedicated to vibration measurement as the black is reserved for ultrasound.

LEMO connectors have a sprung-loaded knurled barrel and mechanical polarization to go only in one way round.

To plug a LEMO connector, line up the red dot on the plug with the red mark on the connector. Insert the plug into the connector without any rotating movement.

To unplug, move up the ring located on the bottom of the plug. Be sure to only pull the connector without any rotation and to never pull on the cable itself.

8. Home screen



- 1 Tree Data Collection Mode
- 2 Survey Data Collection Mode
- 3 General Settings
- 4 Temperature
- 5 Rotational speed
- 6 Ultrasound contact sensor
- 7 Accelerometer
- 8 Bottom orange line indicates which icon is currently selected
- 9 Time and date scrolling information
- 10 Laser, USB, wireless, wired headset and remaining battery charge icons

Figure 8-1 Home screen

The **Home** screen is displayed after the device power up.

On top left, date and time are scrolling ⑨. On the top right, laser (when activated), USB (when the SDT340 is connected to a computer), wireless headset (when paired), wired headset (when connected) and battery remaining charge icons are displayed ⑩.

Use the navigation keys to select an icon and press **Enter** to validate your choice. The selected icon is indicated by a bottom orange line ⑧.

Press **Home** to directly come back to the Home screen from any menu.

When no sensor is connected, the sound icon is blocked without the ability to adjust the volume. However, the user hears a background noise emanating from the internal electronics.

9. Data Collection Modes

Before recording data, you must first install the driver, create a tree structure from UAS 3 or UAS Lite and upload it from your PC to the instrument.

The SDT340 features 3 modes of data collection:

The **Free mode** – the user selects a sensor; the measurement settings and choose the recording location freely inside the tree structure. If the measurement type doesn't exist, the SDT340 dynamically creates it.

The **Tree Mode** (for UAS3, UAS Lite users only) – the user first selects at his own discretion a measurement location and then select an existing measurement type. The user is not allowed to change the measurement settings or create a new measurement type inside the tree structure.

The **Survey Mode** (for UAS3, UAS Lite users only) – the device proposes a filtered list of measurements to collect in a predetermined order. The user is not allowed to change the measurement settings or create a new measurement type inside the tree structure.

Refer to the paragraph “Tree navigation and data storage in Free Mode” to see the definition of a measurement type.

Caution: **Measurements can only be stored at the Node level/Measurement point**

10. Proceed with ultrasound signal acquisition in Free Mode

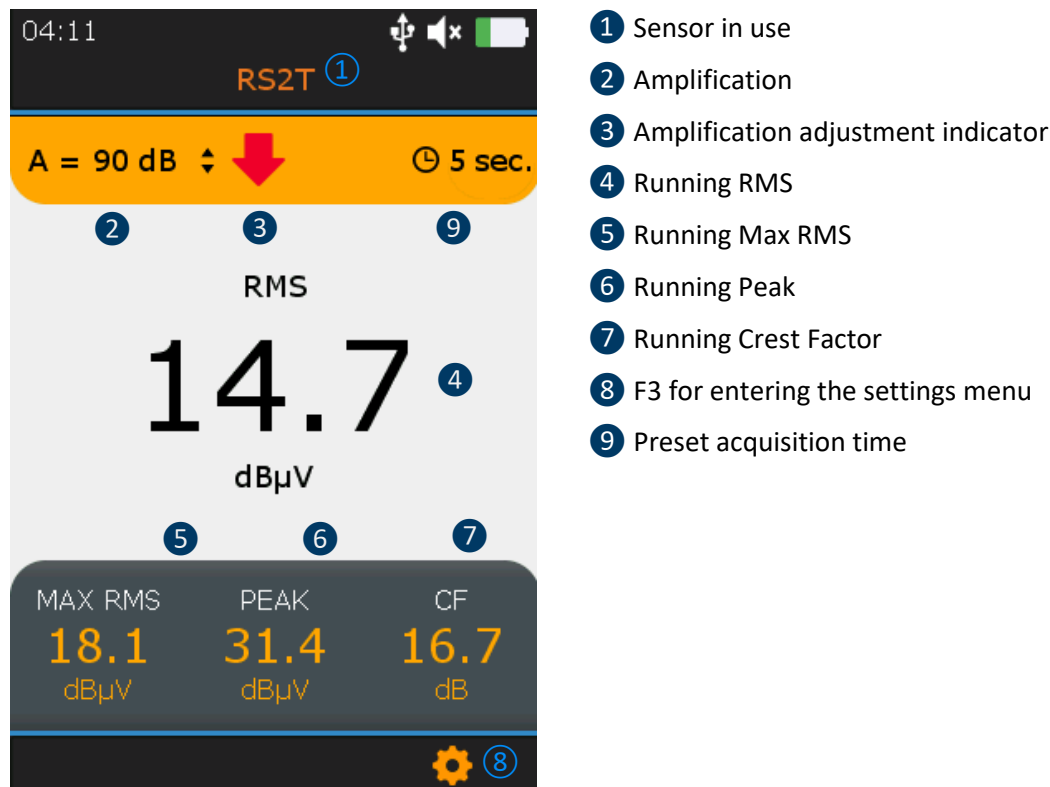



Figure 10-1 Ultrasound measurement screen

From the **Home** screen, select the ultrasound sensor and press **Enter**. Its code name ① is confirmed in the top of the screen.

Set up amplification from 30 (preamplifier) to 90 dB ② using **Up** and **Down** navigation keys till the amplification adjustment indicator ③ disappears. Set up the audio volume with **Left** and **Right** keys.

The 4 Condition indicator running values (④ to ⑦) are displayed. RMS is automatically refreshed 2 times per second. A force refresh of Max RMS, Peak and Crest Factor is manually carried out when modifying the amplification.

The preset acquisition time ⑨ is displayed on top right.

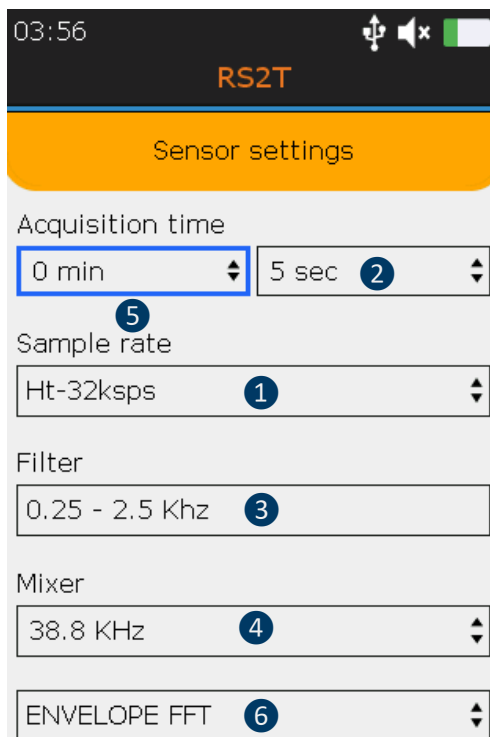


- ① Sample rate
- ② Acquisition time
- ③ residual Filter (audible)
- ④ Mixer
- ⑤ Selected field surrounded by a blue line
- ⑥ FFT or FFT Envelope

Figure 10-2 Ultrasound Measurement Settings

Press **Enter** to trigger the acquisition or **F3** to first modify the measurement settings as the **sample rate** ① from 32,000 to 256,000 samples per second (sps), the **acquisition time** ② from 1 to up to 600 seconds (*) and the **mixer frequency** ④ only if the sample rate is 32,000 sps.

Filter ③ is automatically selected according to the chose sampling rate and the sensors. Use **Left** and **Right** navigation keys to highlight the desired field. It will be surrounded by a blue line ⑤. Use **Up** and **Down** to edit the value of the highlighted field. Choose the **Envelope FFT** for advanced diagnostics or a simple **FFT** ⑥ analysis using **Up** and **Down**.

Press **Escape** to go back to the measurement screen without applying changes or **Enter** to go back with applying the modifications.

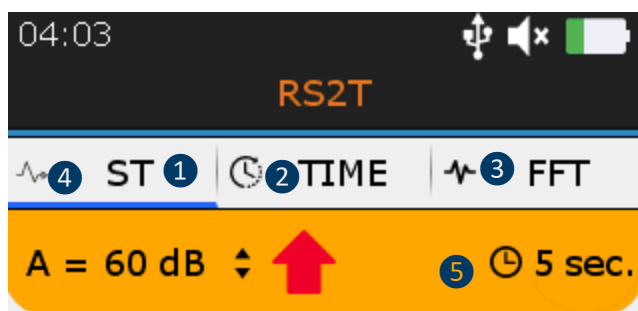

- ① ST tab
- ② TIME tab
- ③ FFT Tab
- ④ Blue underline showing the active tab
- ⑤ Acquisition time

Figure 10-3 Condition indicator, time signal and spectrum tabs

At the end of the acquisition time, you have access to the 4 condition indicators from the tab **ST** ①, the time signal from the tab **TIME** ② and the spectrum from the tab **FFT** ③. The active tab is blue underlined ④. Press **F2** to switch between the 3 tabs.


11. ST tab for ultrasound readings

At the end of the acquisition, the device displays the ultrasound condition indicator tab **ST**.

There, the final RMS ①, final Max RMS ②, final Peak ③ and Crest factor ④ are calculated from the samples collected during the signal acquisition. The current measurement can be compared with the previous measurement ⑥.

Note that the **Max RMS** is the highest sub RMS observed during the acquisition time. Each Sub RMS is calculated over a period of 500 milliseconds. The **Peak** value is the highest positive amplitudes of the samples. The **Crest Factor** is the ratio between the Peak and the RMS. You can choose to display the Crest factor using a natural scale or a logarithmic scale from the settings menu.

To display the time signal and then the spectrum, press **F2** ⑤. To record the signal, press **Enter**, select the destination, and confirm by **Enter** or press **Esc** to delete the signal. More details about the navigation inside the tree structure are below.

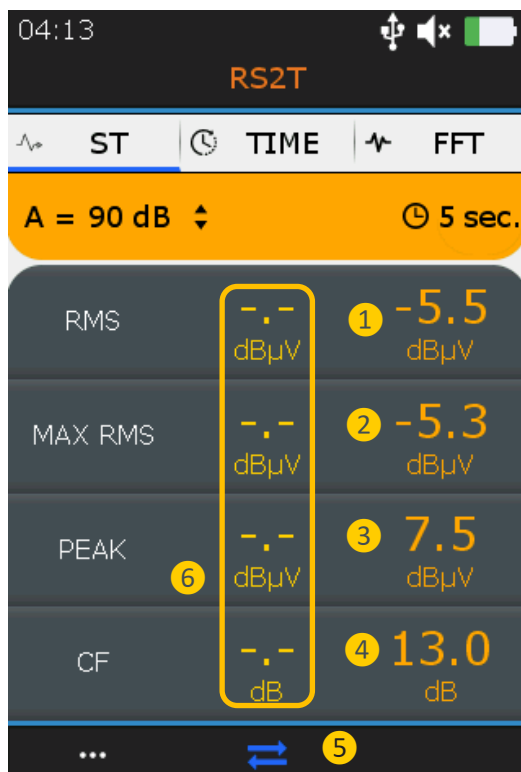


- ① Final RMS
- ② Final Max RMS, the Highest of the sub RMS calculated over 500 milliseconds
- ③ Final Peak
- ④ Final Crest Factor
- ⑤ **F2** to display the time signal
- ⑥ Acquisition ① to ④ from the previous measurement.

Figure 11-1 Ultrasound ST tab

12. Proceed with vibration signal acquisition in Free Mode


From the **Home** screen, select the accelerometer and press **Enter**. The name ① is confirmed in the top of the screen. The 4 Condition indicator running values (④ to ⑦) are displayed. RMS vibration velocity is automatically refreshed 2 times per second. You can choose to display the vibration velocity in millimeters per second or in inches per second and the frequencies in Hertz or in CPM from the settings menu. The preset acquisition time ⑦ is displayed on top right.

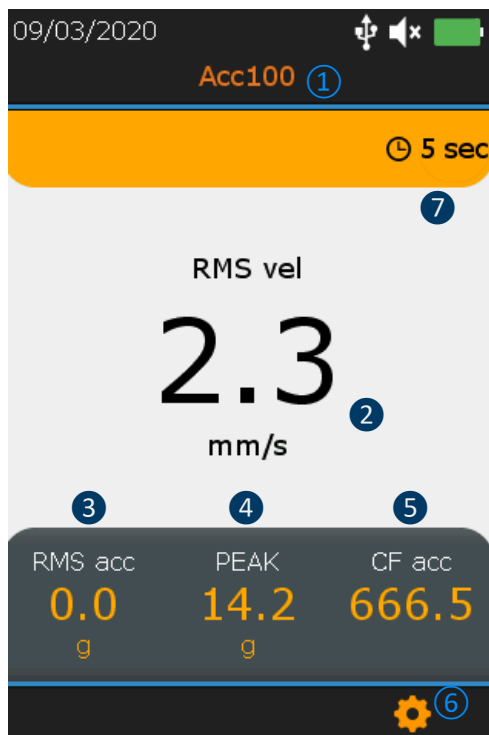

- ① Sensor in use and bandwidth
- ② Running Velocity RMS
- ③ Running Acceleration RMS
- ④ Running Peak Acceleration
- ⑤ Running Acceleration Crest Factor
- ⑥ F3 for entering the settings menu
- ⑦ Acquisition time

Figure 12-1 Vibration measurement screen

Press **Enter** to trigger the acquisition or **F3** to first modify the measurement settings as the **bandwidth** ① from 5 to 1,000 Hz, 10 to 1,000 Hz and 10 to 10,000 Hz, the **sample rate** ② from 32,000 to 64,0000 samples per second (sps) and the **acquisition time** ③ from 1 to up to 600 seconds (32,000 sps) or 300 seconds (64,000 sps). Use **Left** and **Right** navigation keys to highlight the desired field. The selected field is surrounded by a blue line ④. Use **Up** and **Down** to edit the value of the highlighted field. Choose the **Envelope FFT** for advanced diagnostics or a simple **FFT** ⑤ analysis using **Up** and **Down**. Press **Escape** to go back to the measurement screen without applying changes or **Enter** to go back with applying the modifications.

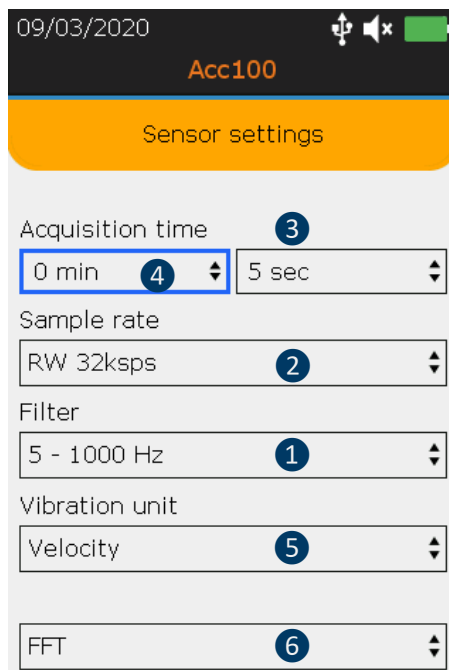


- ① Bandwidth, filter
- ② Sample rate
- ③ Acquisition time
- ④ Selected field surrounded by a blue line
- ⑤ Vibration unit
- ⑥ FFT

Figure 12-2 Vibration Measurement Settings

At the end of the acquisition time, you have access to the 4 condition indicators from the tab **ST** ①, the time signal from the tab **TIME** ② and the spectrum from the tab **FFT** ③. The active tab is blue underlined ④.

Press **F2** to switch between the 3 tabs.

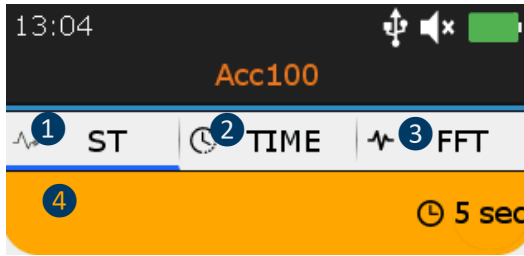


- ① ST tab
- ② TIME tab
- ③ FFT Tab
- ④ Blue underline showing the active tab

Figure 12-3 Condition indicator, time signal and spectrum tabs

13. ST tab for vibration readings

At the end of the acquisition, the device displays the vibration condition indicator tab **ST**. There, the final Velocity RMS ①, final Acceleration RMS ②, Acceleration Peak ③ and Acceleration Crest factor ④ are calculated from the samples collected during the signal acquisition. The current measurement can be compared with the previous measurement ⑥.

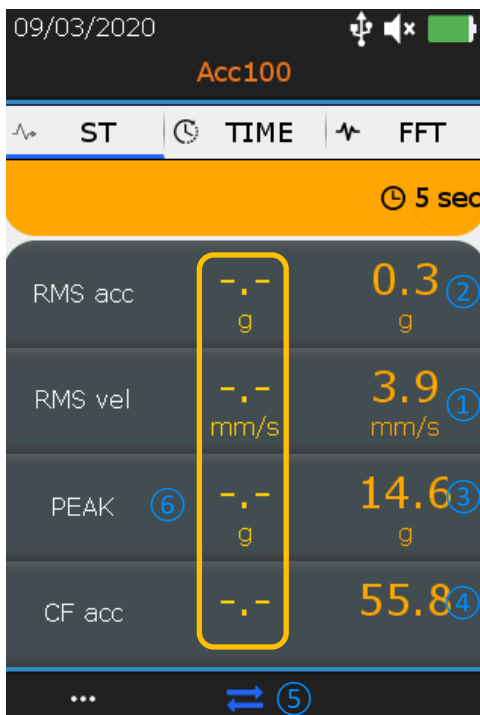

- ① Final Velocity RMS
- ② Final Acceleration RMS
- ③ Final Acceleration Peak
- ④ Final Acceleration Crest Factor
- ⑤ **F2** to display the time signal
- ⑥ Previous measurement

Figure 13-1 Vibration ST tab

To display the time signal and then the spectrum, press **F2** ⑤. To record the signal, press **Enter**, select the destination and confirm by **Enter** or press **Esc** to delete the signal. More details about the navigation inside the tree structure are below.

14. Display Ultrasound and Vibration Time Signal

At the end of the signal acquisition and from the **ST** tab, press **F2** to display the time signal. The **TIME** tab ① is now active.

With **Up** and **Down** navigation keys zoom in and out a portion of the signal from a time scale of 10 seconds ② to 1 second. With **Left** and **Right** navigation keys, navigate between the different portions of the time waveform.

Press **F1** ③ to display the list of the 10 highest values and one more time to go back to the time signal view.

Press **F2** ④ to toggle to the spectrum view or **Enter** to store the data.

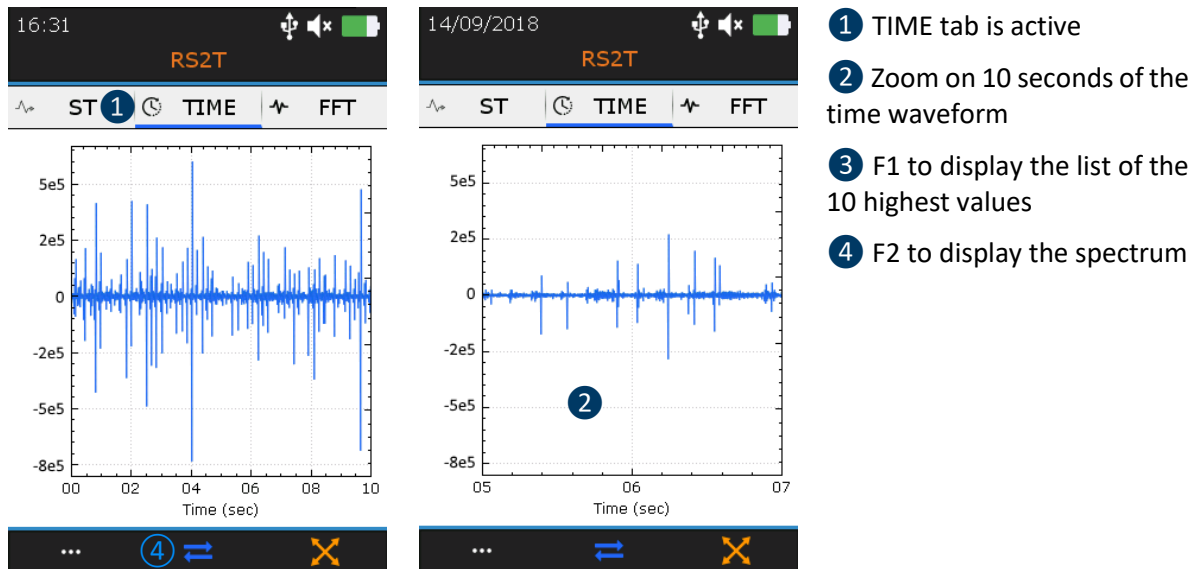


Figure 14-1: zoomed out and zoomed in time waveform

ST	TIME	FFT
① #	② sec	③ g
1	2.84	0.472
2	2.84	0.486
3	3.7	4.31
4	3.72	1.22
5	3.74	0.51
6	3.76	0.832

ST	TIME	FFT
#	sec	④ μV
1	0.982	19.3
2	1.09	24.7
3	3.04	24.9
4	3.04	28.5
5	3.04	20.1
6	4.87	22.7

Figure 14-2: List of the 10 highest values, vibration left and ultrasound right


15. Display ultrasound and vibration spectrum

From the **TIME** tab, press **F2** to display the spectrum. The **FFT** tab ① is now active.

With **Up** and **Down** navigation keys zoom in and out a portion of the signal. With **Left** and **Right** navigation keys, navigate between the different portions of the spectrum.

Press **F1** ② to display the list of the 10 highest values and one more time to go back to the time signal view.

Press **F2** ③ to toggle to the **ST** tab or **Enter** to store the data.

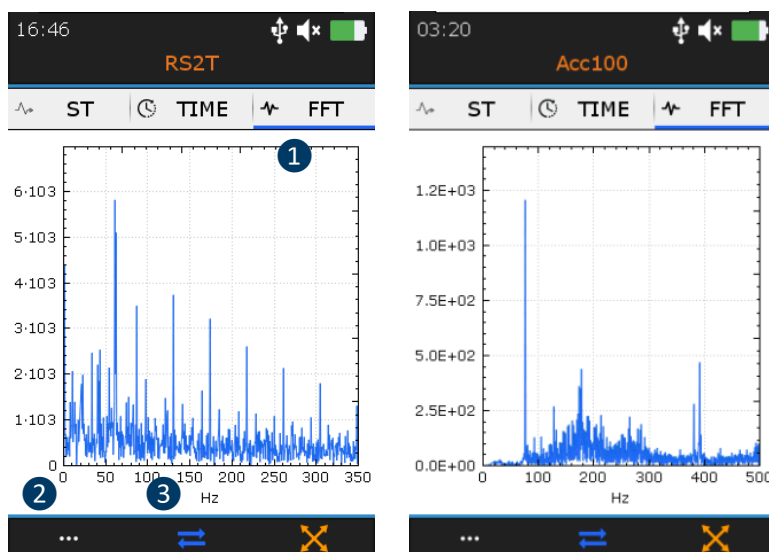

- ① FFT tab is active
- ② F1 to display the list of the 10 highest values
- ③ F2 to switch to the ST tab

Figure 15-1: Spectrum view ultrasound right and vibration left

ST	TIME	FFT
① #	② Hz	③ g
1	216	523
2	243	630
3	244	682
4	246	725
5	248	727
6	250	686

ST	TIME	FFT
#	Hz	④ μV
1	0	2.44e+04
2	1	3.62e+04
3	1	2.16e+04
4	2	1.38e+04
5	4	6.21e+03
6	6	1.23e+04

- ① 10 highest values
- ② 10 highest values frequencies
- ③ 10 highest accelerations (g)
- ④ 10 highest voltage (μV)

Figure 15-2: List of the 10 highest values, vibration left and ultrasound right

16. Proceed with temperature measurement in Free Mode

Note than from the settings menu, you can choose to display temperature in degrees Celsius or Fahrenheit. From the **Home** screen, select the temperature icon and press **Enter**. The running temperature screen is displayed (Figure 18).

The value ① is refreshed twice per seconds. Press the **Laser** hold-on key to activate it.

Press **F2** ② to display the curve of the temperature evolution over time (Figure 19).

Press **F3** ③ to adjust the emissivity and change the unit. The setting is displayed the running temperature screen (cf Figure 20).

Press **Enter** to freeze the temperature measurement and once more to record the measurement. Select the desired memory location and confirm your choice with **Enter**.

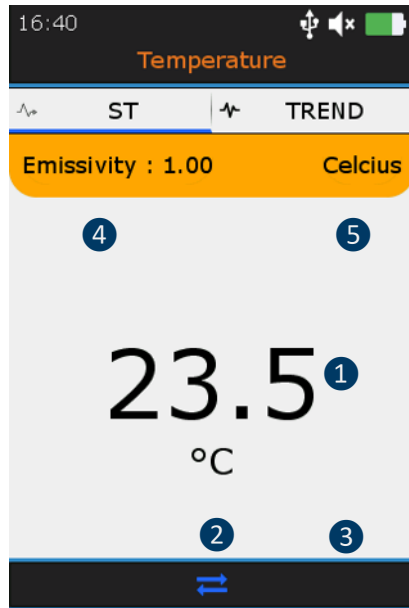


Figure 16-1: Running temperature screen

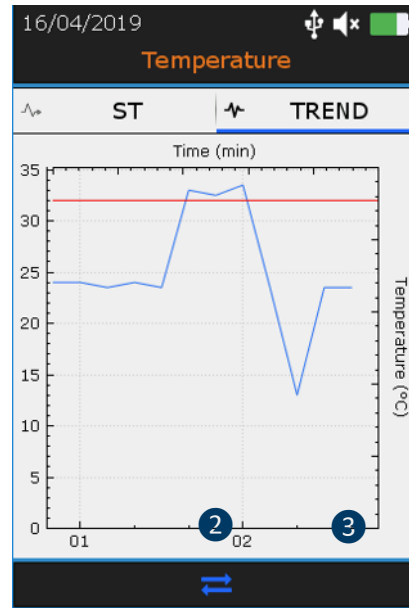



Figure 16-2: Temperature evolution curve screen

- ① Running temperature
- ② F2 to toggle between the running temperature screen and the temperature evolution curve
- ③ Temperature settings
- ④ Emissivity value
- ⑤ Unit (°C, °F, °K)

To accurately measure the temperature of a reflective surface, the target material emissivity which corresponds to the measure radiant temperature must be known. The true material emissivity value is continual changing property, and some typical values can be found on the WEB. Defining the correct emissivity value is not an important factor for industrial application and most material surface have emissivity values close to 0.95. SDT defines a default value between [0.95-1], customizable, that is close to the most common materials encountered in the industrial field. In any event, since most of the time, user is just interested in following thermal deviation or relative change, working with a fixed/predefined value leads to an estimate of the surface temperature but there is a difference between the real surface temperature and the measure value that is independent of the instrument accuracy or its factory calibration. The emissivity coefficient ϵ refers to the radiation of heat from a 'grey body' according to the Stefan-Boltzmann law.

17. Tree navigation and data storage in Free Mode

The example hereafter uses the following UAS tree structure:

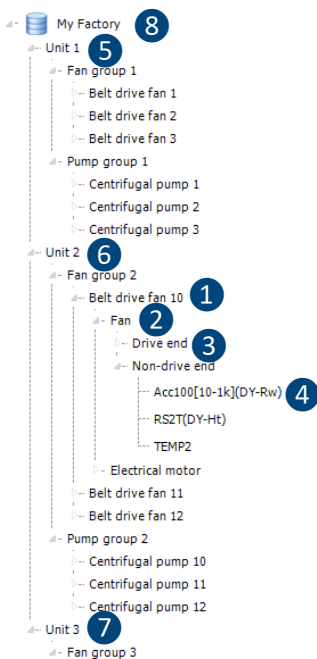

Unit 1 ⑤, Unit 2 ⑥ and Unit 3 ⑦ are the children of My Factory ⑧. They have the same level in the tree structure. In the same way, Centrifugal pump 1, 2 and 3 are children of Pump group and have the same level. Fan group is the parent of Belt Drive fan 1, 2 and 3...

Belt Drive fan ① should be considered as machinery. Fan ② and Electrical motor are the components of one machinery. Drive end ③ and non-Drive end are the measurement locations. A measurement location is namely the contact sensor place or the target for non-contact probes. For instance, the bearing housing or pillow block is measurement locations when using the accelerometer or the RS2T.

Acc100 [10-1k] ④ as a measurement type.

A measurement type is the combination of a technology (Acc means vibration accelerometer), a sensor sensitivity (100 means 100 mV/g) and a specific setting ([10-1k] means a measurement bandwidth between 10 Hz and 1 kHz).

Figure 17-1: example of tree structure

The SDT340 features an intuitive and quick way to navigate, going up and going down, by hierarchical levels of the tree structure.

The list of the nodes of the selected level is placed in the **upper section**. Use the **Right** key to go up the higher level, the parent (if exists). Its name is indicated with its path in the **top section**. Select the desired node of the **upper section** with the **Up** and **Down** keys. Then using the **right** key, go down the lower level, the children. The corresponding nodes are shown in the **lower** section.


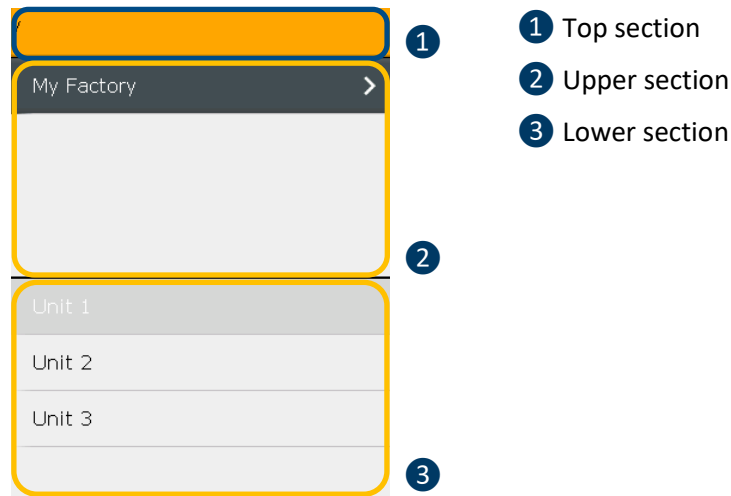


Figure 17-2: Top, upper and lower sections

This method, common to the Free Mode, the Tree Mode and the Survey Mode, makes it easy to navigate in between measurement types in large tree structure.

The way of proceeding is detailed with an example based on the following tree structure.

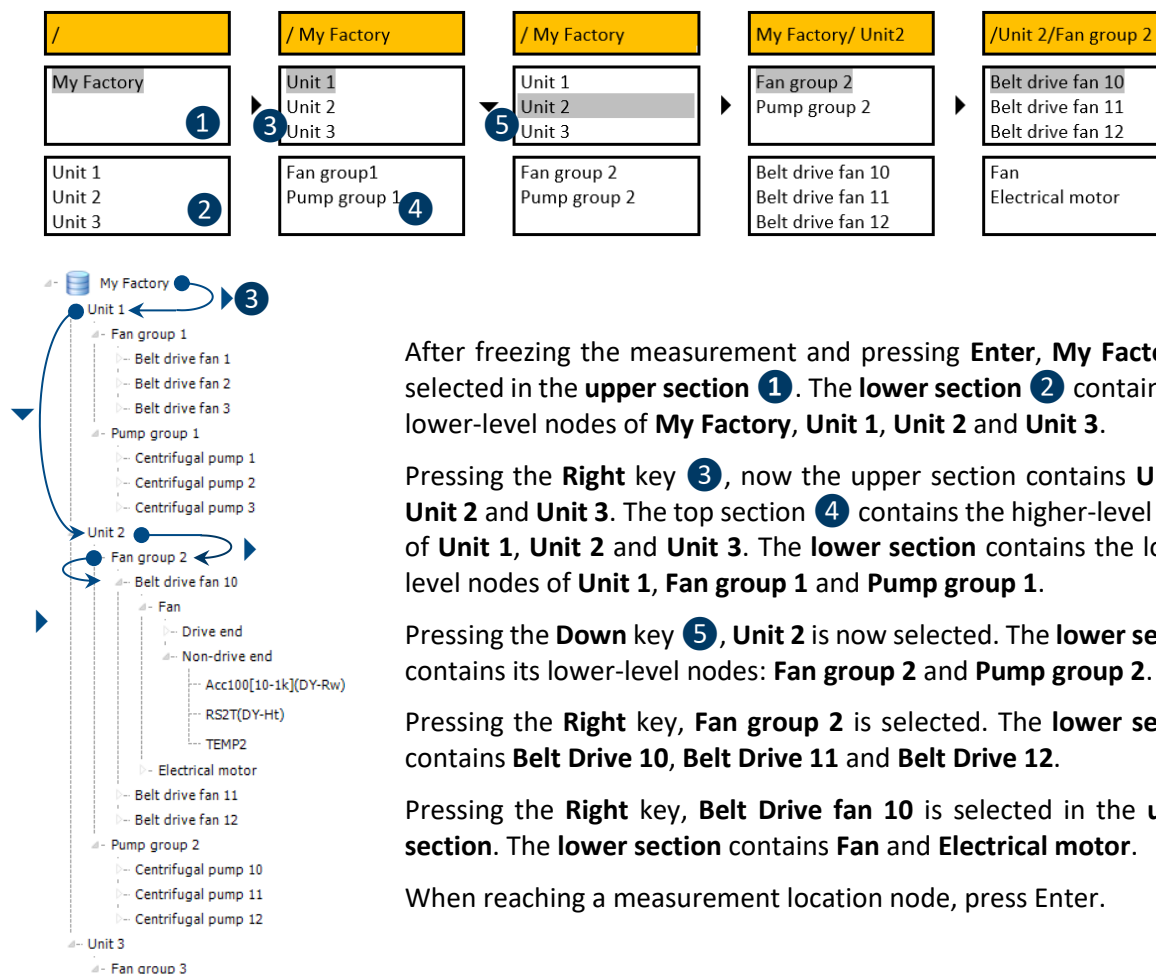

After freezing the measurement and pressing **Enter**, **My Factory** is selected in the **upper section 1**. The **lower section 2** contains the lower-level nodes of **My Factory**, **Unit 1**, **Unit 2** and **Unit 3**.

Pressing the **Right** key **3**, now the upper section contains **Unit 1**, **Unit 2** and **Unit 3**. The top section **4** contains the higher-level node of **Unit 1**, **Unit 2** and **Unit 3**. The **lower section** contains the lower-level nodes of **Unit 1**, **Fan group 1** and **Pump group 1**.

Pressing the **Down** key **5**, **Unit 2** is now selected. The **lower section** contains its lower-level nodes: **Fan group 2** and **Pump group 2**.

Pressing the **Right** key, **Fan group 2** is selected. The **lower section** contains **Belt Drive 10**, **Belt Drive 11** and **Belt Drive 12**.

Pressing the **Right** key, **Belt Drive fan 10** is selected in the **upper section**. The **lower section** contains **Fan** and **Electrical motor**.

When reaching a measurement location node, press Enter.

Figure 17-3: Tree structure navigation (1)

You don't need to go down to the measurement type level. You can directly store data from the measurement location level by pressing **Enter**. In Free Mode, if the measurement type doesn't exist, it will be created automatically.

Naturally, you could also navigate from lower level to higher-level nodes, as demonstrate in the following example.


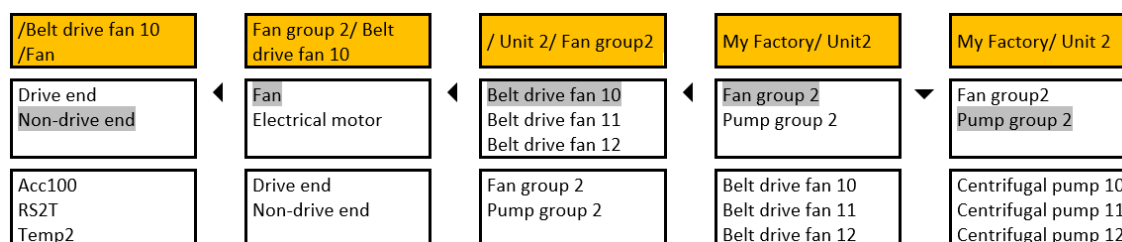


Figure 17-4: Tree structure navigation (2)

Non-Drive end is selected. Pressing **Left**, the **upper section** contains the nodes having an upper level than **Non-Drive end**: **Fan** and **Electrical motor**. Another **Left** press, the **upper section** is refreshed showing **Belt Drive fan 10**, **Belt drive fan 11**, and **Belt drive fan 12**. After the next **Left** press, **Fan 2** and **Pump group 2** appear in the **upper section**. Pressing the **Down** key will select **Pump group 2**.

18. Rotational speed

Before using the tachometer, a reflective band must be stick on the rotating part to perform a measurement.

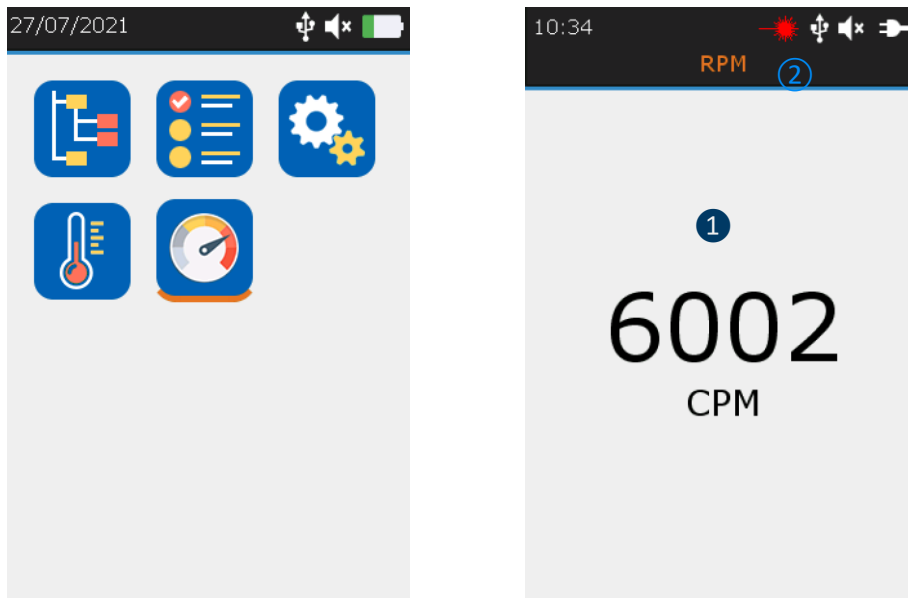

- ① Running RPM/CPM
- ② Laser Icon activated

Figure 18: Rotational speed

From the **Home** screen, select the RPM icon and press **Enter**. The running RPM screen is displayed (Figure 17). The value ① is refreshed twice per seconds (500 ms). Press the **Laser** hold-on key to activate it. The laser icon ② indicates when the laser is on.

Press **Enter** to freeze the RPM measurement and once more to record the measurement. Select the desired memory location and confirm your choice with **Enter**.


From the **Home** screen, select **Settings** then browse to **Metrical imperial** menu. Edit section **Frequency unit** according to your preference.

The following standard rotational units are available:

- -Hz
- -RPM (rotation per minute)/CPM (cycle per minute), where 1 Hz=60 RPM/CPM

19. General Settings

From the **Home** screen, select General settings icon and press **Enter**. With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**.

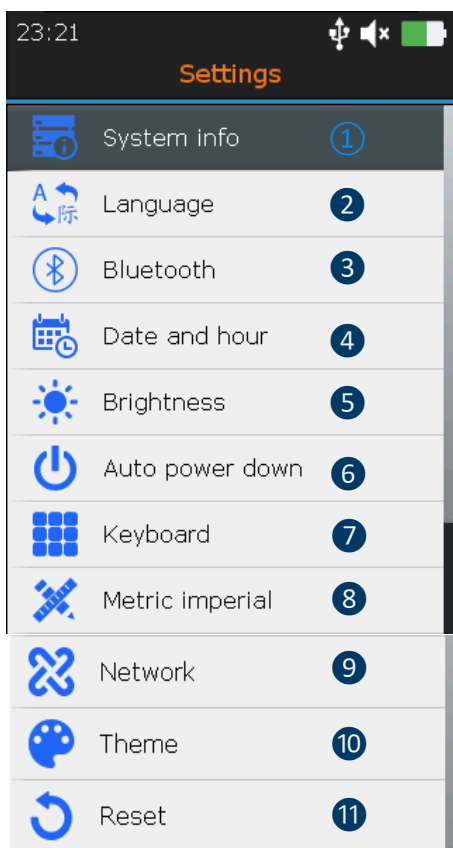


- ① System info setting
- ② Language setting
- ③ Bluetooth setting
- ④ Date and hour setting
- ⑤ Brightness setting
- ⑥ Auto power down setting
- ⑦ Keyboard setting
- ⑧ Metric imperial setting
- ⑨ Network setting
- ⑩ Theme setting
- ⑪ Reset

Figure 19: General settings

From System info screen press **Enter**.

19.1. System info

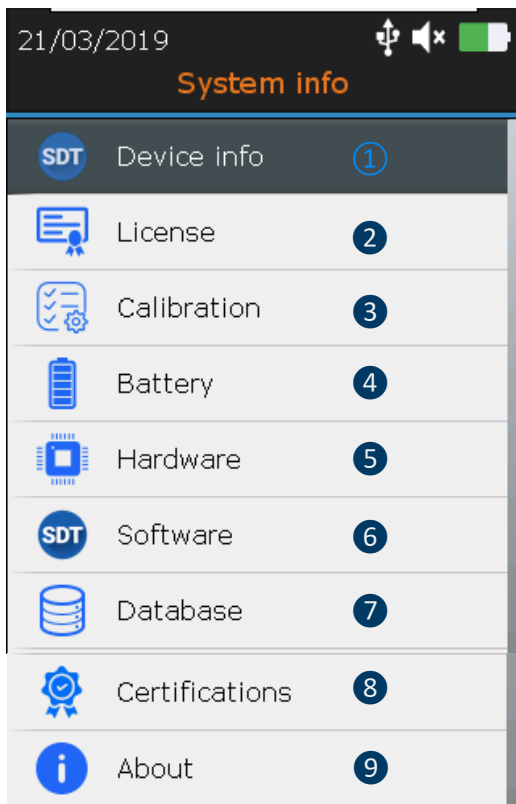

- 1 Device info
- 2 License info
- 3 Calibration info
- 4 Battery info
- 5 Hardware info
- 6 Software info
- 7 Database info
- 8 Certifications' info
- 9 Manufacturer Info

Figure 19-1: system Info

From Device info screen press **Enter**

19.1.1. Device info



- 1 Equipment number
- 2 PCB Serial ID number
- 3 PCB number
- 4 PCB issue number
- 5 Batch number
- 6 Batch manufactured month
- 7 Batch manufactured year

Figure 19-1-1: system Info

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.

19.1.2. License info




00:13   			① License level
License			② License option
Level	①	SDT340	
Option	②	-	

Figure 19-1-2: system Info

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.

19.1.3. Last calibration date




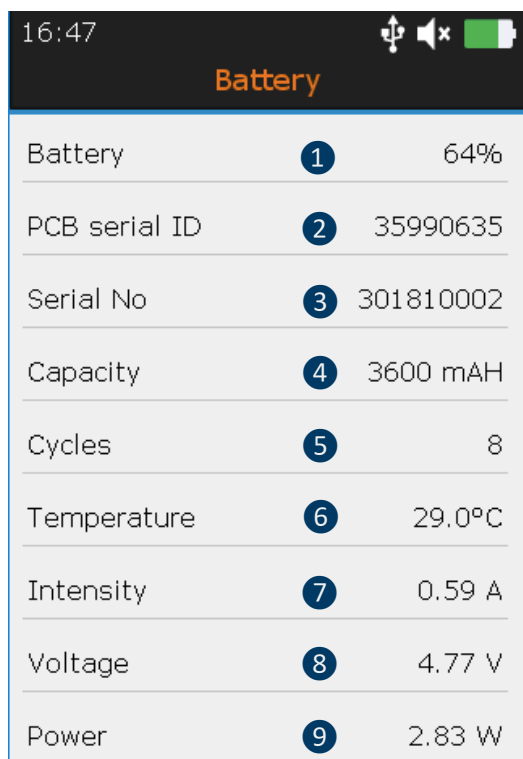
16/04/2019   			① Last calibration date
Calibration			
Date	①	16/04/2019	

Figure 19-1-3: calibration info

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.

19.1.4. Battery info




Battery		
Battery	1	64%
PCB serial ID	2	35990635
Serial No	3	301810002
Capacity	4	3600 mAH
Cycles	5	8
Temperature	6	29.0°C
Intensity	7	0.59 A
Voltage	8	4.77 V
Power	9	2.83 W

- 1 Current capacity (in %)
- 2 Battery serial ID
- 3 Battery serial number
- 4 nominal capacity (in mAH)
- 5 Number of charge/discharge cycles
- 6 Battery temperature (in °C or °F)
- 7 Charge/discharge current (in A)
- 8 Nominal voltage (in V)
- 9 Power (in W)

Figure 19-1-4: Battery info

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.

19.1.5. Hardware info

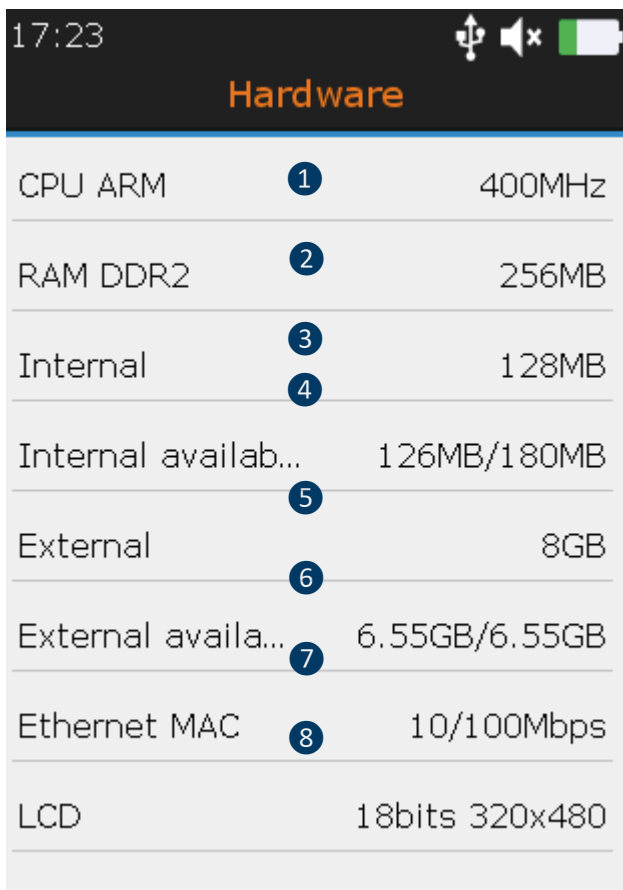

The screenshot shows the 'Hardware' menu with a list of system specifications. Each item is numbered 1 through 8, corresponding to the legend on the right. The items are: CPU ARM (400MHz), RAM DDR2 (256MB), Internal memory (128MB), Internal available memory (126MB/180MB), External memory (8GB), External available memory (6.55GB/6.55GB), Ethernet MAC (10/100Mbps), and LCD (18bits 320x480).


17:23		
Hardware		
CPU ARM	1	400MHz
RAM DDR2	2	256MB
Internal	3	128MB
Internal availab...	4	126MB/180MB
External	5	8GB
External availa...	6	6.55GB/6.55GB
Ethernet MAC	7	10/100Mbps
LCD	8	18bits 320x480

- 1 CPU frequency
- 2 RAM capacity (in MB).
- 3 Internal memory (in MB)
- 4 Internal available memory (in MB)
- 5 External memory (in GB)
- 6 External available memory (in GB)
- 7 Speed Ethernet MAC (in Mbps)
- 8 Screen resolution

Figure 19-1-5: Hardware info

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.

19.1.6. Software info

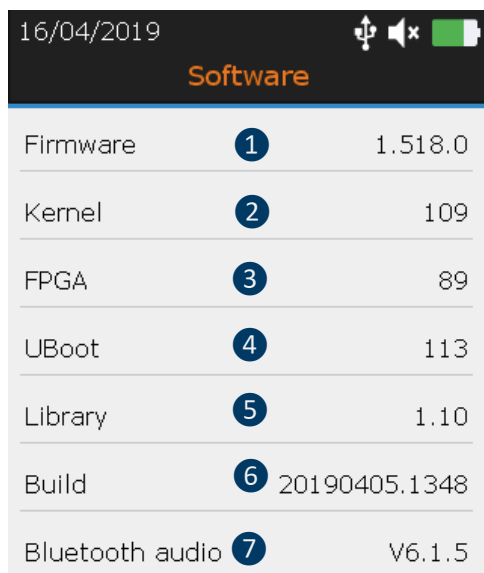

The screenshot shows the 'Software' menu with a list of version numbers for various components. Each item is numbered 1 through 7, corresponding to the legend on the right. The items are: Firmware (1.518.0), Kernel (109), FPGA (89), UBoot (113), Library (1.10), Build (20190405.1348), and Bluetooth audio (V6.1.5).


16/04/2019		
Software		
Firmware	1	1.518.0
Kernel	2	109
FPGA	3	89
UBoot	4	113
Library	5	1.10
Build	6	20190405.1348
Bluetooth audio	7	V6.1.5

- 1 Firmware version
- 2 Kernel version.
- 3 FPGA version
- 4 UBoot version
- 5 Library version
- 6 Build version
- 7 Bluetooth audio version

Figure 19-1-6: Software info

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.

19.1.7. Database

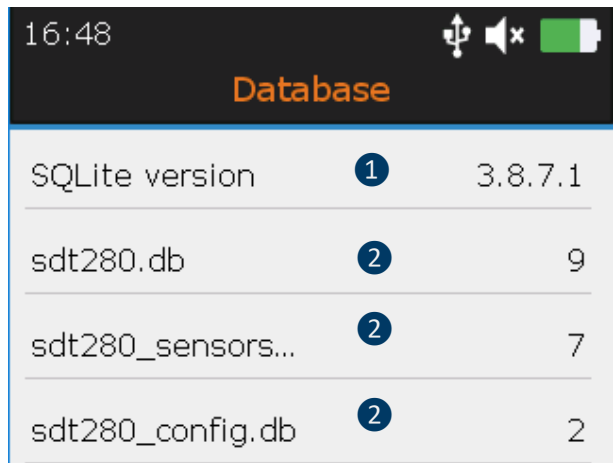

SQLite version	1	3.8.7.1
sdt280.db	2	9
sdt280_sensors...	2	7
sdt280_config.db	2	2

- 1 SQLite version
- 2 Databases

Figure 19-1-7: Database

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.

19.1.8. Certifications

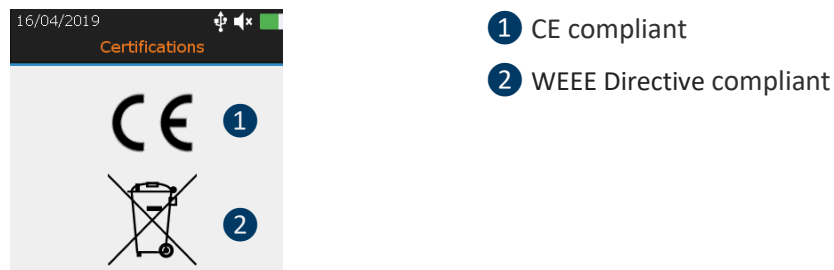


Figure 19-1-8: Certifications

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.

19.1.9. Manufacturer info

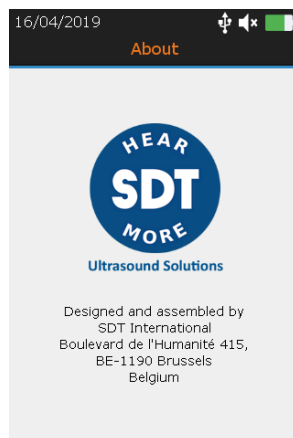


Figure 19-1-9: Manufacturer info

19.2. Language

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.


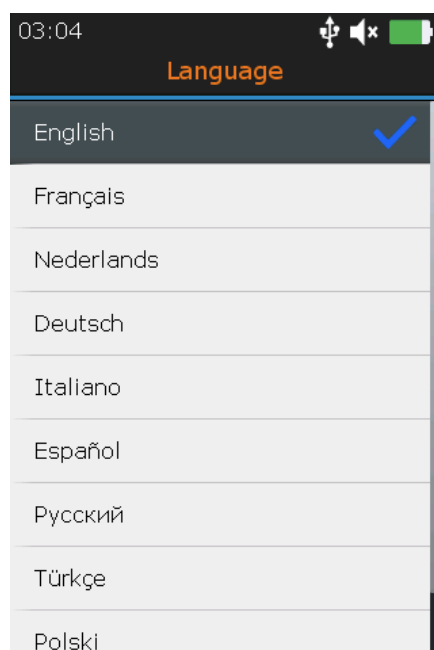


Figure 19-2: Language

19.3. Bluetooth

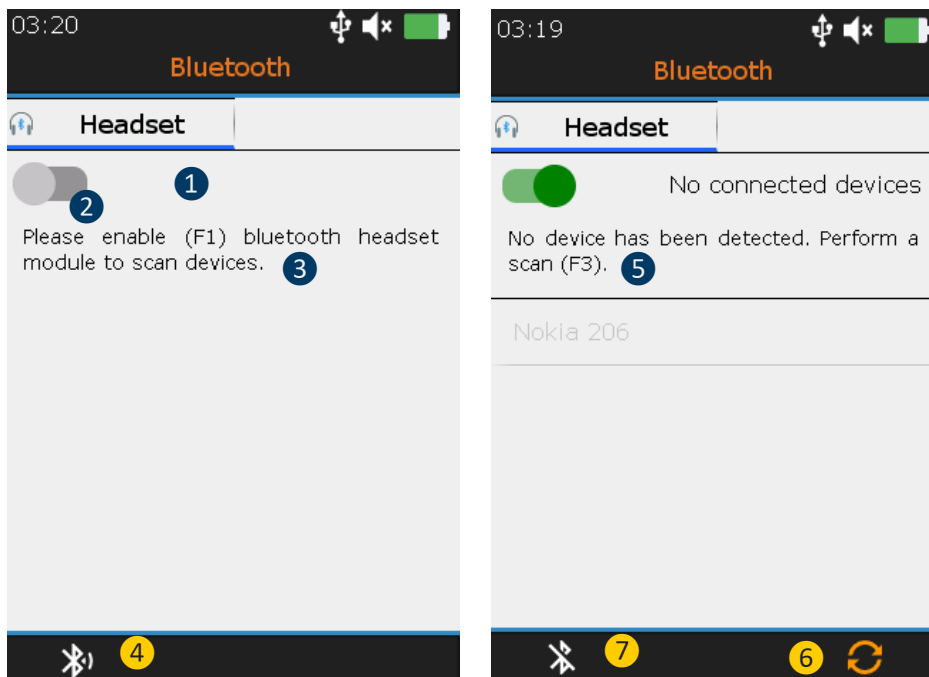


- 1 Bottom blue line indicates that headset is selected
- 2 Indicator for enable and disable Bluetooth
- 3 Instruction to enable the Bluetooth
- 4 Bluetooth off
- 5 Instruction to pair the headset
- 6 Scan
- 7 Bluetooth on

Figure 19-3: Bluetooth

Press **F1** (2) to enable the Bluetooth headset module. Switch on the headset. The headset must emit a blue flashing light. Press **F3** to pair (6) the SDT340 with the headset.

19.4. Date and time format

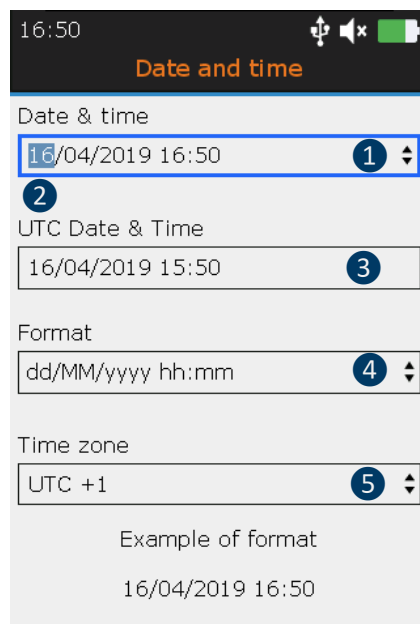


- 1 Locale date and time
- 2 Blue frame indicates the selected field
- 3 UTC date and time settings
- 4 Date and time settings format
- 5 Time zone

Figure 18-4: Date and time

With **Left** and **Right** Buttons highlight the desired field (2). With the **Up** and **Down** navigation keys increase or decrease the settings values. Confirm your choice with **Enter**.

19.5. Brightness

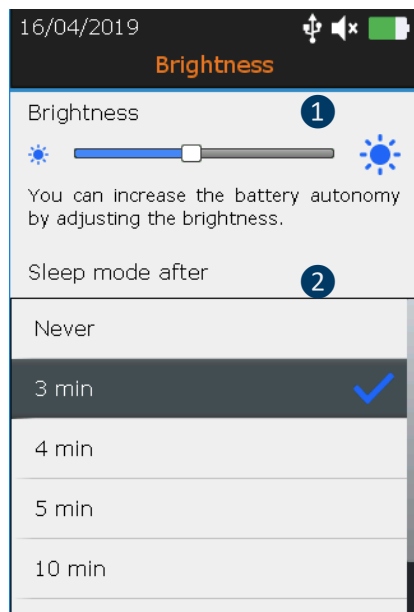

- ① Brightness adjustment
- ② Sleep mode delay

Figure 19-5: Brightness

With the **Left** and **Right** you can adjust the brightness of the screen. And with the **Up** and **Down**, you define the sleep mode delay.

19.6. Auto power down

With the **Up** and **Down** navigation keys highlight the desired settings and confirm your choice with **Enter**. Press the button **ESC** to display the previous screen.


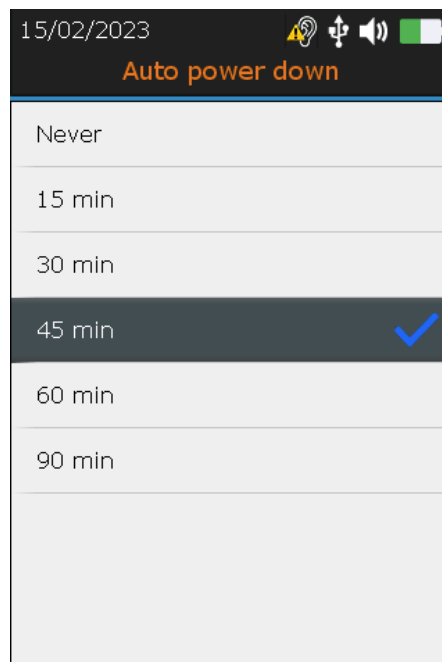


Figure 19-6: Auto power down

19.7. Metric imperial

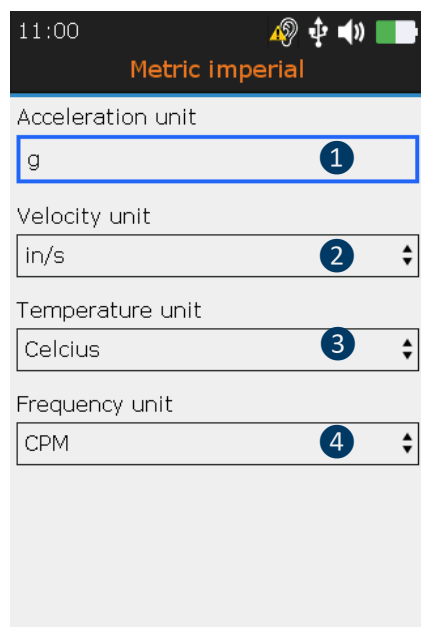

- ① Acceleration unit
- ② Velocity unit
- ③ Temperature unit
- ④ Frequency unit



Figure 19-7: Metric imperial

With **Left and Right** Buttons highlight the desired field. With the **Up** and **Down** navigation keys change the settings values. Confirm your choice with **Enter**.

19.8. Security

Listening to headphones too loud for too long can cause noise-induced hearing loss.

Due to safety standards, the maximum output level is limited by the firmware. However, in case of very noisy environments, the default attenuation level of the provided headset might not be enough for reliable diagnosis. user can voluntarily bypass the safety protection and exposed himself to potentially harmful sound levels.

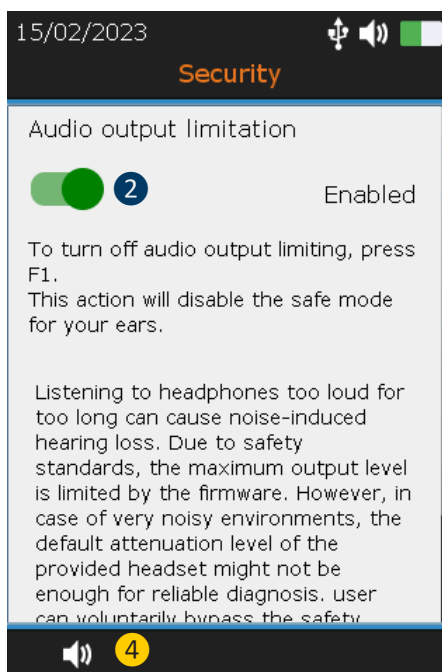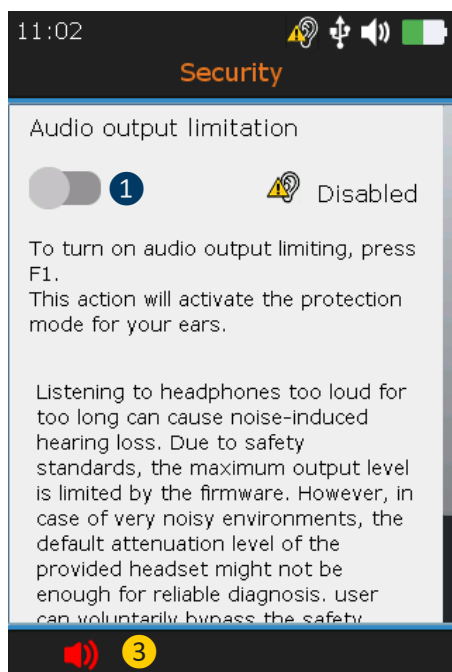

- ① Turn on audio output limitation
- ② Turn off audio output limitation
- ③ Audio output limitation is disabled
- ④ Audio output limitation is enabled

Press **F1** **1** to enable the audio output limitation.

19.9. Network

10:55

Network

IP address

192.168.210.1 **1**

Subnet mask

255.255.255.0 **2**

Gateway

0.0.0.0 **3**

- 1** IP address
- 2** Subnet mask
- 3** Gateway

Figure 19-9: Network

19.10. Theme

09/03/2020

Theme

Default **1** ✓

- 1** Choose by default

Figure 19-10: Theme

You can use this feature to change the appearance of your screen. With the **Up** and **Down** navigation keys highlight the theme you want and confirm with **Enter**.

20. Recommended calibration intervals

SDT recommends annual recalibration of SDT instruments and **annual** verification of sensors to benefit from its **limited lifetime warranty**. This periodicity is coherent with the observed long-term stability of SDT electronic equipment's.

However:

- For new equipment leaving the factory the initial period is extended to 15 months instead of 12 (to avoid any possible discrimination between users due to transportation time, customs clearance, etc.).
- SDT recognizes that each customer may have their own Quality Assurance Standards and internal requirements. If a customer has established a Quality Assurance Program that includes a documented procedure for measurement deviations, and if an instrument and the relevant sensor show acceptable deviations and do not show signs of physical damage, then calibration periodicity could be extended to two years.
- Third party organizations having more authority (Class, or State Administrations) may have defined their own regulations for example 6 months, or 2 years calibration interval: by evidence, local legally applicable regulations supersede SDT rules.

For these reasons, SDT Calibration Certificates do no more mention a “calibration due date”, but simply the “last calibration date”.

For user convenience, the date of the last calibration of an SDT200, SDT270, SDT LUBExpert and SDT340 instruments can also be found in the menu screens.

Note! Only the users of SDT200, SDT270, SDT LUBExpert, SDT Checkers range, SDT T-Sonic1, SDT T-Sonic9 and SDT340 can benefit from limited lifetime warranty.

This text refers to SDT document DC.QUAL.005¹.

21. Warranty

SDT International guarantees the SDT340 unit against manufacturing faults for unlimited period, provided that the device is calibrated annually and that other conditions to benefit from the lifetime warranty are respected. With the exception of the battery and accessories (charger, headphones) these are guaranteed for a period of 6 (six) months. The limited lifetime warranty covers all material supplied and implies the free replacement of all parts that contain a manufacturing fault.

The limited lifetime Warranty does not include shipping, handling and importation.

The limited lifetime warranty is void if misused, or accident damages the product, if the product is altered in any way, if an unauthorized party attempts repair, or the unit is opened without written authorization of SDT International.

In the event of a defect, contact your local SDT representative or SDT International.

22. Responsibility limits

¹ This document is part of SDT's quality management system (ISO-9001 certified).

Neither the company SDT International, nor any related company, will in any circumstances be liable for any damages, including, without limitation, damages for loss of business, business interruption, loss of information, defect of the SDT340 unit or its accessories, bodily harm, loss of time, financial or material loss or any other indirect or consequential loss arising out of the use, or inability to use this product, even when it has been warned of possible damages.

23. Destruction and recycling of waste equipment

In conformance with European Union (EU) Directives and in particular with Directive 2006/66/EU "Batteries" and Directive 2012/19/EU "WEEE – Waste Electrical and Electronic Equipment", SDT International is organizing the management of waste equipment. However local legal regulations have precedence.

Thus, SDT Customers may

- Either transfer a waste apparatus to a local company that will recycle it in accordance with applicable local laws
- Or return the waste apparatus to SDT International or to a SDT Dealer
- For an apparatus that contains a battery, SDT International will transfer the battery to a local company that will recycle it in accordance with EU "Batteries" Directive and Belgian laws.

SDT International will transfer the rest of the apparatus to a local company that will recycle it in accordance with EU "WEEE" Directive and Belgian laws.

24. Copyright and Use of IP

© 2023 SDT International n.v. s.a.

All rights reserved.

No one is permitted to reproduce or duplicate, in any form, the whole or part of this document without the written permission of SDT International n.v. s.a.

The information herein is believed to be accurate to the best of our knowledge.

Due to continued research and development, specifications of this product can change without prior notice.

25. Use of IP contents

The consumption and/or use of all SDT learning material, images, and other resources is voluntary and we request no payment in exchange. Our intellectual material (IP) is crafted to provide general guidance however its suitability is not guaranteed for any particular use. Using the information contained herein is done solely at the responsibility of the user.

You are free to use, duplicate, share, display, and perform our IP under the following conditions:

Attribution: You must give SDT International credit by identifying it as the copyright owner and, where appropriate and possible, adding a web link (URL) that directs people to

Non-Commercial: You may not use this work as part of a commercial product or service from which you or any other user derives profits.

No Derivative Works: You may not change, transform, dismantle, or expand upon this material.

Reuse or Distribution: The license terms of the IP must be made clear to all who receive forward copies from you.

Waiver of Conditions: Any of these conditions may be waived if you receive permission, in writing, from the copyright holder.

Living Document: Our IP is reviewed from time to time and may be altered, amended, or cancelled as deemed necessary by the owner. Your comments, criticisms, and suggestions for improvement are welcomed by sending an email to

26. Support and contact details

Addresses:

--	--

If you experience a problem with an SDT instrument, please, review information contained in this manual. You can also contact our Customer Service and helping in getting your *device* up and running by calling to this number:

SDT provides technical information on the web to assist you in using our products. Visit our web site to download technical manuals and other documents.

08	GGH 15/02/2023	Updated screens + new sections	MUN
07	CMA 28/07/2021	Major update	CGI
06	CGI 18/05/2021	Chapter 7 icon + text	CMA
05	MUN 09/03/2020	Updated Screens + remove ISO	CMA
04	CGI 06/03/2020	Modified version + 100 kHz reference	CMA
03	AKP 01/21/2019	updated Screens	MUN
02	AKP 12/20/2018	updated Screens	MUN
01	AKP 11/20/2018	Original version	CGR
Revision	Writer	Nature of modification	Approved