

XP-2000 & XP-4000 Radiometer/Photometer Quick Guide

Thank you for purchasing the AccuPRO™ or AccuPRO Plus meter. This Quick Guide is intended to get you started as soon as possible. For the complete Operator's Manual, please visit our website at:

To Start


1. Install the batteries.
2. Connect the charger to the meter and to an outlet. To turn the meter on, press and hold **MENU** for two seconds.



3. The AccuPRO automatically opens in **OPERATION** mode (see screen below) and begins to take readings. Shine the light (UV, VIS or Blue [XP-4000 only]) directly over the sensor. The meter will instantly read and display the light level for each wavelength (intensity/unit area). If using the AccuPRO Plus, press the **UP** arrow to toggle to blue light mode.

Operation Mode for Visible and UV Light Sources

4. Three buttons control all functions of the AccuPRO and AccuPRO Plus. Simply press the **DOWN** arrow to reset the stored PEAK value (highest reading recorded since the last reset) across all measured wavelengths.

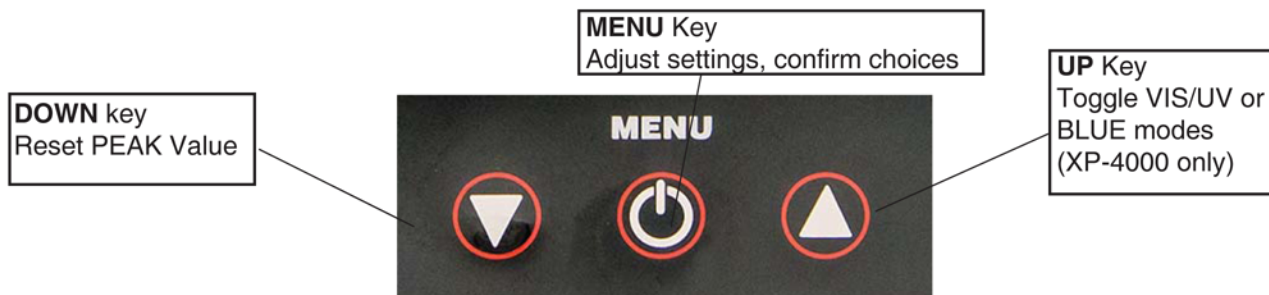

5. To change meter display settings (Unit of Measure, Contrast, Backlight or Language) press **MENU**, select the **SETTINGS** option with the arrow, using **MENU** to confirm.
6. The meter can be powered off by pressing and holding **MENU** for at least two seconds while in operation mode.