

**LEAK**Checker  
**LUBE**Checker  
**TRAP**Checker  
**TIGHT**Checker

**USER  
MANUAL**






▲ : increase  
 ☺ : correct  
 ▼ : decrease

Red: too high  
 Green: correct  
 -.-: too low

10 X ID Sensor?

### Streaming screen

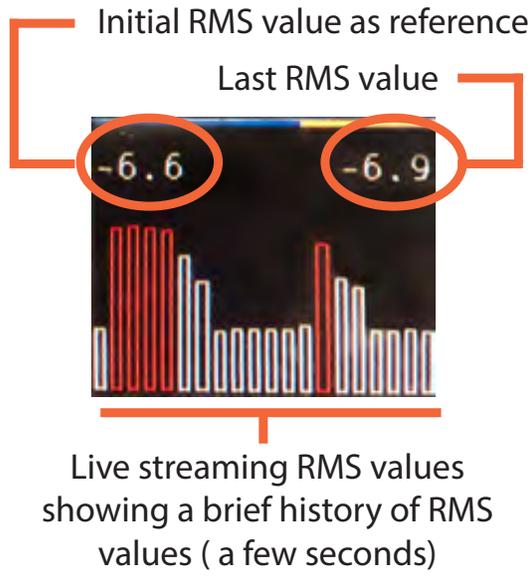

### Gain management

Red: too high  
 White: correct  
 Orange: too low

# USER MANUAL

## **Powering your equipment:**

Open up the battery compartment using the supplied screwdriver. Correctly insert two AA alkaline or rechargeable batteries. The remaining battery level is displayed in the right hand top corner ❶.

A full green battery in the right hand top corner means that the battery is fully charged. The equipment's autonomy when fully charged will be around 7 hours.

The device can be powered through its USB port ❷ with an external battery pack. **Important:** The Checker turns off automatically when the battery power is insufficient to ensure proper operation, or after 10 minutes of inactivity.

## **Connecting the sensor cable:**

If necessary, connect the cable of the sensor to the device by lining up the red dot on the plug with the red mark on the connector ❸ and then inserting the plug into the connector.

To unplug them, move-up the knurled barrel of the plug without any rotating movement. Proceed in the same way to connect and unplug the cable on the side of the flexible extension.

The '⊗ ID' and 'Sensor ?' messages ❹ indicate that no or an incompatible sensor is connected.

The "x"- "sensor" indication will only disappear when the Checker is correctly wired up and connected to the correct sensor.

## **Using the Checker:**

When pressing the on/off switch ❺, the equipment will switch on immediately.

To switch off, the on/off button needs to be pressed for approx.. 2 seconds.

To take a correct measurement, the amplification needs to be adjusted for every reading in the default screen. This is done by using the up and down arrows ❻ and following the triangular amplification guidance icons ❼ in the top left hand corner of the display.

The current amplification setting is displayed here ❼.

Once the correct amplification level is reached, the reading (measurement) will be displayed in green and a "smiley" ☺ will appear in the place where previously the triangular amplification guidance icon was shown.

When the reading (measurement) is displayed in red, the amplification is too high and will need to be reduced by pressing the "arrow down" button.

When "-.-" is displayed on the default screen or in orange in the streaming mode, the amplification is too low and will require increasing by pressing the "arrow up" button. In both cases, i.e. when the amplification is too low or too high, the amplification should be adjusted until the reading (measurement) is displayed in green and the smiley ☺ appears in the left hand top corner.

To switch between the default screen and the streaming screen press the on/off button ❺ once.

An histogram giving a brief history of the measurement is dynamically displayed. The amplification adjustment is not available anymore.

To update the firmware of your Checker, download the SDT Updater software on our website and install it using the provided usb cable.

## **Using the headphones:**

To enhance the hearing experience, the audio volume of the headset can be adjusted by pressing the left and right arrows ❸ until the sound level is comfortable.

Avoid setting the sound too low as otherwise some signals may not be heard and possible leaky spots overlooked. Connect the headphones here ❸.

The current volume setting is displayed ❸ only when a headset is connected.

# SPECIFICATIONS

General	
Function	Ultrasound measurement device
Measurement channel	1 channel via a 7 pole LEMO connector
Display	160x128 pixels Color OLED
Keyboard	5 function keys
Typical measuring range	-6 to 99.9 dB $\mu$ V (ref 0 dB = 1 $\mu$ V)
Resolution	0.1 digits
Measurement bandwidth	35 to 42 kHz
Signal amplification	+30 (built-in sensor gain) to +102 dB by step of 6 dB
Environmental	
Operating temperature range	-10 to +50 °C   14 to 122°F
Mechanical	
Housing material	ABS
Dimensions housing	158x59x38.5 mm 6.22"x2.32"x1.51"
Flexible rod length	445 mm   17.51"
Weight	164g   5.78oz
Power	
Battery	2 AA batteries
Autonomy	7 hours
Audio	
Operable with	SDT provided head set only
Maximum output	+83dB SPL with SDT headset
Headset	25dB NRR Peltor HQ headset

Ver 4 | 09/21



# Ultrasound Solutions